QUICK INSTALLATION GUIDE

R102FG

Conventions

Thank you for purchasing R102FG.

Application to 4G wireless router, this installation guide provides a Web-based configuration guide method and procedure. In this guide, Windows 10 is used as an example.

Interfaces



interface	Interface Description	Functional description
	Battery version	DC power input interface power supply
Power interface	DCIN battery-less	DC power input interface, no battery version uses 12V/2A
	version	power adapter
	WAN	1 RJ45 network port, used in gateway mode
Network port	LAN1/LAN2	2 RJ45 network ports, used to connect terminal CPE
		such as computer
Built-in antenna	2*2.4G Wi-Fi antennas	Responsible for sending and receiving electromagnetic
interface	2*3.8G wi-Fi antennas 2*4G antennas	radiation from the air
	Power button	Self-locking switch, press to turn on, pop up to shut
button		down
	RST restart button	Long press to restart the system or restart CPE
SIM card slot	Standard SIM card slot	Connect 4G wireless Internet

Specifications

Adapter voltage : input AC100V~240V, output DC12V/2A

Supply voltage : DC 12V

Working Environment

Working temperature : $-10^{\circ}C \sim +65^{\circ}C$

Storage humidity: 5%~95%RH non-condensing

Therefore, in order to ensure the normal operation of the device, the recommended working

environment of the device is as follows:

Keep away from heat and keep ventilated

Place the device in a ash-free and dry environment

In thunderstorm weather, please remove the power supply and all connections of the equipment to avoid damage by lightning.

According t the installation method(handing ears or rail clips),place the device on a flat surface

LED Lights Indicators

Interfaces	Interfaces description		description	Functional description
		Power supply Battery		Steady blue light indicates that the battery is fully charged, and flashing blue light indicates charging
じ Power	Power Indicator	version	No external battery power supply	Blue light indicates that the battery is fully charged, and blue light indicates that the battery is in a low battery state
	Batter		y-less version	Three lights always on indicate that the CPE power supply is normal
SYS	System indicator		licator	Steady on means the system network connection is normal
4G	Signal indication		lication	Steady light means the 4G signal is normal, and off means the 4G is offline or plugged in to the Internet
		Long b	right	The wireless function is enabled, and Wi-Fi is in normal working condition
Wi-Fi		Flash	ing	Data is being sent and received via WLAN
		Exting	uish	Wi-Fi is not available without wireless function

Equipment List

R102FG ×1

2.4G Wi-Fi antenna**X**2

5.8G Wi-Fi antenna×2

4G antennaX2

DC 12V Power adapter **×**1

Quick start guide ×1

Device Configuration instructions

If you need to manage and configure this device, you can connect to the 4G LTE CPE wireless or by wire. The default 4G LTE CPE address of this device is 192.168.169.1 and the sub-net mask is 255.255.255.0. These network parameters can be modified according to the actual situation, which will be explained with default values.

Log in to the background management interface

After the R102FG device is powered on, users can use their mobile phones or tablets to connect to the device's wireless Wi-Fi. The Wi-Fi name is "LTE-2.4GHz- $\times \times \times \times \times$

/LTE-5GHz- $\times \times \times \times \times \times \times$, and the Wi-Fi factory password is s7wks68q.Users can also directly connect the LAN port of the R102FG CPE device to the computer network port using a network cable.

1. Open the IE of the computer or smart-phone/tablet, type the address bar:192.168.169.1 in the address bar, and press Enter.

http://192.168.169.1

2. In the pop-up login window, enter the password : admin; then click "Login" (or enter password and press Enter directly to enter).

 < > 10	0	192.168.169.1	C	o » ₁
6	Authorizatio	n Required		
10	Please enter you	r usemame and password.		
	Username	admin		
	Password			
		LOGIN	RESET	
				_

NOTE: The initial administrator passwords are all "admin", users can change the administrator password after entering the configuration system.

3. After entering the correct password, you can enter the device's WEB configuration interface "Overview" view.

• < > 🗆	0	192,168,169,1	Ċ	0
Overview				
System				
Model	R102FG			
Firmware Version				
SN				
Local Time				
Uptime				
Network				
Loss Parties				

Set up 3G/4G Internet

This router supports the function of automatically configuring 3G/4G dialing parameters. It can be automatically configured for more than 95% of global operators' 3G/4G network dialing parameters without manual configuration by users. If you have special APN customization requirements, please follow the steps below :

Step 1: Confirm that the SIM card is valid and can be used normally;

Step 2: Confirm whether the 3G/4G dial-up settings of this router meet the requirements of local operators. The specific operation process is as follows:

Please click "APN Customization" on the homepage to expand and enter 3G/4G dialing settings. Then enter the user name, password, dial number, and APN parameters provided by the

3G/4G ISP, and click OK.

Working Mode Setting

The R102FG supports five Internet access modes:DHCP (Dynamic Host Configuration Protocol)Internet, Wired Bridge, STATIC(Static Host Configuration Protocol), PPPOE(point-to-point Protocol Over Ethernet), Wireless 2.4Gmaster, Wireless 5G master, 4G LTE. The default external network connection mode is "wireless 2.4GHz access". Users can click the "Network \rightarrow WAN" in the navigation bar to enter the extra-net connection settings, and then click the "Connection Type" drop-down button to select the Internet mode that they want.

B Network	Connection	Till of DeCR (Deterior treat Cariferration Petrovel)	
LAR VPN Firevall		Wred Bridge STATIC (Static Host Configuration Protocol) PPPDE (Poet-to-Poet Postacol Over Ethernet) Wreters 2.40Hz Client Wreters 50Hz Client	RESET
Wirelans 2.40Hz Wirelans 60Hz			
5 System			
- Logout			

Gateway Mode

Like other home routers .It's WAN port is connected to broadband, and the other three are LAN ports. The connection methods include DHCP dynamic Internet access(automatic acquisition), PPPOE dialing, and static IP Internet access three ways. Will act as a wireless (or wired) access point, bridge to your local network and connect to the Internet through a router.



(Network map settings link diagram)

3G/4G Mode

The default mode of the wireless router is "4G LTE Internet access". Insert the SIM card and use the 4G module to access the Internet. All LAN ports are available.

Wireless Relay Mode

After opening the LTE CPE, use the wireless network card to relay other Wi-Fi signals to access the Internet.



Access Point Mode

When turned on, the CPE is a wireless switch(no IP address is assigned)that can be wired in series (to any network port)to achieve a two-tier connection between wired and wireless network under other routers.

Wireless 2.4GHz Setting

In the default mode of R102FG Pro start-up, the user can click on the "Bar \rightarrow Wireless 2.4GHz" in the navigation bar to enter the wireless network settings, then click the "SSID" blank bar to change the setting WIFI name, click the "Password" blank bar can modify the WIFI password.

Device Management

Administrator rights

Click "System -> Management Rights", the password of the administrator login interface can be modified under the host language bar, and a different language can be selected by clicking the drop-down button under the language bar. The device defaults to "Simplified Chinese".

••• < 7 III	0	192.188.168.1	c	0 0 0 +
A Status	Router Password			
G Network	Changes the administrator passwo	nt fur accessing the device		
¢₂ System	Pagawort			
Administration +	Confirmation			
Restace / Flash Firmware				
Beboot >	Language			
E+ Logout	Language	English	8	
			SAVE & APPLY	RESET

Reboot

• • 7 1	0	192,158,169.1	ð.	0 1 0
A Status	System			
G Network	Reboots your device	_		
🗘 System	PERFORM REDUCT	1		
Administration				
Besture / Flash Firmware				
Rebeat.				
E Logout				

Click the system bar "System -> Restart" to restart the system or restart the device.

Firmware upgrade

Users can click the "System \rightarrow Restore/Flash Firmware" in the navigation bar to enter the flash new firmware image settings, with software upgrades, you can load the latest version of the software to the router for more functionality and more stable performance Steps as below:

(a) Save the upgrade file to local computer.

(b) Click "browse button", then select the upgrade file which you save , form the local to upgrade, select software that needs upgrading.

(c) Click "FLASH IMAGE ... ".

You can also flash the new firmware directly on the WEB configuration interface (IP address: 192.168.169.1) in the following way, click "System -> Recovery/Upgrade" to enter the system flash operation interface, and click the "Execute Reset" button to restore the system.

 ▲ Status ✓ Network ✓ System 	sh operations estore Reset to defaults: PERSONA HEALT		
Administration : P1.			
Restore / Flash Firmware -	ash new firmware image Keep settings: g Image: 高政主句 半点符工行	RLASH IMAGE	l
E+ Logout			

FCC Compliance Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment . This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 25cm between the radiator& your body.

ISEDC RSS warning

This device complies with Innovation, Science and Economic Development Canada Compliance licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet appareil est conforme à la conformité d'Innovation, Sciences et Développement économique Canada Norme (s) RSS exempte de licence. L'exploitation est soumise aux deux conditions suivantes: (1) l'appareil ne doit pas causer d'interférences, et (2) cet appareil doit accepter toute interférence, y compris les interférences qui peuvent provoquer un fonctionnement indésirable de l'appareil.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout le brouillage radiolectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISEDC Radiation Exposure Statement:

This equipment complies with ISEDC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC exposition aux radiations:

Cet équipement est conforme avec ISEDC les limites d'exposition aux rayonnements définies pour un contrôlé environnement.

Cet émetteur ne doit pas être co-localisés ou fonctionner en conjonction avec une autre antenne ou émetteur.

Cet équipement doit être installé et utilisé avec une distance minimale de 25 cm entre le radiateur dans votre corps.