

WALKIE TALKIES KIDS VOICE CHANGER 3 CHANGING UDICE I ORIGINAL UDICE

i Ci

00

0

0



te AxAAA Alkaline Batteriet INot Includer

How to operate:

 Press switch to the ON position.
Push TALK button and speak into the microphone.

so the TALK button so your friend Holos can reply!

Handy Tips

Stay within range for optimal usage. s will distort as you leave range. the Walkie Talkies too close tog sult in

sck. Always keep a m istance of 1 metre.

Low batteries will affect quality of ve

in poor weather and envir ance may be





