

Model No.: MH22163

BLUETOOTH HEADPHONE

N-LITE 203 AIRLINKS

QUICK START GUIDE

Please read this Quick Start Guide carefully and keep it for future use.

Product Overview

In-ear Earphone x 2 (left & right)

Charging Case

USB-C Charging Cable

Ear Tips x 3 pairs (medium pre-installed)

Quick Start Guide and Warranty Letter

1. Multi Function Button (MFB)

2. Charging Contact Point

3. Ear Tip

4. Microphones

5. Charging Case Power Indicator\*

6. USB-C Charging Port

7. Charging Case Indicator

\*Charging case power prompt description:

Press the button of the charging case. When the indicator light of the charging case is green, it means that the electric quantity is more than 10%. If the indicator blinks green, it indicates that the battery capacity is less than 10% and needs to be charged in time.

Power On/Off

Open the cover of the charging case, take out the earphone, and it will turn on automatically. Put the earphone into the charging case, close the cover, and the earphone will automatically shut down and charge.

Charging Case Charging

Use the USB-C charging cable delivered with the product to charge, and the charging case indicator shows the charging status. When the charging case is fully charged, the charging case indicator lights up.

Pairing

Open the cover of the charging case, take out the earphone, and it will turn on automatically. Later, you can hear "pairing" as a voice prompt. To connect to a new device, please turn on the Bluetooth of your mobile phone and search for "Monster N-Lite 203 AirLinks" to pairing the device. After successfully connecting, you will hear "connected" voice prompt.

Volume Control

Volume down: Double tap the MFB on the left earphone during music streaming.

Volume up: Double tap the MFB on the right earphone during music streaming.

Call

Answer / End a call: Single tap the MFB.

Reject the call: Press and hold the MFB for about 2 seconds.

Music

Play/Pause music: Single tap the MFB

Previous song: Press and hold the MFB on the left earphone for about 2 seconds.

Next song: Press and hold the MFB on the right earphone for about 2 seconds.

Voice Control

With the earphones connected to the phone, press the MFB key three times to activate or disable the voice assistant.

Reset

When the earphone is powered on and not connected to Bluetooth device, press the MFB button of one earphone five times to restore the factory Settings.

Indicator/Voice Prompt Guide

Mode	Description	Voice Prompt
Power On	-	"Power On"
Power Off	-	"Power Off "
Pairing	-	"Pairing"
Connected	-	"Connected"
Charging case	When charging the charging case, the indicator light on the charging case flashes, and it will stay on after being fully charged	-

Cautions

\* After removing the earphones from the charging case, without pressing any buttons, the left and right earpieces will connect automatically. When no connections found, it will enter automatic pairing mode.

\* Please place the earphones in the correct location (L/R) for normal charging.

\* Replacement of battery (on your own) is not recommended.

\* Do not expose battery (battery pack) to excessive heat such as direct sunlight or fire.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.  
FCC ID: 2AVD2-MH22163

Model No.: MH22163

N-LITE 203 AIRLINKS

快速指南

请仔细阅读快速指南并妥善保存以备将来使用。

本产品由中国平安保险公司承保

产品概述

\*入耳式耳机 x 2 (左&右)

\*充电盒

\*USB-C充电线

使用产品自带的 USB-C 充电线进行充电, 充电盒指示灯显示充电状态。当充电盒充满电时, 充电盒指示灯长亮。

\*耳帽 x 3对 (M号已安装到耳机上)

\*快速指南与保修单

1. 多功能触控键 (MFB)

2. 充电触点

3. 耳帽

4. 麦克风

5. 充电盒电量提示\*

6. USB-C充电接口

7. 充电盒指示灯

\*充电盒电量提示说明:

按一下充电盒按钮, 充电盒指示灯绿灯亮时, 表示电量大于10%; 绿灯闪烁时, 表示电量小于10%, 需要及时充电。

电源开/关

打开充电盒盖, 取出耳机, 它将自动开机。将耳机放入充电盒, 把盖合上, 耳机会自动关机及进行充电。

充电盒充电

使用产品自带的 USB-C 充电线进行充电, 充电盒指示灯显示充电状态。当充电盒充满电时, 充电盒指示灯长亮。

配对

打开充电盒盖子, 取出耳机, 它将自动开机。之后您可以听到“pairing” 的语音提示。对于新设备连接, 请打开手机蓝牙并搜索“Monster N-Lite 203 AirLinks”进行配对, 连接成功后, 你会听到“connected” 语音提示。

音量控制

调低音量: 在音乐播放状态下, 双击左耳机的触摸式多功能按键。

调高音量: 在音乐播放状态下, 双击右耳机的触摸式多功能按键。

通话

接听/结束通话: 单击触摸式多功能按键。

拒接来电: 按住触摸式多功能按键约2秒钟。

音乐

播放/暂停音乐: 单击触摸式多功能按键。

上一曲: 长按左耳机触摸式多功能按键约2秒。

下一曲: 长按右耳机触摸式多功能按键约2秒。

语音控制

在耳机与手机连接状态下, 连接3下MFB键以激活或关闭语音助手。

恢复出厂设置

在耳机开机且未连接蓝牙设备时, 连接其中一个耳机的MFB键5次, 即可恢复出厂设置。

指示灯/语音指南

模式	描述	声音提示
开机	-	"Power On"
关机	-	"Power Off "
配对	-	"Pairing"
连接	-	"Connected"
充电盒充电	充电盒充电时, 充电盒上的指示灯闪烁, 充满后长亮	-

注意

\*从充电盒中取出耳机后, 无需按任何按键, 左右耳机会自动连接和自动进入配对模式。

\*请将耳机放在正确的位置进行充电。

\*不建议未经许可私下更换电池。

\*电池[电池组或电池组合]不得暴露在照明, 烘烤或类似过热的环境中。

封面

75X95MM 105G双胶+1专1黑+风琴折