

Characteristics of product

1. Needless of external power.

With using the USB power, the external power in no need.

2. Prevention switch for using. (

The data can be read but can't be written by user. It protect the data from mistake.

3. Function of password

This function is for protecting the contents in Flex Drive from somebody else. The right password has to be written for using this product. Without the right password nobody can use this product. Please be careful not to forget the password.

4. Small, light and new design

As it is very small, light and sharp you can keep it conveniently to outside just like a necklace or ring for keys.

Driver Installation Instruction

1. Driver Installation Instruction for Windows 98

Starting up your computer and booting into windows 98.
Connect the product to USB port in computer.
Appearing "USB Flash Disk Storage Device", insert your Driver Installation CD and click "next".
Check on the "search the right Driver for equipment (recommend)" and click "next".

3) After checking on the searching location, click "searching".

Processing to the location of Driver Installation CD.

4) Appearing "USB Mass Storage Device" which helps to find Driver, click "next".

5) Appearing the message "finish to install the software", click "next".

6) Appearing find the new hardware "USB Flash Disk Security Device", click "next".

7) Check on the "searching the best suitable Driver for equipment (recommend)", click "next".

8) After checking on searching location, click "searching".

Processing to the location of Driver Installation CD.

9) Appearing the message "finish to install software", click "finish"

10) The Menu "USB Flash Disk Password Check" will show up as below.

11) Click "CANCEL" then the icon will be appeared as "portable disk" My computer.

2. Driver Installation Instruction for Windows ME/2000/XP

The message "USB Flash Disk Security Device" will appear when the Flex Drive is connected to USB port, then click "CANCEL". It will be recognized automatically.

3. Driver Installation Instruction for Mac OS

If it is connected to over Mac OS 9.0, it will be recognized automatically, but the password can't be used.

(If you used the password in IBM computer, please dissolve the password in IBM computer to recognize)

4. Installation Instruction for Password Function

Insert your Installation Driver CD after finding the message "USB Flash Disk Security Device".


If you want more detail Installation Instruction, please visit "www.sarotech.com" then you can download the file "Driver Download --> flexdrive.pdf".

Cautions for using the product

1. When the red LED is turning on in using Flex Drive, do not remove it for protect data.

- 2. If you forget the password the storage data can't be recovered. Please remember the password.
- If you remove the check on "Auto Pop-up" in Menu, the Menu won't appear on screen. Then you can not use password function.

If you want to use password function, carry out the file "Security.exe" of your Driver Installation CD. The menu will appear on screen again.

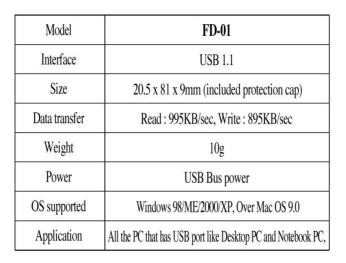



4

INFORMATION TO THE USER

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operations.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- -. Reorient or relocate the receiving antenna.
- -. Increase the separation between the equipment and receiver.
- -. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -. Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.