


ANT2 is not used or connected

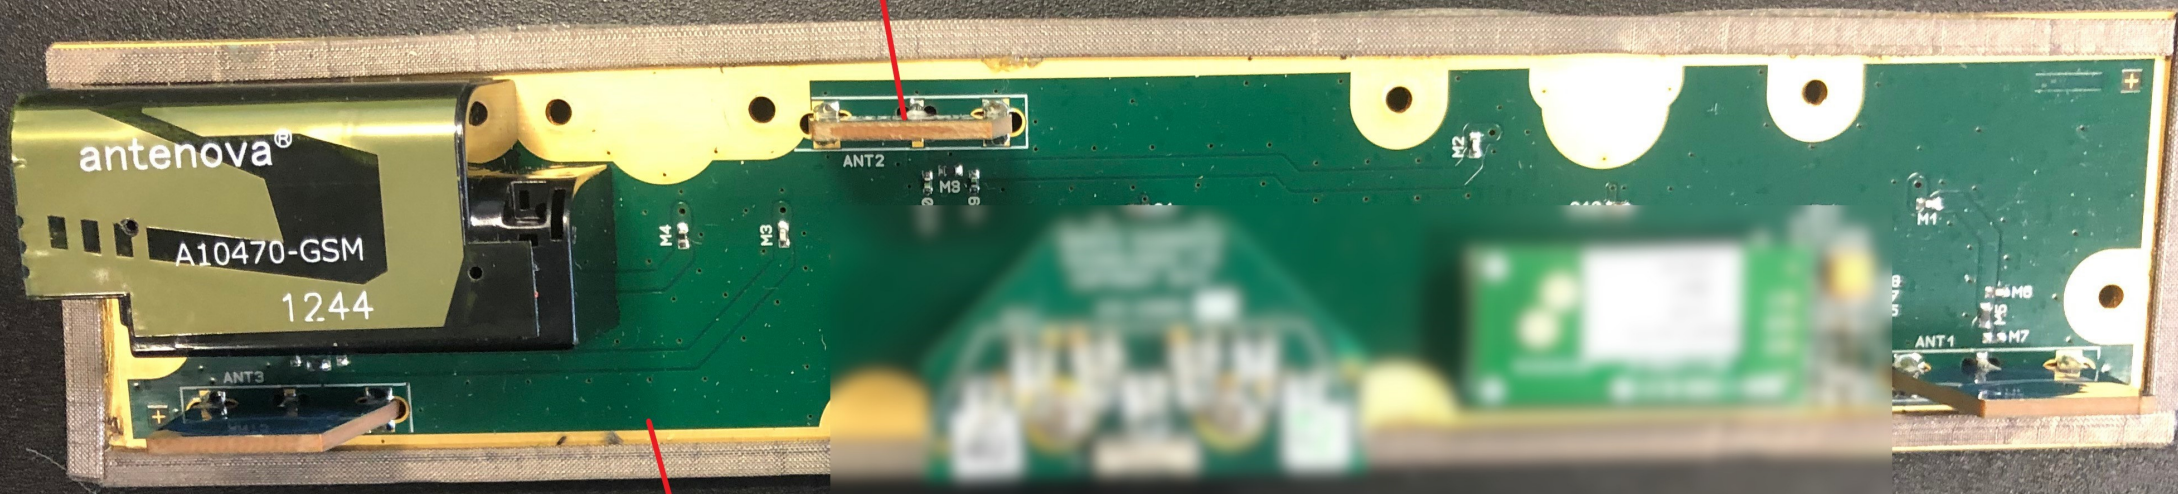

Antenna PCB