

Content

Get Started 1

Knowing Your Phone 1

Removing the back cover 3

Inserting the RUIM and SIM Card 3

Inserting SD card 4

Installing the battery 5

Removing the battery..... 6

Charging the battery 6

Battery Performance 7

Basic operations 8

Turning on and off the phone 8

Main Screen 8

Making a call 13

Main Function 14

Chrome..... 14

Play Store 14

Optimized battery Life 15

Optimize Data Usage 16

Optimize Memory Usage..... 19

Calculator 20

Calendar 20

Camera 20

Camcorder 22

Clock 23

Email 24

FM Radio 25

Gallery 25

Gmail 25

Google Applications 26

Google Settings 26

Google + 26

Hangouts27

Google Maps27

News & Weather 28

Messaging 28

Music..... 29

Contacts 30

Search..... 30

Settings..... 31

Videos37

Voice Dialer37

Safety and Use.....37

Disclaimer..... 43

FCC Statement..... 44

SAR Statement 45

Get Started

Knowing Your Phone



	Name	Function
1	Power Key	Long press To turn on / off the phone from, and short press to turn on / off the screen backlight or screen lock the phone
2	Ear Piece	Receive the voice

3	Sensors	1. Ambiance sensor, for detecting the light or surrounding brightness 2. Proximity sensor, used to measure distance between the phone and turn off the display during a call
4	Front Camera	Capturing images using front camera
5	Microphone	Voice receiver
6	Menu Key	To enter the option menu
7	Home Key	Short Press to return to home screen and long press to show the list off previous application opened
8	Return Key	Return to the previous menu or screen
9	The volume keys	Increase volume level or Decrease volume level
10	Headset Port	To connect your <i>3.5" handsfree or audio port</i>
11	Micro-USB Port	To connect the charger or data cable
12	Flash Light	Brighten the environment when you capture images.
13	Rear Camera	Capturing images using rear camera
14	Loud Speaker	Produces the sound, phone ringtone, notification and loud the conversation sound

Removing the back cover

You must remove the back cover to install RUIM card, SIM card and SD card. Hold the upper half of the phone with battery cover upwards, and lift the bottom of the battery cover, then the battery cover can be removed.



- Please turn the phone off before open the battery to prevent damage
- Please be careful when opening the back cover, follow it accordingly to prevent damage

 
Inserting the RUIM and SIM Card

You must insert Smartfren RUIM card is on the phone to enjoy and enable all the features. Your card contains all your subscription information.

Insert RUIM and SIM card with the metal contacts facing down


and the cut corner is aligned with the cutting on the slot.

- If Smartfren RUIM card is not installed, or there are errors in the insertion, or the card is damaged , “No service” will appear on the screen after your phone is powered on
- If the PIN is enabled you need input the PIN number to unlock it before you can start using the phone
- The GSM function will not work if the Smartfren RUIM card is not present

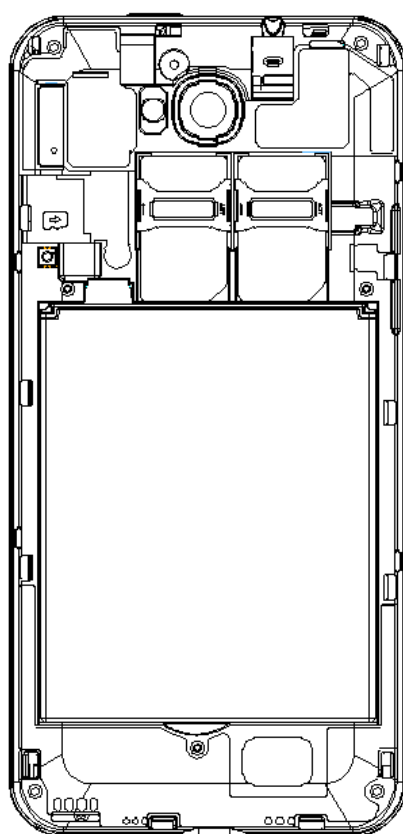

Inserting SD card

 Insert Micro SD card with the metal contacts facing down and the cut corner aligned with that of the slot

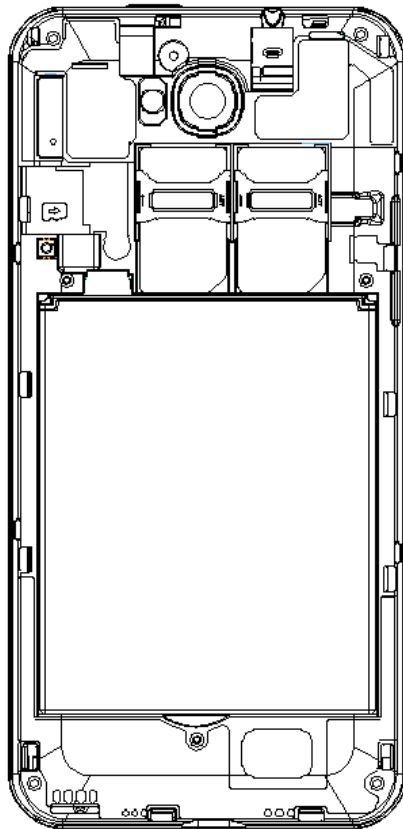

- ❗ Please insert or remove the Micro SD card when the phone is powered off, or the Micro SD-Card or the phone might get damaged and the data on the Micro SD-Card could be lost.
- ❗ You might need to restart your phone after setting the storage to Micro SD-Card or when inserting an Micro SD-Card.

Installing the battery

You must install and charge the battery to use your phone. Insert the ridge at the top of the battery into the base of the phone, make sure to touch the metal contact on the phone, then push the battery down and snap it into place.

- ❗ Do not forces to turn the phone back on over and over if the battery is too low, it might cause damage to the phone and the battery.
- ❗ Please turn the phone off before open the battery to prevent damage.

 
Note:

Your phone is designed to be used only with the original

batteries and chargers. The use of other batteries or chargers is not recommended it may cause damage to your phone and the warranty will be void.

Removing the battery

Make sure your phone is powered off before taking out the battery to prevent data loss from the phone.

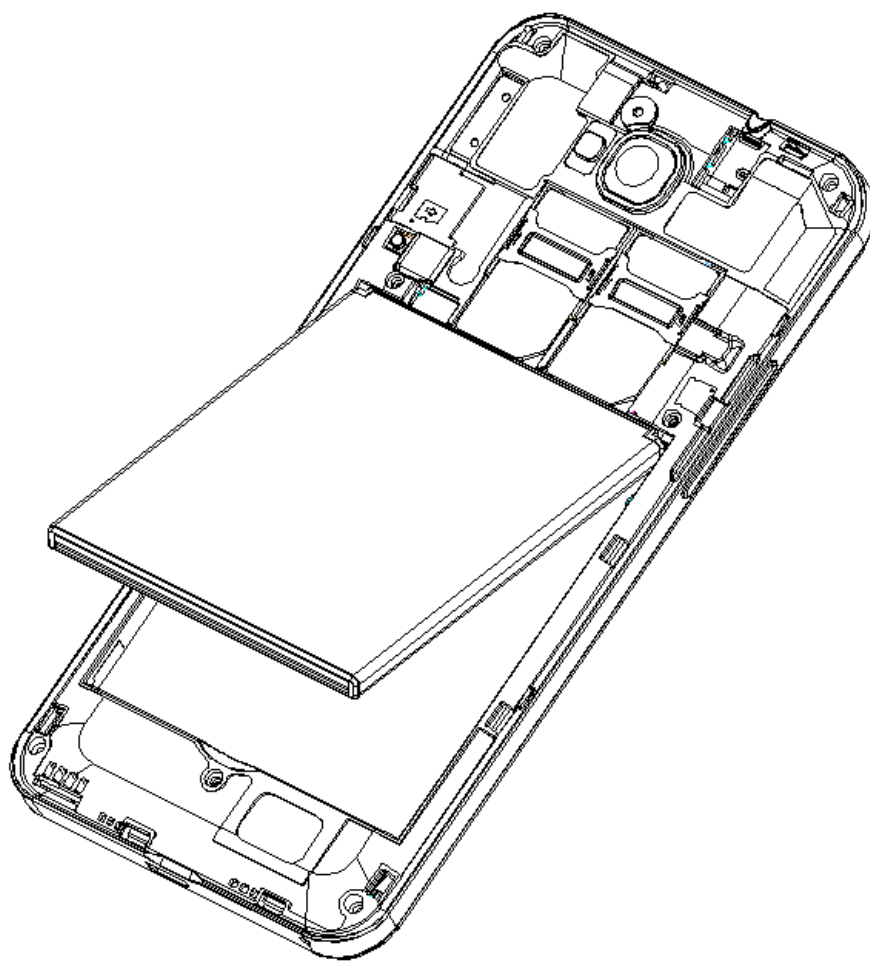



Charging the battery

New batteries are shipped partially charged. Before you can use your phone, you need to charge the battery. Some batteries will have best performance after several full charge / discharge cycles, follow the instruction bellow:

Touch **Settings** → **Security** → **Screen lock** ,There are five (5) options for the screen lock function, which consist of:

  
1. Slide: Touch **Slide**. You can unlock the screen by slide the key.
2. Face Unlock: Touch **Face Unlock**. You can use your face as a lock screen after you set it up. Then you can choose Pattern or PIN to unlock screen if your face cannot be recognized.
3. Pattern: Touch **Pattern**. You can use the pattern as you desired to unlock the screen, after you set it up.
4. PIN: Touch **PIN**. You can use the PIN as you desired to unlock the screen, after you set it up.
5. Password: Touch **Password**. You can use the Password as you desired to unlock the screen, after you set it up.

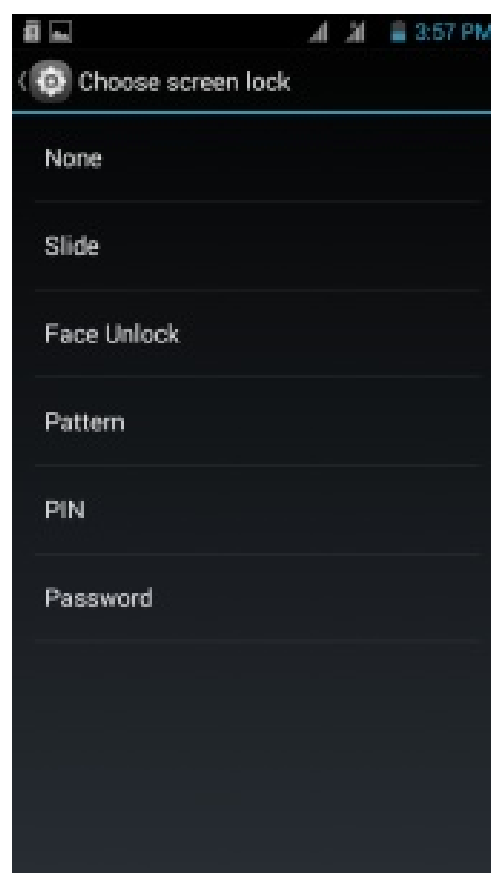

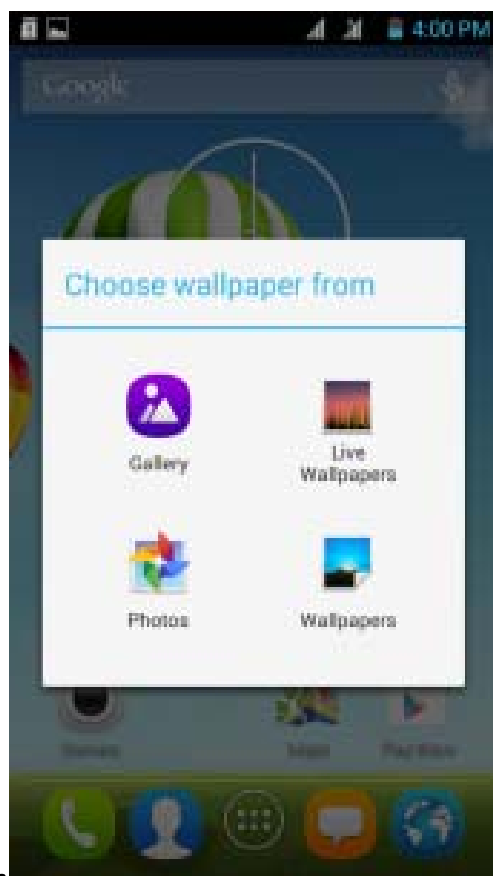

Notification panel

 You can open notifications such as unread messages or missed calls directly from the notification panel.

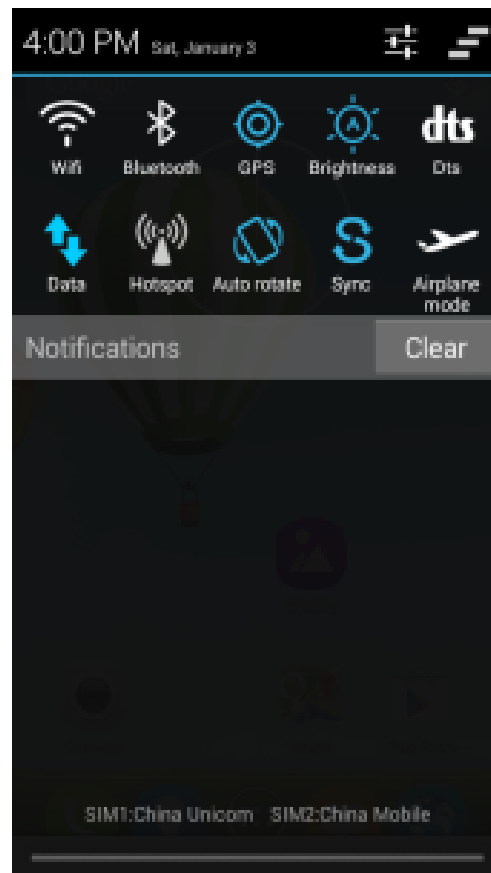

To open the panel, hold the status bar with your finger, and drag it downward.

Making a call

Touch  to enter dialer interface on idle screen or main menu screen, input phone number and click  to make a call, If you make a mistake, you can click  to delete the number or hold it to delete all numbers before the cursor.

You can make a call using WWCDMA or GSM network as you desired.

- Touch  to make a call using WWCDMA network.
- Touch  to make a call using GSM network.

During a call, you can do the following:

1. Touch  to open the dial pad.

