

COLOMBIANA DE COMERCIO S.A

Kalley

Smartphone
ELEMENT PRO
User Guide

Contents

2 CAUTIONS ON MOBILE PHONE USE	4
2.1 INTERFERENCE	4
2.2 REASONABLE USE	4
2.3 QUALIFIED MAINTENANCE SERVICE	4
2.4 WATER-RESISTANCE	4
2.5 EMERGENCY CALLS	4
3 PRECAUTIONS FOR USE OF BATTERY	4
4 CAUTIONS FOR CHILDREN	4
II. KEYS AND PARTS	5
III. START TO USE	5
1 INSERT SIM CARD	5
2 INSERT MEMORY CARD	5
3 CHARGE THE BATTERY	6
IV. BASIC FUNCTIONS	6

1 LOCK AND UNLOCK THE SCREEN	6
2 MAKE IT YOURS	7
4 MAKE A CALL	14
5 CALL LOG	16
6 ANSWERING PHONE CALLS AND REJECTION	16
7. ADD A CONTACT	17
8. SEND AND RECEIVE MESSAGE(S)	18
9. BROWSER THE WEB	20
10. ENJOY MUSIC	21
11. DOWNLOAD APPLICATIONS FROM PLAY STORE	22
12. MANAGE APPLICATIONS	22
13. APPLICATIONS & UTILITIES	23
14.SETTINGS	24
15.WARNINGS:	28

2 Cautions on mobile phone use

2.1 Interference

All phones may be interfered, which affect phone calls.

2.2 Reasonable use

Use only in the normal position. Do not touch the antenna area unnecessarily.

2.3 Qualified maintenance service

Only qualified personnel may install or repair this product.

2.4 Water-resistance

Your device is not water resistant. Keep it dry.

2.5 Emergency calls

Ensure the phone is switched on and in service. Enter the emergency number and press the Dial icon.

3 Precautions for use of battery

3.1 Do not dispose of batteries near or in a fire to avoid dangers.

3.2 Do not dispose of batteries in the garbage. Dispose of batteries to assigned battery recycling center.

4 Cautions for children

Keep your device out the reach of children in case of accidental injury caused by incorrect use of the device as toys.

II. Keys and parts

- **1. Light sensor / rang sensor**
- **2. Front Camera**
- **3. Receiver**
- **4. Audio jack**
- **5. Adjust volume key**

Short press on the Power key shall lock the screen and a long press on the Power key shall switch on/off the device.

- **6. Power key**
- **7. LCD**
- **8 Rear Camera**
- **9. Flashlight**
- **10. Fingerprint**
- **11. MIC**
- **12. USB connector**
- **13. Speaker**

III. Start to use

1 Insert SIM card

The phone is a Dual SIM mobile phone allowing you to use the facility of two networks.

To insert SIM card(s):

Insert the SIM card correctly in the card slot(s) (See figure below), suggest switch off the phone when you insert SIM card.

2 Insert Memory card

Insert the Micro SD card into the slot with the correct direction (See figure below), suggest switch off the phone when you insert SIM card.

Note: Use only compatible memory cards with this device. Incompatible memory cards may

damage the card or the device and corrupt the data stored in the card.

3 Charge the battery

During charging, the battery indicator on the phone is a thunder icon. If the device is switched off during charging, there will still be a charging indication on the screen that shows the phone is being charged. If the device is overused when the battery is low, the charging icon might take some time to appear.

When the battery indicator on the screen says 'Battery is full', thunder icon will disappear, which means the completion of charging. If the phone is switched off during charging, the screen will display ' Battery is full '. It generally takes 4 hours to charge the battery. During charging, the battery, the device and the charger will get hot. This is normal.

Unplug the charger from the AC electrical outlet and disconnect the wiring between the phone and the charger after charging. .

Cautions: Charge the phone in a well ventilated place in which the temperature is between -10°C to +55°C. Use the charger provided by the manufacturer only. The use of unconfirmed charger may lead to dangers and violate the manufacturer's warranty clause. If the temperature is too high or too low during charging, the device will automatically send a warning and stop charging to avoid damage to the battery or any danger.

IV. Basic functions

1 Lock and unlock the screen

Press power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up and then drag to up direction for unlock




2 Make it yours

1. Home screen: It is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other features. Long press home screen and Modify Wallpaper



2. Long press the screen, and then you can Modify Wallpaper; or enter Launcher and long press and hold an application till the screen vibrates, and then release your finger hold.

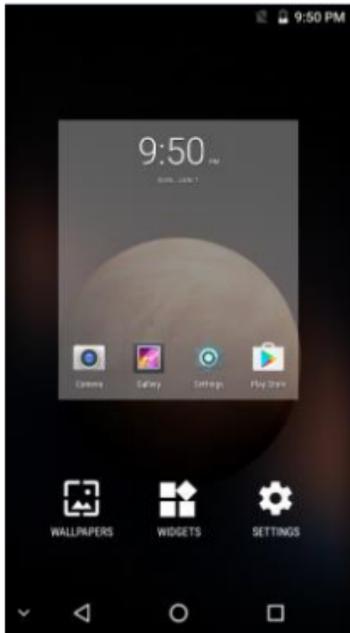


Long press and hold the widget or icon you want to move. Once the phone vibrates, don't release your hold on the icon. Drag the widget or icon to a new

location on the screen Press and hold on an icon till the phone vibrates, and drag the widgets or icon to the trash to remove!




At idle screen touch  enter launcher.

The Launcher holds icons for all of the applications on your phone, including any application that you downloaded from Android Market or other sources


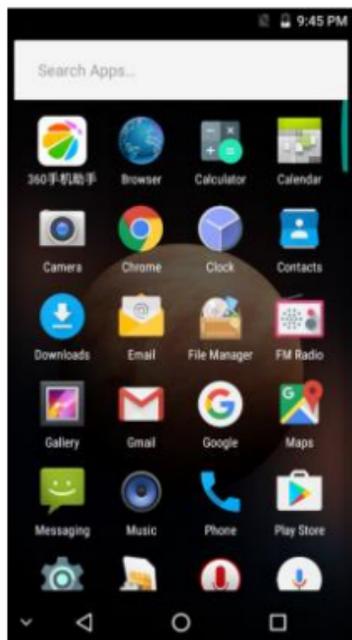


3. Notification Bar: At the top of the screen, the Status Bar displays the time, status, and notifications. If there is a new message, missed call or something in


the notification bar, you can drag it down to open notification panel and click the desired one to have a view. When you finished, you can close it by dragging the panel up or pressing “Back”

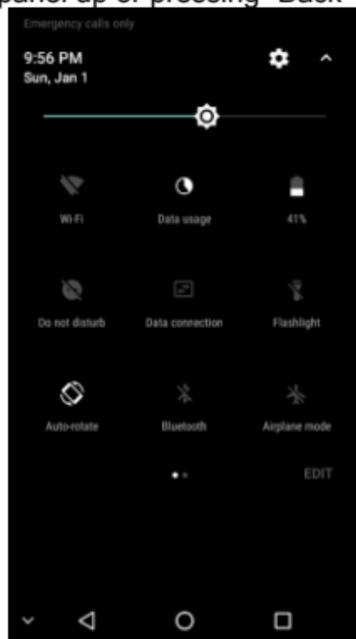

4. If you connect your phone to PC via USB, you can find the USB options, choose Media device (MTP) option you can see your phone memory in PC, this is same function like USB storage,

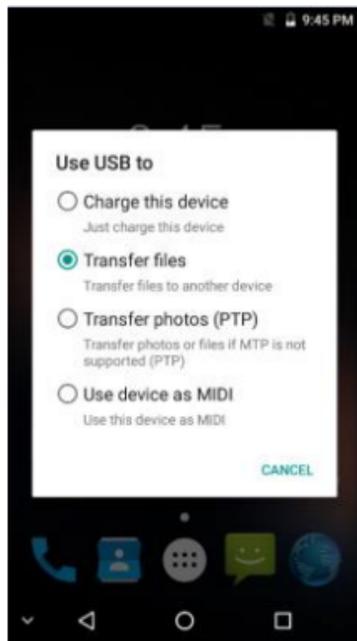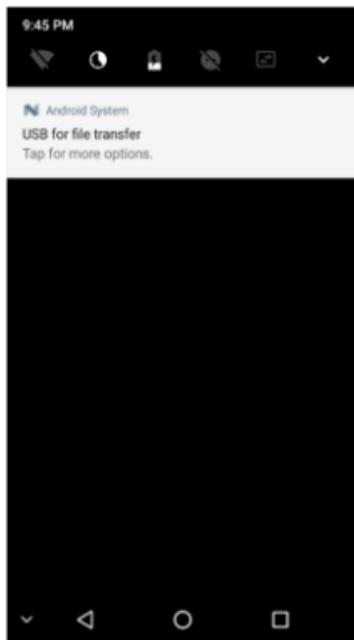

3 Switch to Recently Used Application
Press home key.

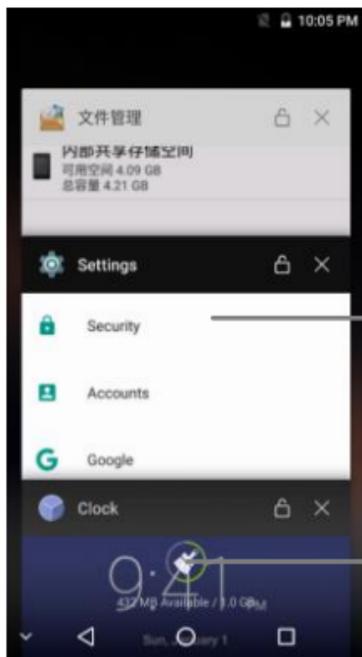


Touch and slide this place can choose to open the history application

Touch this icon to close all history application

4 Make a call




Click and enter a complete phone number to make a call. Your phone supports smartsearch.

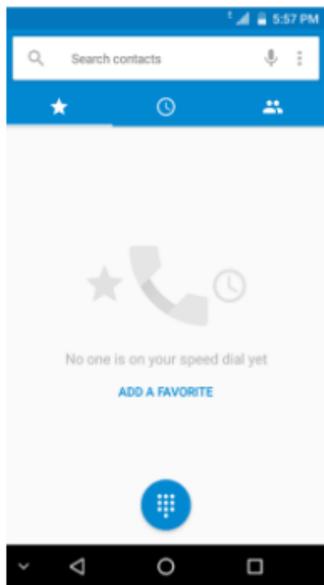

Swipe to right to view Favorite, Call history and Contacts.

5 Call log


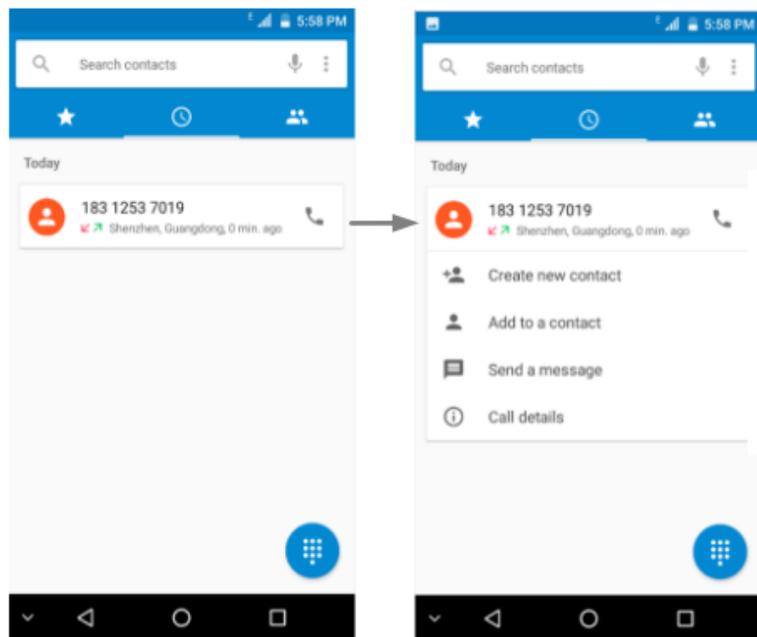


Press the number which you want see the details or call back, there is option for this.

press the number, you can call back, view contact details etc.

6 Answering phone calls and rejection

Although there is a call, you can choose to answer or hang up directly.

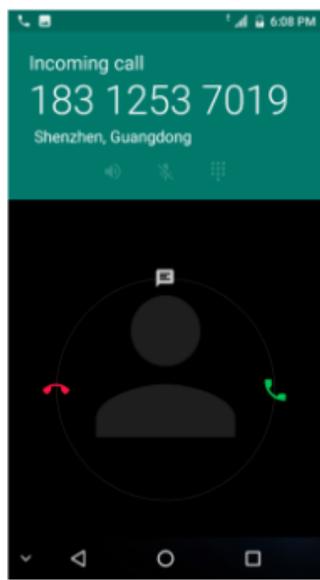
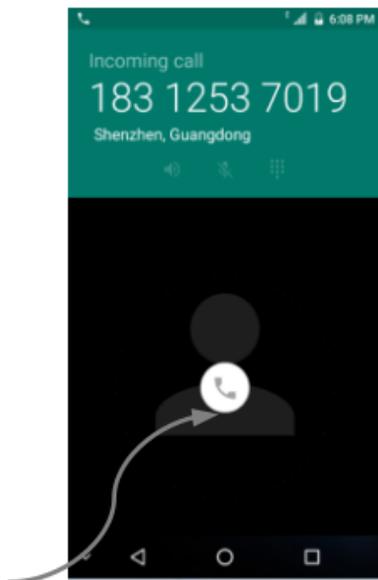


Drag the icon, select the icon to select the answer or hang up.

7. Add a contact

Touch  to enter contact

Touch  to add new contact

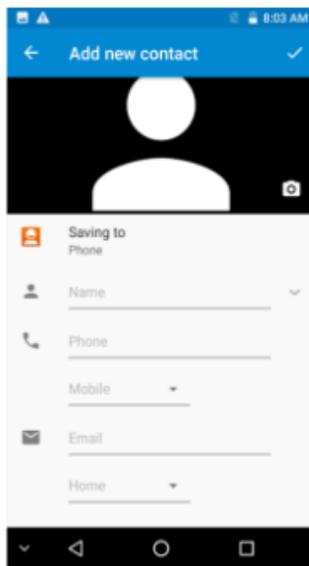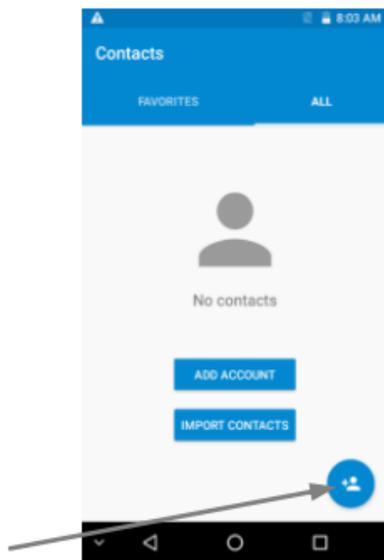


Click here to add new contact and in this page press menu key to enter menu view, setting, etc.

8. Send and Receive message(s)



Touch  enter messaging, touch compose new message.

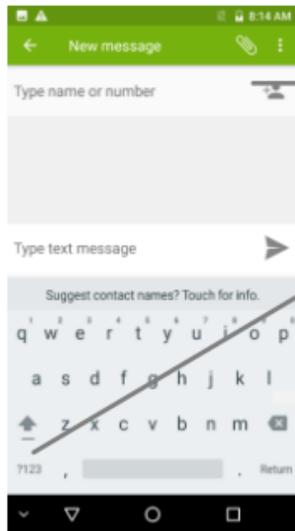

Tap this icon to select desired contact from phone book.


Touch to switch the digital input and symbols

Press space or a punctuation mark to enter the highlighted suggestion

When you are composing a new text message, you can select text for cutting or copying. The selected text is highlighted in green.

Tap  to add "Attach" including Pictures, Videos, Audios, etc to send MMS.

Touch to switch the digital input and symbols

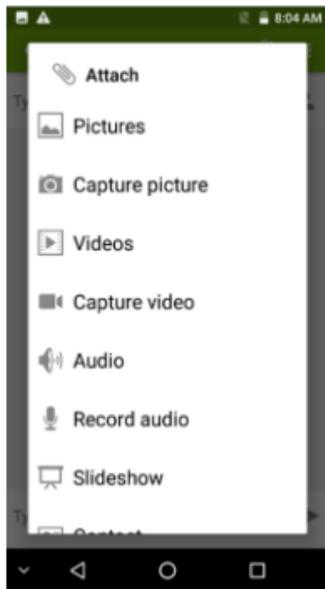

When a new message comes, you can read by dragging notification panel and click the message, or entering Message to read it directly.

Long press one of the all message threads, you can delete thread".

9. Browser the Web

1. Set up Internet/Data connection

Enter Settings > More..., scroll down to find out Mobile network, and then enter "Access Points Names, choose the desired WAP account.

2. Switch on Data connection or Wi-Fi

To browse the web, you need to switch on Data connection. If there is Wi-Fi around, you can switch on Wi-Fi to use it browse the web.

10. Enjoy music


When you copy music to your SD card, the Music player searches the card for music files and builds a catalog of your music, based on information about each file itself.



Touch a tab to view your library in one of four ways

11. Download applications from Play Store


1. Add Google account
2. Enter play store and download apps

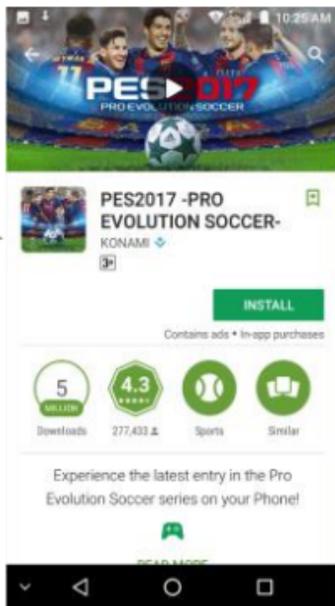

12. Manage Applications

Enter Setting > Apps.

You can see app info.

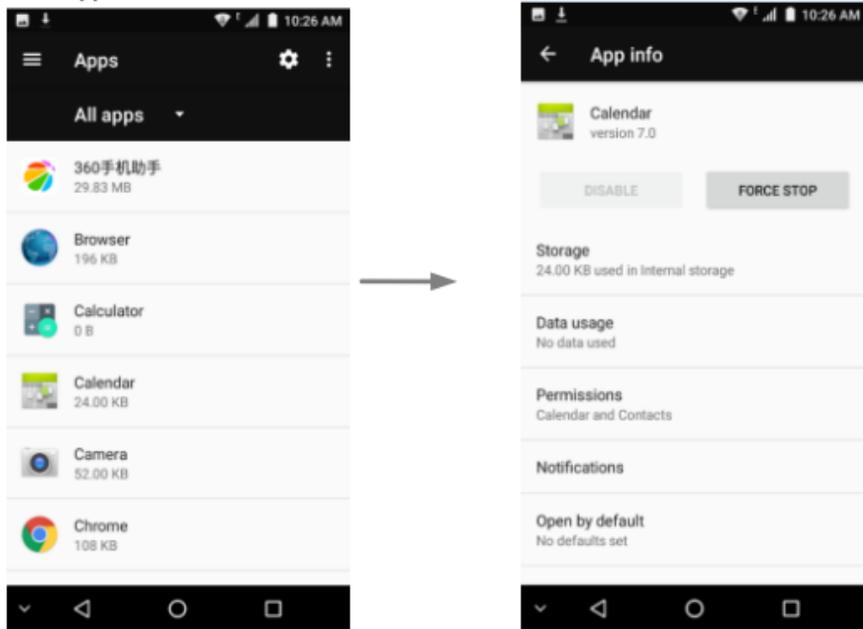

13. APPLICATIONS & UTILITIES


For your entertainment purpose, your device is provided with several interesting games, applications and utilities, such as Gmail, Email, Play store. Please ensure that you have GPRS setting in your device to access the applications. Contact your operator for GPRS settings.

Tips: *With connection to Wi-Fi network, this application can run normally, too.*

14.Settings


14.1Wi-Fi

Open Wi-Fi, search nearby Wi-Fi and connect it, then you can use internet or download apps for free.

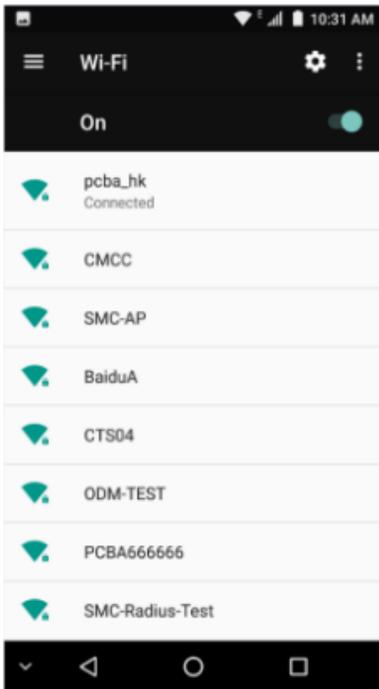

14.2 Bluetooth


Open Bluetooth, connect to other phone, you can share something like music, photos, movies etc to other people

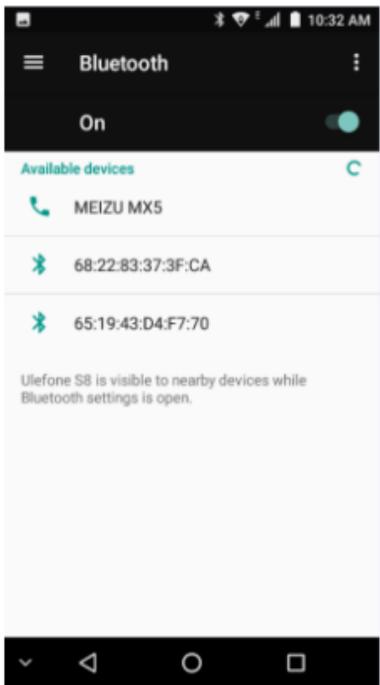

14.3 Security

Screen lock

There are four screen lock you can choose Slide, Pattern, PIN, Password.

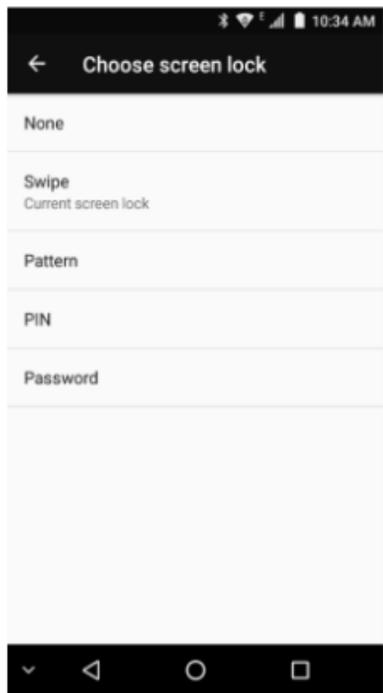

15.Warnings:

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S.

Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified

power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is **0.267W/Kg** and when worn on the body, as described in this user guide, is **0.509W/Kg**(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is **1.296W/Kg**. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RFexposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: **2AEP1ELEMENPRO** Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a sub-stantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10 mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.