



MB 110 WN

WHITE NOISE Secure Headset

Quick Guide
Kort vejledning
Kurzanleitung
Instrucciones resumidas
Guide rapide
Istruzioni brevi
Beknopte gebruiksaanwijzing
Krótka instrukcja obsługi

SENNHEISER

Package contents | Leveringsomfang | Lieferumfang | Contenido del embalaje | Contenu |
Dotazione | Inhoud verpakking | Zakres dostawy

Package contents



System requirements



WHITE NOISE
Application



WHITE NOISE
Quick Guide

Charging the headset battery | Opladning af genopladeligt batteri | Akku laden |
Cargar la pila recargable | Charger la batterie de l'oreillette | Caricamento della batteria |
Accu laden | Ładowanie akumulatora

LED flashes	Meaning
1x 🔴 ...	< 20% battery left
1x 🔵 ...	> 20% battery left
2x 🔵 ...	> 40% battery left
3x 🔵 ...	> 60% battery left
4x 🔵 ...	> 80% battery left
LED on	100 %

If the headset is fully charged the LED lights up blue.
After 5 minutes, the LED goes off.
Press the multi-function button to check the battery charge level.

*not included

Fast charging | Hurtigoplading | Schnellladung | Carga rápida |
Chargement rapide | Caricamento veloce |
Snelladen | Szybkie ładowanie



Complete charging cycle |
Fuld opladningsproces | Kompletter
Ladevorgang | Proceso de carga completo |
Cycle de charge complet | Processo di carica
completo | Complete opladcyclus |
Kompletna operacja ładowania




Verifying remaining battery life | Kontrol af
tilbageværende batteritid | Verbleibende
Akkulaufzeit abfragen | Consultar la autonomía
restante de las pilas recargables | Vérifier la
capacité restante de la batterie | Verifica della
durata residua della batteria | De resterende
gebruiksduur van de accu opvragen |
Sprawdzanie pozostałej żywotności baterii


“More than 80 percent battery left” 4x 🔵
“More than 60 percent battery left” 3x 🔵
“More than 40 percent battery left” 2x 🔵
“More than 20 percent battery left” 1x 🔵
“Less than 20 percent battery left” 1x 🔴
Less than 10 percent,
automatic voice prompts: “Recharge headset”

Adjusting and wearing the headset | Tilpasning og brug af hovedsættet | Headset anpassen und
tragen | Ajustar y llevar el headset | Ajuster et porter l'oreillette | Indossare e adattare l'headset |
De headset aanpassen en dragen | Dostosowanie oraz noszenie zestawu słuchawkowego


Ear hook wearing style

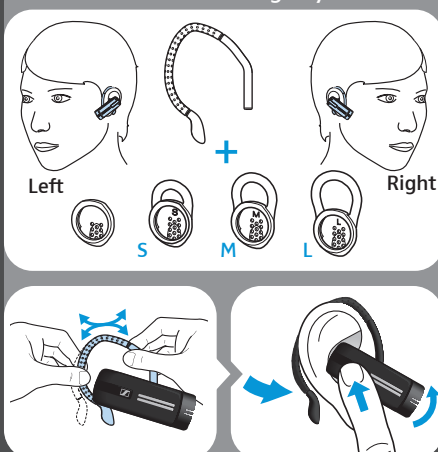

In-ear wearing style

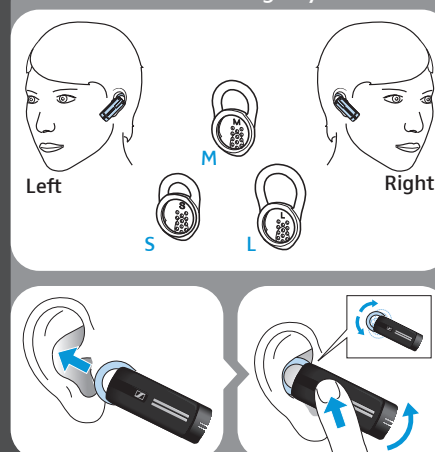

Changing ear hook and ear adapter

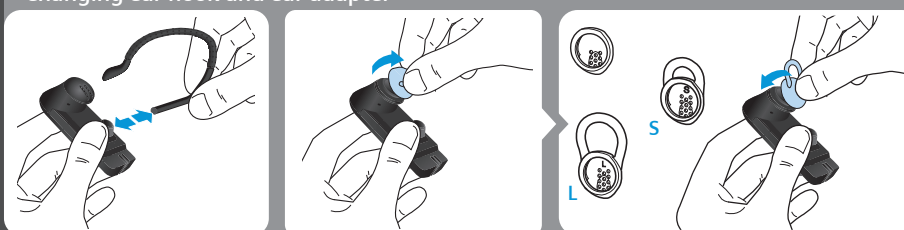

Switching the headset on/off | Hovedsæt On/Off | Headset ein-/ausschalten | Conectar/desconectar
el headset | Allumer/éteindre l'oreillette | Accensione/Spengimento dell'headset | Headset aan/uit |
Włączenie/ Wyłączenie zestawu słuchawkowego

3x 🔵

3x 🔴

Pairing the headset | Forbindelse af hovedsættet | Headset verbinden | Conectar el headset | Appairer
l'oreillette | Connessione dell'headset | De headset verbinden | Łączenie zestawu słuchawkowego

press and hold while powering on

“Pairing”

20 cm

“Pairing successful”

1. Activate the Bluetooth® function

2. Search for Bluetooth devices

3. Select the MB 110 WN on your device

Swapping the assignment of the volume buttons | Ændring af funktionen for lysterkeknappen |
Belegung der Lautstärketasten tauschen | Cambiar la asignación de las teclas de volumen | Permuter
la fonction des touches Volume+ et Volume- | Scambio dell'occupazione dei tasti volume | De functie
van de volumetoetsen omwisselen | Zmiana głośności

2s

During an active call - volume 1:
Increases or reduces the speech volume

During music reproduction - volume 2:
Increases or reduces the music volume

In idle mode (no active call or music reproduction) -
volume 3:
Increases or reduces the volume for the ring tone, the
beeps and the voice prompts

Install the WHITE NOISE Application

The MB 110 WN secure headset
only works with the
WHITE NOISE mobile application.

For further information:
See WHITE NOISE Quick Guide and
contact your IT administrator – if required.



Call control features

- Accepts a call
- Ends a call
- “Call ended”
- Rejects a call
- “Call rejected”

Mute function

- Mutes the microphone
- “Mute on”
- Unmutes the microphone
- “Mute off”

Automatic voice prompts

- Connected to the Bluetooth device
- “Phone 1 connected” or
“Phone 2 connected”
- Out of the Bluetooth transmission range:
- “Phone 1 disconnected” or
“Phone 2 disconnected”

Sennheiser Communications A/S

Industriparken 27, DK-2750 Ballerup, Denmark
www.sennheiser.com, Printed in China, Publ. 12/17, A01



MB 110 WN

WHITE NOISE Secure Headset

Quick Guide
Instruções resumidas
Kısa Kılavuz
简要说明
入門簡介
クイックガイド
Краткая инструкция
요약 설명서

SENNHEISER

Package contents | Itens fornecidos | Teslimat Kapsamı | 供货范围 | 供貨範圍 | 同梱されているもの | Объем поставки | 구성품

Package contents

car charger (optional accessory)

System requirements

WHITE NOISE Application

WHITE NOISE Quick Guide

Charging the headset battery | Carregar a pilha recarregável | Akünün şarj edilmesi | 给电池充电 | 充電 | バッテリーを充電する | Зарядка аккумулятора | 배터리 충전하기

LED flashes Meaning

1x 🔴 ...	< 20% battery left
1x 🔵 ...	> 20% battery left
2x 🔵 ...	> 40% battery left
3x 🔵 ...	> 60% battery left
4x 🔵 ...	> 80% battery left
🔵 ... 🔵	100 %

If the headset is fully charged the LED lights up blue.
After 5 minutes, the LED goes off.
Press the multi-function button to check the battery charge level.

car charger (optional accessory)

*not included

Fast charging | Carregamento rápido | Hızlı şarj | 快速充电 | 快速充電 | 急速充電 | Быстрая зарядка | 급속 충전

50% 35 min

Complete charging cycle | Processo de carregamento completo | Komple şarj işlemi | 完整的充电过程 | 完整的充電過程 | 完全な充電 | Полный процесс зарядки | 완전 충전 과정

100% 1:20 h

Verificar a duração restante da bateria | Kalan pil süresini doğrulama | 剩余电池容量查询 | 検査剩餘電池電量 | バッテリー残量の確認 | Проверка оставшегося заряда батареи | 배터리 충전 상태 요청

“More than 80 percent battery left” 4x 🔵
“More than 60 percent battery left” 3x 🔵
“More than 40 percent battery left” 2x 🔵
“More than 20 percent battery left” 1x 🔵
“Less than 20 percent battery left” 1x 🔴

Less than 10 percent, automatic voice prompts: “Recharge headset”

Adjusting and wearing the headset | Ajustar e utilizar o micro-auscultador | Kulaklık setinin ayarlanması ve takılması | 头戴式耳机的适配与佩戴 | 頭戴式耳機的適配與佩戴 | ヘッドセットの適応と装着 | Подгонка и ношение головного комплекта | 헤드셋 설정 및 착용

Ear hook wearing style

In-ear wearing style

Changing ear hook and ear adapter

Switching the headset on/off | Hovedsæt On/Off | Headset ein-/ausschalten | Conectar/desconectar el headset | Allumer/éteindre l'oreillette | Accensione/Spegnimento dell'headset | Headset On/Off | Włączenie/ Wyłączenie zestawu słuchawkowego

3x 🔵 ON
1. “Power on”
2. “... connected” (see voice prompts)

3x 🔴 OFF
“Power off”

Pairing the headset | Conectar o micro-auscultador | Kulaklık setinin bağlanması | 连接通讯耳机 | 連接耳機 | ヘッドセットを接続する | Присоединение головного комплекта | 헤드셋 연결하기

press and hold while powering on

1. Activate the Bluetooth® function

2. Search for Bluetooth devices

3. Select the MB 110 WN on your device

20 cm

3x 🔵

“Pairing”

“Pairing successful”

Swapping the assignment of the volume buttons | Trocar a ocupação das teclas de volume | Ses şiddeti tuşları işlevlerinin değiştirilmesi | 交换音量键电荷 | 交換音量鍵電荷 | 音量ボタンの設定を変更する | Смена функций кнопок громкости | 볼륨 버튼 배정 교체

During an active call - volume 1: Increases or reduces the speech volume

During music reproduction - volume 2: Increases or reduces the music volume

In idle mode (no active call or music reproduction) - volume 3: Increases or reduces the volume for the ring tone, the beeps and the voice prompts

Press both volume buttons to swap the +/- assignment of the volume buttons.

2s

Using the headset | Operar o micro-auscultador | Kulaklık setinin kullanılması | 使用头戴式耳机 | 使用頭戴式耳機 | ヘッドセットの操作 | Управление головным комплектом | 헤드셋 조작

Install the WHITE NOISE Application

The MB 110 WN secure headset only works with the WHITE NOISE mobile application.

For further information: See WHITE NOISE Quick Guide and contact your IT administrator – if required.

WHITE NOISE Quick Guide

Call control features

Mute function

Automatic voice prompts

Connected to the Bluetooth device
“Phone 1 connected” or “Phone 2 connected”

Out of the Bluetooth transmission range:
“Phone 1 disconnected” or “Phone 2 disconnected”

Sennheiser Communications A/S
Industriparken 27, DK-2750 Ballerup, Denmark
www.sennheiser.com, Printed in China, Publ. 12/17, A01