

**vtech®**

## Parents' Guide



### RC Cory Carson™



91-003997-001 (US)

 
# INTRODUCTION

Thank you for purchasing the **Go! Go! Cory Carson®**

**RC Cory Carson™!**

Let's have fun with Cory! Use the two button remote control to move Cory forward, turn and do tricks. Press the light-up button to hear fun phrases, sounds and music from the show.

Come on, let's go!

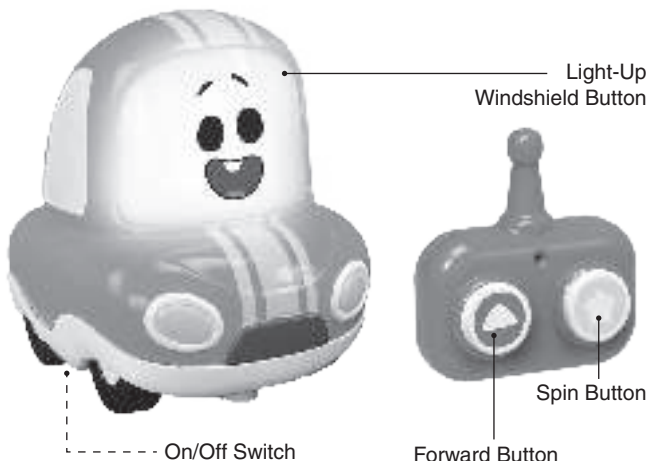

# INCLUDED IN THIS PACKAGE

## Go! Go! Cory Carson<sup>®</sup> RC Cory Carson<sup>™</sup>

- 1 RC Cory Carson<sup>™</sup>
- 1 remote control
- 1 Parents' guide

### WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

### NOTE

Please keep this parents' guide as it contains important information.

 
### ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

### NOTE


Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

### Removing the Packaging Locks

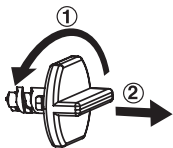

- ① Turn the packaging locks counterclockwise several times.

 - ② Pull out the packaging locks and discard.

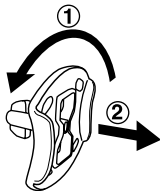

- ① Rotate the packaging locks 90 degrees counterclockwise.


- ② Pull out the packaging locks and discard.

# INSTRUCTIONS
 
## Battery Removal and Installation


### Car

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

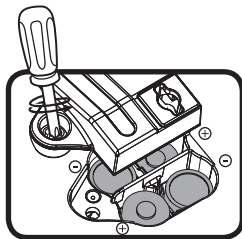

### Remote Control

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

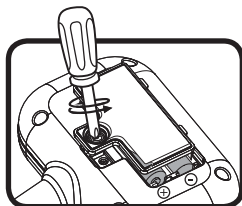

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.





 
### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

# PRODUCT FEATURES


## 1. On/Off Switch

To turn the unit **On**, slide the **On/Off** Switch to the **On**  position. To turn the unit **Off**, slide the **On/Off** Switch to the **Off**  position.

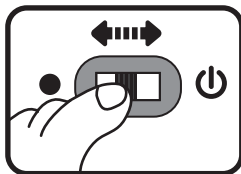

## 2. Automatic Shut-Off

 To preserve battery life, **RC Cory Carson™** will automatically power down after approximately 100 seconds without input. The unit can be turned on again by pressing Cory's **Light-Up Button**.

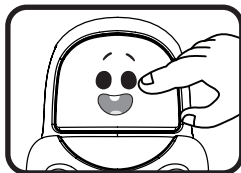

## 3. Remote Control

Use the **Forward Button** to move Cory forward and the **Star Button** to back up, turn and do tricks. Cory will play fun sounds while driving. The **Remote Control** will not work if the vehicle is in Sleep mode.



### Note

If the unit repeatedly powers down while playing or the light fades out, we suggest changing the batteries.

 
### Note

This product is in Try-Me mode in the packaging. After opening the package, turn the unit off and on again to proceed with normal play. If the unit powers down while playing, please install a new set of batteries.

# ACTIVITIES

## 1. Light-Up Button

Press the **Light-Up Button** to hear fun songs, exciting phrases, sounds and music. The light will flash with the sounds.

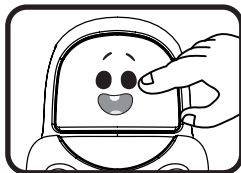

## 2. Forward Button

Press the **Forward Button** to move Cory forward with fun sounds and phrases. The light will flash with the sounds.



## 3. Star Button

Press the **Star Button** to back up, turn and do tricks while playing fun sounds and phrases. The light will flash with the sounds.



## MELODY LIST

1. Sidewalks of New York
2. Row, Row, Row Your Boat
3. Oh Dear What Can the Matter Be
4. Chicago (That Toddling Town)
5. Skip to My Lou
6. One Man Went to Mow a Meadow

## SONG LYRICS

### Song 1

Are you ready to have fun?  
Ready or not, here I come!

### Song 2

Hurry up! Hurry up! This way!  
Yeah! Yeah! Let's go!



## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, replace with a new set of batteries.

### IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### **Supplier's Declaration of Conformity**

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®  
Model: 5459  
Product Name: Go! Go! Cory Carson®  
RC Cory Carson™  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIED OPERATION.

CAN ICES-003(B)/NMB-003(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

*Read our complete warranty policy online at  
[vtechkids.com/warranty](http://vtechkids.com/warranty)  
[vtechkids.ca/warranty](http://vtechkids.ca/warranty)*



TM & © 2021 Vtech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003997-001 (25)