

## 11. Manual notation

### 11.1 Manual notation

Since this device is always used with vehicle, it is not sold to general end users directly. Therefore, there is no user manual of this device.

The following information must be described on the user manual of the vehicle;

Notation content only for countries subject to FCC regulations

**FCC CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Common notation content for FCC and IC regulations



This device complies with part 15 of FCC Rules and Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme à la partie 15 des règles de la FCC et aux normes des CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## 11.2 Installation position of LF-antenna T/G

The LF-antenna T/G is mounted at least 1cm inside the vehicle bumper.

The distance between the LF-antenna T/G and the human body is 1cm or more.

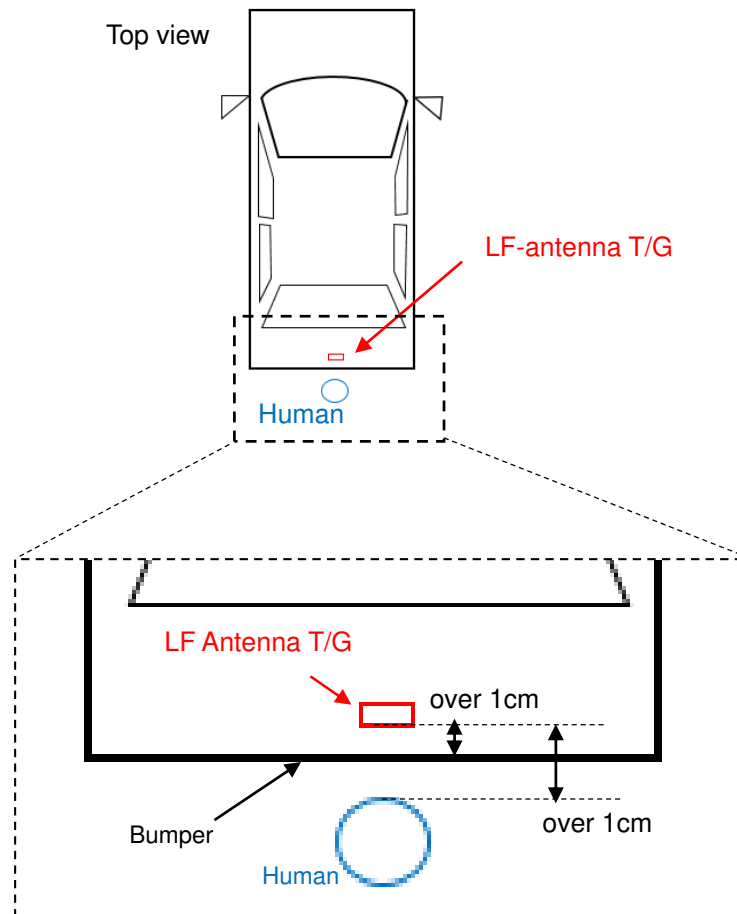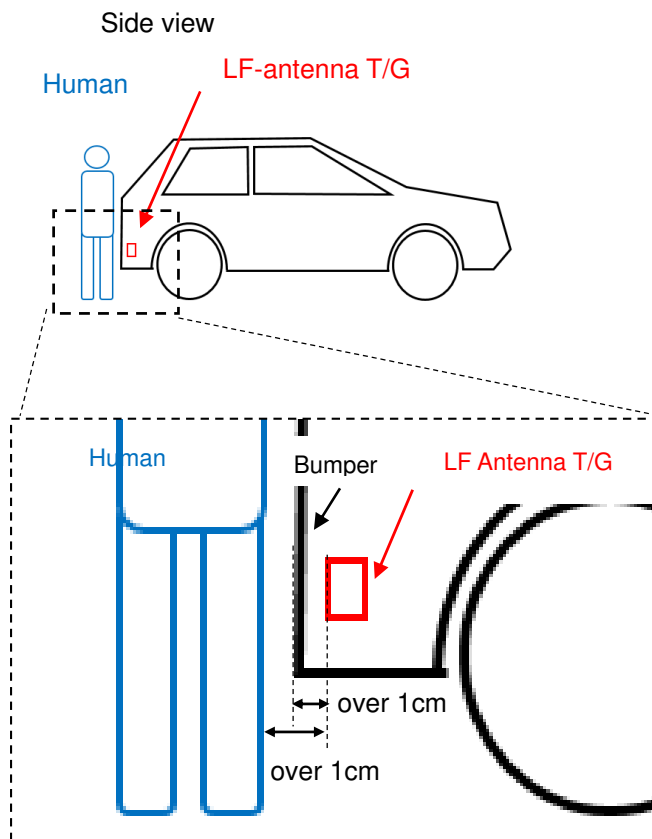

When the tailgate is open, the top surface of bumper is exposed.

The distance between the LF-antenna T/G and the top surface of bumper is 1cm or more.

