
USER MANUAL VC-5D

Version 0.1

VACOM WIRELESS, INC.

CONTENTS

IMPORTANT SAFETY INFORMATION

GETTING TO KNOW YOUR PHONE

DISPLAY INDICATORS

BATTERY INFORMATION

BASIC FUNCTIONS

1. Making Calls
2. Ending Calls
3. Answering Calls
4. Correcting Entry Errors
5. Storing Phone Numbers
6. Adjusting In-Call Mic Volume
7. Volume
8. Redialing Last Dialed, Received, or Missed Number
9. Speed Dial
10. Using Caller ID
11. Etiquette Mode
12. Camera
13. Shortcut

MENUS

I. INTERACTIVO

1. WAP
2. BREW
3. MMS
4. SMS

II. PHONEBOOK

1. Adding Entries in the Phonebook

-
2. **Phonebook Search**
 3. **Call List**
 4. **Editing Groups**
 5. **Memory Check**
 6. **My Number**

III. VOLUME & ALERT

1. **Bell Select**
2. **Ring Type**
3. **Volume**
4. **Alert Settings**
5. **Beep Length**
6. **Roam Ringer**

IV. PERSONAL INFORMATION MANAGEMENT

1. **Alarm**
2. **Schedule**
3. **Memo**
4. **Calculator**
5. **World Time View**
6. **Calendar View**

V. PHONE SETTINGS MENU

1. **Wallpaper**
2. **Greeting Edit**
3. **Backlight**
4. **LCD Contrast**
5. **Languages**
6. **Auto Keylock**
7. **Power Saving**
8. **Current Time Setting**

VI. CALL INFORMATION

1. **Call Function**
 - **Auto Answer**
 - **Auto Redial**
2. **Call Restrict**

-
3. **Call Answer**
 4. **Call Time**
 5. **Voice Privacy**

VII. SECURITY FUNCTIONS

1. **Lock Mode**
2. **New Password**
3. **Memory Clear**
4. **Initialize**
5. **Privacy Information**
6. **Network Changes**

VIII. VALUE ADDED SERVICE (VAS)

1. **Data Service**
2. **Games**
 - **Black Jack**
 - **Othello**
 - **Lottery**
3. **Memory Manager**

USING MENU DURING CALLS

1. **Phonebook Search**
2. **Mute**
3. **DTMF Mute**
4. **Mic Volume**
5. **Voice Privacy**
6. **Beep Length**

ENTERING LETTERS & NUMBERS

1. **Prediction Text Input**
2. **ABC/123 Mode**
3. **Inserting Punctuations & Special Characters**

IMPORTANT SAFETY INFORMATION

Some of the following information may not apply specifically to your phone. However, as with any electronic product, these safety precautions should be observed when using this product.

- ◆ Please keep this manual in a safe place, for it contains important safety information and operating instructions.
- ◆ Please follow and adhere to all warning, safety, and operating instructions indicated on both the phone and in this manual before use.
- ◆ **Do Not** expose the phone to water or moisture.
- ◆ **Do Not** expose the phone to extreme heat or cold.
- ◆ **Do Not** expose the phone to open flame.
- ◆ **Do Not** allow objects to fall or liquids to spill on the product.
- ◆ Use **Original Accessories** only. Any damage incurred from the use of non-approved accessories will void the warranty.
- ◆ Use approved chargers only and connect to a power source designated on the product.
- ◆ To reduce the risk of injury, remove the electrical cord from an outlet by pulling on the charger, rather than the cord.
- ◆ Ensure that the electrical cord is positioned accordingly so that it will not be vulnerable to damage.
- ◆ To reduce the risk of electrical shock, unplug the phone from the power source before cleaning. Once unplugged, use a soft cloth dampened with water to clean.
- ◆ **DANGER: Do Not** modify the cord or the plug. If the plug does not fit into an outlet, have a proper outlet installed by a qualified electrician. Improper connection can result in electrical shock.
- ◆ **Do Not** attempt to disassemble the product – doing so will void the warranty. This product does not contain consumer-serviceable components. Service should be performed only by authorized service centers.
- ◆ **Do Not** remove the antenna. A detached antenna can be a choking hazard for children.
- ◆ **Do Not** place the battery inside the mouth. The battery contains toxic electrolytes that are harmful for your health.

GETTING TO KNOW YOUR PHONE

Volume/Scroll Key

These keys are used to set volume levels, to shot a camera and to help you navigate through menus and the Phonebook.

Use the volume keys to:

- Access the Etiquette mode, then press the ▲ key while the folder is closed.
- Press ▼ to enlarge characters on Sub-LCD display.
- Adjust call volume.
- Adjust key tone volume.
- Answer incoming calls.
- Scroll through menu options.
- Scroll through the Phonebook.

Color LCD Display

The LCD screen is divided into two sections:

- The top line displays your phone status indicators.
- The lower portion displays currently in-use information, such as Caller ID (if available), Mute, Call Waiting, etc. Menus are also displayed in the lower portion.

Menu Keys (· · / ---)

These keys perform several useful functions:

- Use these keys to answer incoming calls.
- Use these keys from Standby mode to briefly access Main and Select menus.
- Use these keys to select a highlighted selection when navigating through a menu.

SMS Key (--- /)

From Standby mode, press this key to access a text message menu items.

- Press this key to answer incoming calls.

Navigation Keys

These keys allow you to navigate the phone's various features and useful shortcuts including a camera, BREW, WAP, phone number list, etc.

Camera () Key

From Standby mode, press this key to access a camera. Then you can take a photo with your phone.

Microphone

Your typical conversational microphone. Mute the microphone during conversation by pressing "MENU" "2".

Accessory Port

Connect your charger here.

CLR Key

This key is used to erase incorrect numeric or character entries or to return to a previous screen.

- To erase a single character from the screen, briefly press the CLR key once.
- To erase the entire entry field, hold down the CLR key for one second.
- To back up one menu level, press the CLR key once.
- To return to standby, hold the CLR key for one second.
- During a call, press the CLR key to adjust the earpiece volume.



(END) Key

Press this key to end calls or to return to Standby mode from any menu. Press and hold to turn the phone On or Off.



(SEND) Key

This key performs several useful functions:

- Press the Send key to dial an entered number.
- Press the Send key once to redial the last outgoing number.

Numeric Keypad

These keys are used to input numbers and characters.



This key performs several useful functions:

- Toggle between ring and vibrate.
- Use as a navigation key.



This key performs several useful functions:

- Use to lock the keypad. To unlock, press MENU (••) and “#▶”.
- Use as a navigation key.

Antenna

DISPLAY INDICATORS

Display indicators appear across the bottom of your phone's LCD screen. Combination of displayed indicators, or icons, will vary based on your phone's operating status.



Signal Strength: This icon displays the current signal strength. Each additional line indicates greater signal strength, where five lines indicate the maximum signal strength.



Out of Service: This icon indicates an absence of signal and that you may be outside the service area. If this icon is shown, calls cannot be either received or made until a signal is found.



In Service



Roaming: This icon indicates you are "roaming" in another carrier's service area. However, you must register for roaming services.



SMS Message Box Full



New SMS Message: This icon indicates unchecked message(s) in your Message Box. Press the SMS Menu key to view the Message menu or press and hold the key to access the Voicemail Box.



Etiquette Mode: This icon indicates that the phone will vibrate instead of ringing when an incoming call is received. This feature is convenient for situations when you don't want your ringer to disturb anyone.



Alarm On: This icon indicates that the alarm has been set.



Battery Strength: This icon displays the current level of the battery. The more bars you see, the greater the charge. Zero bars indicate critically low battery status, as additionally indicated by a flashing alert.



Full Charge



Empty Charge

BATTERY INFORMATION

The rechargeable Lithium-polymer battery included in your kit is partially charged so that you can use the phone immediately once it has been activated.

Attaching the Battery

To attach the battery to your phone:

1. Lineup the metallic contacts on the base of the battery to the base of the phone.
2. Place the battery on the back of the phone, with the top of the battery about a quarter of an inch from the latch.
3. Gently slide the battery towards the top of the phone until it snaps into place.

Charging the Battery

You can tell whether your battery needs to be recharged or not by checking the upper-right corner of your phone's display.

When the battery charge level becomes low, the battery sensor will alert you by blinking the battery icon and making an audible warning tone. The phone will automatically power itself off if the battery level becomes critically low, and any incoming or outgoing call will disconnect. To avoid such disconnection, be mindful of the battery strength indicator and make sure your battery is sufficiently charged.

Charging with a Travel Charger

Using an unauthorized accessory may be dangerous and will void the warranty if it causes damage to the phone.

To charge the Battery using a Travel Charger:

- Plug the power cord of the charger into a wall outlet.
- Insert the charger's connector to the bottom of the phone.

Note) Ensure a proper connection of the charger and the phone. Incomplete connection may cause damage to the phone.

A completely discharged standard sized battery charges full in approximately tbd hours. Extended battery charges in approximately tbd hours. Leaving your phone powered on during charging or charging two batteries simultaneously will increase charge times. Leaving the battery connected to the charger after it has been fully charged will not harm the battery.

Turning your phone on and off.

When you're ready to turn on your phone, press and hold "END/📞" until the display is turned on and the phone makes the sound. When the phone has found a signal, the "📶" icon appears. Once the phone is turned on, it enters Standby mode and you are able to make and receive calls.

To turn your phone off, press and hold "END/📞" until the display is turned off and the phone makes the sounds. Then the display will go blank. When the phone is turned off, nothing is displayed on screen.

Note: If "END/📞" is pressed for less than one second, the phone will not be turned off. This function prevents your phone from being turned off accidentally.

Standby Mode.

Standby is the most basic state of your phone. The phone goes into standby mode soon after you turn it on, or whenever you briefly press "END/📞". When your phone is in Standby Mode, you will typically see the banner (that's the message displayed when you turn on your phone). If you enter a phone number, you press "SEND" to complete the call, or press "STO (· ·)" to save it in the internal phone book.

Power Save Mode

Your phone comes with a Power Save feature that will automatically be activated if your phone is unable to find a signal after 15 minutes of searching. While this feature is active, the phone's battery power is conserved.

The phone will automatically recheck for a signal periodically. To manually force the phone to recheck for a signal, press any key. A message on the display will let you know when the phone is operating in Power Save Mode.


Conversation Mode.

You can place and answer calls only when your phone is turned on. During a call, the phone is in Conversation Mode.


BASIC FUNCTIONS

1. Making Calls

To place a call:

Press and hold  to power your phone on, as indicated by icons that appear on screen.


Enter the phone number (up to 32 digits) using the keypad. The phone number is displayed from left to right.

Press . The phone attempts to connect to the entered phone number (if service is available).

You can also make calls from:

Your Phonebook or by using Speed Dial keys (see “II. Phonebook”).

2. Ending Calls

To end a call, close the folder or press . Call time for the just ended call will display, along with the name and number of the connected party (if available). The phone will then automatically revert back to Standby.

3. Answering Calls

To answer an incoming call, press any key. If your phone is registered for Caller ID service, the caller's phone number will display on screen, and that caller's name will also appear if the caller's number recognized in the Phonebook.

4. Correcting Entry Errors

Press CLR to erase one character at a time. You can erase the entire entry field by pressing and holding down CLR for one second.

5. Storing Phone Numbers

Phone numbers for frequently used services are pre-programmed into your phone. To store a number:

- Press the STO (···) key after entering the number to store.
- Select a type of a phone number by scrolling “◀▶” and press “OK (··)”.
- Press “EDIT (··)” and designate a name. Press “OK (··)” to complete. Scroll “▲/▼” to edit the location number. Once you've finish editing, press “OK (··)” to save.
- For more information, see “II. Phone Book”.

6. Adjusting In-Call Mic Volume

To adjust the in-call mic volume:

-
- Press MENU (··) and “2. MIC Volume”.
 - Press “▲” to increase and “▼” to decrease the mic volume.
 - Once a call has ended, the mic volume reverts back to factory set level.

7. Volume

You can adjust volume of the earpiece by using the volume keys on the side of the phone.

Briefly press the volume key once to display your current earpiece volume setting. Repeatedly press the volume key to adjust.

8. Redialing Last Dialed, Received, or Missed Number

Up to 20 dialed, received, or missed can be redialed directly. Simply press SEND to:

- Access the call log of 20 call entries in chronological order.
- Then, press the “VIEW (··)” key to see the time and number of the selected call.
- Simply press SEND to redial that number.

9. Speed Dial

Once a phone number is stored in your Phonebook, you can access and dial that number using assigned speed dial keys.


Enter the location number of a stored number. The phone will then automatically connect to that number.

10. Using Caller ID.

This feature informs you of the caller’s identification by displaying their number when the phone rings.


If the corresponding caller’s information is already available in your Phonebook, that caller’s name will appear on screen. Conversely, calling someone who has this feature will disclose your number on their phone. To access the call log, press SEND.

11. Etiquette Mode

In social situations where audible rings, bells, or tones are inappropriate, such as in a movie theater, at a museum, play, etc, your phone can be set on Etiquette mode. All incoming calls under this mode will be notified by inaudible vibration. Press and hold “*” to set the Etiquette mode and once more to cancel.

12. Shortcut

There are several shortcuts that can be used to directly access useful functions.

-
- a. **CAMERA**: Press “” key to access a camera.
 - b. **WAP**: Press “◀” key to access WAP.
 - c. **BREW**: Press “▶” key to access WAP.
 - d. **Phonebook Entry**: Press the “▼” key to view all the phone numbers stored in your Phonebook alphabetically.
 - e. **Short Messaging Service**: Press the SMS (⋯) button to send or receive messages.

MENUS

I. Interactive

1. WAP

2. BREW



3. MMS

4. SMS

Your phone can send and receive two types of message services – text (SMS: Short Messaging Service) and voice - if the services are available from your carrier. If you subscribe to either or both services, callers can leave you text messages or voice mail. Your service provider then transmits the text messages and voice mail notifications to your phone.


a. Text Messages

The actual tagging of text messages is dependent on the system used by your carrier. Once your carrier transmits messages to your phone while it is powered on, the phone will receive the messages as described below. If your phone is powered off, your carrier stores the messages and transmits them again at a later time.

When a new text message is received, your phone sounds an alert or vibrates, and  is shown on the display. After you read the new message,  disappears from the display.

Note) Your phone can store up to TBD text messages or TBD KB.


i) Reading Text Messages

If your phone is turned ON when it receives a text message, it will sound an alert or vibrate and display  on the display. You have a choice of reading the message then by pressing the SMS key or leave it for later. To read new messages:

- Press “SMS”, “1. View MSG” and “1. Inbox”.
- All messages you’ve received since the latest delivery will then be displayed. Choose a message to read and press “SEL (· ·)”.
- You can read the text message by scrolling “▲▼” keys.
- To call to a sender, simply press SEND twice while reading his/her message.

While reading a message, you can directly reply and transfer mail, store the phone number or

return to the sender's phone number.

- Reply MSG : While you read a message, press "OPT (· ·)" and "Reply". You can then reply a message back. On sending messages, refer to "ii. Sending a Text Message".
- Transfer MSG : While you read a message, press "OPT (· ·)" and "Trans". You can then transfer this message to others. On sending messages, refer to "ii. Sending a Text Message".
- Store Number : While you read a message, press "OPT (· ·)" and "SaveN". You will then see the same display shown when storing phone numbers. On storing phone numbers, refer to "II. Phone Book".
- Return Call : While you read a message, press "". The phone will then display the call back number. Press "OK (· ·)" to connect.

If you want to read messages that you already sent out, press "SMS" and "2. Outbox". Then the phone will show you all the phone numbers you sent to. Press "SEL (· ·)" to choose a message. While you read a message, press "OPT (· ·)" to resend a message or store the phone number.


ii) Sending a Text Message (SMS : Short Messaging Service)

You can send text messages through your phone. To edit and send text messages:

- Press "SMS" and "2. Send MSG".
- Choose "1. Create MSG", "2. Recent MSG" or "3. Canned MSG". You can then write a new message or edit sent/canned messages. Press "OK (· ·)" to complete.
- Enter a phone number you want to send to. Or press "◀" to choose from numbers that you already sent to. Or press "▶" to choose from Phone Book.
- Scroll "▲/▼" and press "◀▶" to set message priority, message save, or delivery ACK.
- Press "OK (· ·)" to send the message.

b. Voice Mail Service

Your phone can receive voice mail notifications while it is powered ON. If your carrier transmits a notification while your phone is powered OFF, the notification the next time the phone is powered ON.

When a voice mail notification is received, your phone sounds an alert or vibrates and displays  on the display. Once the voice message is checked, the icon disappears from the display.

Either listen to the new message right away by pressing the SMS key or listen to it at a later time. To listen to new voice messages:

-
- Press “SMS”, “1. View MSG” and “3. Voice”.
 - The time the message was received, the sender’s name, and the sender’s phone number will then appear on the display.
 - To listen a voice message, press SEND while reading a message and dial *** (carrier’s voice mail service number).
 - To delete a message, press “DEL (···)” key while you are reading a voice mail list.
 - To call to the sender, simply press SEND while accessing to the voice mail.

c. SMS Setting

i) Alert Type

You can select message alerts from 5 different settings (Lamp Only, Bells, and Vibrate).

- Press “SMS”, “3. Setting”, and “1. Alert Type”.
- Select from “Vibrator” “Melody 1”, “Melody 2” or “Melody 3”.
- Press “OK (··)” to set.

ii) Direct View

To view received messages as soon as they are transmitted:

- Press “SMS”, “3. Setting”, and “2. Direct View”.
- Choose “On” and press “OK (··)” to save.

iii) Priority

You can assign different priority levels for your messages. To do so:

- Press “SMS”, “3. Setting”, and “3. Priority”.
- Choose from Normal or Urgent and press “OK (··)” to save.

iv) Delivery ACK

To set Delivery ACK, press “SMS”, “3. Setting”, and “4. Delivery ACK”. Then, choose between “On” and “Off” and press “OK” to set.

v) Save Message

To save the read message in the phone:

- Press “SMS”, “3. Setting”, and “5. Save MSG”.
- Choose from Always or None and press “OK (··)” to save.

II. Phonebook

1. Adding Entries in the Phonebook

After selecting “MENU (· ·)”, “2. Phone Book” and “1. PB Add” to add a phone number;

- Choose a type of the phone number among the image of Mobile, Home, Office and Etc by scrolling “◀ ▶”.
- Scroll “▲/▼” to edit the name, location number, and phone number.
- Assign the phone number as a Mobile, Home, Office, or Etc by scrolling “◀/▶”.

※ Note) A yellow frame outlining characters indicates that you can edit or type. For example, if “No Name” has a yellow frame outside of each character, you can enter the name. Or if [001] has a yellow frame outside of each number, you can change the location number.

To add Group, E-mail Address, Memo, or Bell Type for CID incoming rings, scroll “◀/▶” before you press “OK (· ·)”.

- Group: Scroll “◀/▶” to choose Group and press “NEXT (··)” to scroll through Family, Friends, Business, and No Group.
- E-mail: Press “EDIT (··)” to enter an e-mail address. Press “OK (· ·)” to complete.
- Memo: Press “EDIT (··)” to write a memo. Press “OK (· ·)” to complete. For more information on writing memos, refer to ‘ENTERING LETTERS & NUMBERS’ on page ____.
- Caller Identified Ring: If you are receiving Caller ID service and would like to set a distinctive ring for a recognized phone number, press “NEXT (··)” and choose a desired incoming bell type.
- Photo : If you are receiving Caller ID service and would like to show a photo for a recognized phone number, press “NEXT (··)” and choose a desired incoming bell type.
- Once finished registering all information for the entry, press “OK (· ·)” to store.
- Then you can see a total number of used and empty locations and a message that the number you wanted to store was stored successfully. And it goes to stand-by mode.

2. Phonebook Search

Access the Phonebook by pressing “▼” and view the list of all stored entries. Here, phone number can also be searched by name, number, location number, or group.

a. Search by name

Search numbers stored in the Phonebook by entering a name.

- Press “MENU (· ·)”, “2. Phone Book”, “2. PB Search” and “1. Name”.
- Enter the name to search for.

-
- If you don't remember the full name, just enter the first letter. Your phone will display a list of all similar names.
 - Press SEND to dial.
 - Or press "VIEW (· ·)" to edit or "DEL(···)" to delete.

b. Search by Number

Search numbers stored in the Phonebook by entering a phone number.

- Press "MENU (· ·)", "2. Phone Book", "2. PB Search" and "2. Number".
- Enter the number to search for and press "OK (· ·)". Then, the name and location assigned to that number will be displayed.
- Press SEND to dial.
- Or press "VIEW (· ·)" to edit or "DEL(···)" to delete.
- If the entered number is not stored in the Phonebook, a warning tone will sound and "No Number Match" will appear on the display.

c. Search by location

Search numbers stored in the Phonebook by entering a location number.

- Press "MENU (· ·)", "2. Phone Book", "2. PB Search" and "3. Speed Key".
- Enter the location number and press "OK (· ·)".
- Press "SEND" to dial. "VIEW(· ·)" to edit or "DEL(···)" to delete.
- If a number is not stored in the location, "Empty Location" will appear on the display.

d. Search by group

Search numbers stored in the Phonebook by a group.

- Press "MENU (· ·)", "2. Phone Book", "2. PB Search", and "4. Group" to access "Choose Group" on the display.
- Scroll "◀▶" or "▲▼" to select from "Business", "Friends", "Family" and "No Group".
- Choose a group to view all the numbers associated to that group.
- Place the cursor on the number you want to dial by scrolling ▲/▼ and press SEND.
- Press "VIEW(· ·)" to edit or "DEL(···)" to delete.

e. Phonebook List Search

- Press "MENU (· ·)", "2. Phone Book", "2. PB Search", and "5. PB List".
- Your phone will then display all numbers stored in the phone in alphabetical order.
- Choose a number and press SEND to dial.
- Press "VIEW (· ·)" to edit or "DEL(···)" to delete.

※ Note) You can also access Phonebook Search by pressing "SRCH(···)" from Standby mode.

3. Call List

Call history, including number, time, and duration, can be referenced by:

- Pressing “MENU (· ·)”, “2. Phone Book”, and “3. Call List”.
- A log of dialed, received, and missed calls will be displayed.

4. Editing Groups

Three types of groups - Family, Friend, and Business - are available.

To change the name of groups or to add/remove groups, press “MENU (· ·)”, “2. Phone Book”, and “4. Group Edit”.

- Select a group type and press “Add” and enter the name of group. Then press “OK (· ·)” to save.
- Press “Edit” to edit or “Remove” to remove.

5. Phonebook Information

You can check how many entries are stored in both your phone.

- Press “MENU (· ·)”, “2. Phone Book”, and “5. Check Memory”.
- The total number of entries stored in your phone will then be displayed.

6. My Number

View your phone number. Press “MENU (· ·)”, “II. Phone Book”, and “6. My Number”.

III. VOLUME & ALERT

1. Bell Select

This option allows you to set an incoming call alert from a selection of bells and 40-poly MIDI

To set a bell, press “MENU (· ·)” and “3. Vol/Alert”, and “1. Bell Select”.

a. Melody

- Press “1. Melody” and scroll ▲/▼ to select a bell type.
- Press “OK (· ·)” to set.

b. My Bell

- Press “2. My Bell” and scroll ▲/▼ to select a melody type.
- Press “OK (· ·)” to set.

c. WAP Ringer

d. BREW Ringer

e. MMS Ringer

2. Ring Type

You can choose from six incoming call alert settings.

- Press “MENU (· ·)”, “3. Vol/Alert”, and “2. Ring Type”.
- Select “Bell”, “Vibration”, “Lamp”, “Bell → Vib” and “Vib → Bell”.
- Press “OK (· ·)” to set.

3. Volume

a. Bell Volume

This option allows you to set the bell volume level.

- Press “MENU (· ·)”, “3. Vol/Alert”, “3. Volume”, and “1. Bell Volume”.
- Scroll “▲/▼” to increase or decrease the volume level.
- Press “OK (· ·)” to set.

b. Key Volume

This option allows you to set the key volume level.

- Press “MENU (· ·)”, “3. Vol/Alert”, “3. Volume”, and “2. Key Volume”.
- Scroll “▲/▼” to increase or decrease the volume level.
- Press “OK (· ·)” to set.

c. Call Volume

This option allows you to set the earpiece volume level.

- Press “MENU (· ·)”, “3. Vol/Alert”, “3. Volume”, and “3. Call Volume”.
- Scroll “▲/▼” to increase or decrease the volume level.
- Press “OK (· ·)” to set.

4. Alert Settings

a. Connect Beep

This option allows you to be audibly notified when a call is connected.

- Press “MENU (· ·)”, “3. Vol/Alert”, “4. Alert Setting”, and “1. Connection”.
- Select between On and Off and press “OK (· ·)” to set.

b. Call Drop

This option allows you to be audibly notified when a call is disconnected or the other party hangs up the phone.

- Press “MENU (· ·)”, “3. Vol/Alert”, “4. Alert Setting”, and “2. Drop”.
- Select between On and Off and press “OK (· ·)” to set.

c. 1 Minute Alert

This option allows you to be audibly warned when a call reaches the 1 minute mark.

- Press “MENU (· ·)”, “3. Vol/Alert”, “4. Alert Setting”, and “3. Minute”.
- Select between On and Off and press “OK (· ·)” to set.

d. Service

This option allows you to be audibly warned when you move into other base stations during a call.

- Press “MENU (· ·)”, “3. Vol/Alert”, “4. Alert Setting”, and “4. Service”.
- Select between On or Off and press “OK (· ·)” to set.

5. Beep Length

DTMF tone length can be set at normal or long.

- Press “MENU (· ·)”, “3. Vol/Alert”, and “5. Beep Length”.
- Set the beep length “Normal” or “Long” and press “OK (· ·)” to set.

6. Roam Ringer

This option allows you to be audibly warned when the phone is roaming.

- Press “MENU (· ·)”, “3. Vol/Alert”, and “6. Roam Ringer”.
- Choose “OFF”, “RoamRing 1” or “RoamRing 2” and press “OK (· ·)” to set.

IV. PERSONAL INFORMATION MANAGEMENT

Your phone supports various additional functions, including Alarm, Schedule, Memo, Calculator, World Time and Calendar.

1. Alarm

The 24-hour alarm can be set to go off at a set time while your phone is on. If the phone is powered off at the set time, the alarm will not sound. To set the alarm, press “MENU (· ·)”, “4. PIM”, and “1. Alarm”.

- Choose “Alarm 1” or “Alarm 2” and press “SEL (· ·)”.
- Choose from Disable, Everyday, Mon~Sat, Mon~Fri, and Once Alarm by scrolling “◀/▶”.
- Use “▼” to choose a Bell type and select the bell type by scrolling “◀▶”.
- Press “▼” and enter the time, and then select AM or PM by pressing “(···)”
- Press “STO (· ·)” to set.

Note 1) You can set up to 2 different alarms.

Note 2)

- Disable: Once you’ve chosen Disable, the alarm will not sound even if you’ve set a time for it.
- Everyday: Once you’ve chosen Daily, the alarm will sound at the set time everyday.
- Mon~Sat: Once you’ve chosen Mon~Sat, the alarm will sound at the set time from

Monday to Saturday.

- Mon~Fri: Once you've chosen Mon~Fri, the alarm will sound at the set time from Monday to Friday.
- Once Alarm: Once you've chosen Once, the alarm will only sound at the set time once.

2. Schedule

The Schedule Manager option helps to manage your schedule using the phone. To set or edit a schedule, press "MENU (· ·)", "4. PIM", and "2. Schedule".

a. Add Schedule :

- Select "1. Add". Calendar of the current month will then appear on the display.
- Use "▲/▼" to scroll through the days, the side keys on left side of the phone (volume keys) to scroll through the months, and * and # keys to scroll through the years.
- Enter the time (hour, minute and AM/PM).
- Press "▼" and press any numeric keys to enter a memo under "Input Schedule". Once you finish entering a memo, press "OK (· ·)".
- Press "▼" and scroll "◀/▶" to choose the bell type.
- Press "STO (· ·)" to save.
- The display will then show an animation and prompt "Add Other Schedule?" To add more, press "OK (· ·)" or to finish, press "QUIT (···)".

b. Schedule List : You can see the schedule list you stored.

- Select "2. List". Then you can see the schedule list orderly.
- To edit a schedule, choose a list by scrolling "▲/▼" and pressing "OK (· ·)". You can then edit a schedule in the same manner as above.
- Or delete a schedule by simply pressing "DEL (···)". Press "OK (· ·)" to erase once the display prompts "Erase?"

c. Schedule Delete : You can delete all schedules.

- Select "3. Delete".
- The phone will then prompt "All Schedule Erase?"
- Press "OK (· ·)" to erase.

3. Memo

The Memo option helps you to manage your daily tasks. To create or edit a Memo, press "MENU (· ·)", "4. PIM", and "3. Memo".

a. Add Memo :

- Choose “1. Add”.
- Enter or edit your task and press “OK (· ·)”.
- Press “STO (· ·)” to store or “EDIT (··)” to edit.

b. Memo List :

- Choose “2. List”. The phone will then display a list of all stored memos.
- Select by scrolling “▲” and “▼” and press “VIEW (· ·)”.
- The memo and stored time will then be displayed.
- To edit, press “EDIT (··)”.

c. Delete :

- Select “3. Delete”. The phone will then prompt “All Memo Erase?”.
- Press “OK (· ·)” to delete all memos.
- Or if you would like to delete individual memos, choose a memo entry and press “DEL(··)”.

4. Calculator

Your phone can double as a calculator. Press “MENU (· ·)”, “4. PIM”, and “4 Calculator”.

5. World Time View

Your phone is capable of displaying current times of 77 different cities. To access the world time view;

- Press “MENU (· ·)”, “4. PIM”, and “5. World Time”.
- Use “▲▼” or “*” and “#” keys to find cities.

6. Calendar View

Your phone can show you a calendar by pressing “MENU (· ·)”, “4. PIM”, and “6. Calendar”.

V. PHONE SETTINGS MENU

1. Wallpaper

Your phone is capable of displaying various welcome greetings in standby mode. To edit this greeting:

- Press “MENU (· ·)”, “5. Phone Setting”, and “1. Wallpaper”.
- Choose from “1. Fixed”, “2. User”, “3. WAP Image” or “4. BREW Image” and press “SEL (· ·)”.
- Scroll “◀▶” to choose wallpapers and press “OK (· ·)” to save.

2. Greeting Edit

To edit the greeting banner:

- Press “MENU (· ·)”, “5. Phone Setting” and “2. Greeting Edit”.
- Compose the banner you want displayed and press “OK (· ·)” to save.

3. Backlight

You can set the LCD and Keypad backlight separately to stay on or automatically turn off in 10, 20, or 30 seconds.

- Press “MENU (· ·)”, “5. Phone Setting”, “3. Backlight” and “1. LCD Light” or “2. Keypad Light”.
- Select “10 Sec”, “20 Sec”, “30 Sec” or “Always Off”.
- Press “OK (· ·)” to set.

4. LCD Contrast

To adjust LCD contrast:

- Press “MENU (· ·)”, “5. Phone Setting”, and “4. Contrast”.
- Choose between “1. Main LCD” and “2. Sub LCD”.
- Scroll “▲/▼” to set the contrast levels and press “OK (· ·)” to set.

5. Languages

Spanish and English are available for your phone’s display. To change the language:

- Press “MENU (· ·)”, “5. Phone Setting”, and “5. Language”.
- Select “Spanish” or “English”.
- Press “OK (· ·)” to set.

6. Auto Keylock

To lock the phone automatically,

- Press “MENU (· ·)”, “5. Phone Setting”, and “6. Auto Keylock”.
- Select “Auto” or “Off”.
- Press “OK (· ·)” to set.

7. Power Saving

If you want save a power consumption, so that if you want to have longer battery life time, you can set the phone in Power Saving mode.

- Press “MENU (· ·)”, “5. Phone Setting”, and “7. Power Saving”.
- Select “On” or “Off”.

-
- Press “OK (· ·)” to set.

8. Current Time Setting

If you are within the service areas, your phone will indicate the current time received from the Base Station. If you are out of the service areas or in AMPS areas, you can set the time as below:

- Press “MENU (· ·)”, “5. Phone Setting”, and “8. Time Set”.
- Enter the month, day, year, time, minute and AM/PM in a order.
- Press “OK (· ·)” to set.

VI. Call Information

1. Call Function

a. Auto Answer

- “MENU (· ·)” → “6. Call Info” → “1. Call Function” → “1. Auto Answer”.
- Choose between On and Off and press “OK (· ·)” to save.

b. Auto Redial

- “MENU (· ·)” → “6. Call Info” → “1. Call Function” → “2. Auto Redial”.
- Choose between On and Off and press “OK (· ·)” to save.

2. Call Restrict

- “MENU (· ·)” → “6. Call Info” → “2. Call Restrict” → “1. Send Call”.
- Choose between “Restrict” or “Clear” and press “OK (· ·)” to save.

3. Call Answer

Calls can be answered either by pressing a key or by opening the folder.

- “MENU (· ·)” → “6. Call Info” → “3. Call Answer”.
- Choose “Any key” or “Send Key” and press “OK (· ·)” to save.

4. Call Time

The Call Time option shows approximate duration of the last call, the total call time in hours and minutes and the total number of calls made under the current phone number.

- Last Call : Press “MENU (· ·)”, “6. Call Info”, “4. Call Time”, and “1. Last Call”. Your phone will then indicate an approximate duration of the last call made in minutes and seconds.
- Home Calls : Press “MENU (· ·)”, “6. Call Info”, “4. Call Time”, and “2. Home Call”.

Your phone will then indicate an approximate total time in hours and minutes that the phone has been used in your provider's service area.

- c. Roam Calls : Press "MENU (· ·)", "6. Call Info", "4. Call Time", and "3. Roam Call".

Your phone will then indicate an approximate total time in hours and minutes that the phone has been used in roaming areas.

- d. All Calls : Press "MENU (· ·)", "6. Call Info", "4. Call Time", and "4. All". Your phone will then indicate an approximate total time in hours and minutes that the phone has been used in home and roaming areas.

5. Voice Privacy

You can set "Voice Privacy" on or off.

- Press "MENU (· ·)", "6. Call Info" and "5. Voice privacy".
- Choose between "standard" and "enhanced".
- Press "OK (· ·)" to save.

VII. SECURITY FUNCTIONS

Your phone is equipped with many security features, including a user-programmable lock code and call restrictions. To access the Security menu from Standby mode, press "MENU (· ·)" and "7. Security". And enter the four-digit password.

Note : The password is "0000" if you don't have your phone number yet. Or the last 4 digits of your number if you already have you phone number. If you want to change the password, see below;

1. Lock Mode

Locking the phone limits all outgoing calls except calls to the three hard-coded emergency numbers (***).

The phone can be manually locked during use or the automatic lock option can be set. When the phone is in Lock mode, you can answer incoming calls but must unlock the phone to place outgoing calls (except to designated emergency numbers).

- Press "MENU (· ·)", "7. Security", and "1. Lock Mode".
- Enter the password.
- Choose "Never", "Power up" or "Now" and press "OK (· ·)" to set.

Note 1) Never – The phone is unlocked.

Power Up – The phone is locked automatically when it is turned on.

Always – The phone must be unlocked to place outgoing calls.

Note 2) You can also lock the phone by pressing and holding # from Standby mode. This will lock the phone in the Always state. To release the lock, press and hold # and enter the 4 digit password.

2. Changing Password

To change the password,

- Press “MENU (· ·)”, “7. Security”, and “2. New Password”.
- Enter the password.
- Enter the new password and press “OK (· ·)”.
- Then you can see “RE-ENTER NEWCODE” on top of the display.
- Enter the new password again and press “OK (· ·)” to save.

3. Memory Clear

The Memory Clear option allows you to clear the call list, schedules, and all other stored information from memory.

- Press “MENU (· ·)”, “7. Security”, and “3. Memory Clear”.
- Enter the password.
- Choose “1. Call list”, “2. PhoneBook”, “3. Schedule”, “4. Memo”, “5. Alarm” or “6. All”.
- Choose “Clear” and press “OK (· ·)” to erase the memory.

4. Initialize

Phone Initialize allows you to reset the phone.

- Press “MENU (· ·)”, “7. Security”, and “4. Initialize”.
- Enter the password.
- Choose “Yes” and press “OK (· ·)”. Then your phone display “Initializing”.
- The phone will automatically restart to apply the change.

5. Privacy Information

To stop disclosing private information to other people, set the phone to show the information only when the correct PIN has been entered. To set privacy information:

- Press “MENU (· ·)”, “7. Security”, and “5. Hide Info”.
- Enter the password.
- Choose “1. Phonebook”, “2. Schedule/Memo”, “3. SMS”, “4. Call List” or “5. Camera”.
- Choose between “On” and “Off” and press “OK (· ·)” to set.

6. Network Set

To set the network:

- Press “MENU (· ·)”, “7. Security” and “6. Network Set”.
- Enter the password.
- Choose between “CDMA only”, “Analog only”, “Temp analog” or “Automatic” and press “OK (· ·)” to set.

Note) If you are not aware of Network Set function, please leave as it is. If you change, the phone may not work in your network.

VIII. VALUE ADDED SERVICE (VAS)

1. Data Service

Please refer to “Data/Fax” on page ____.

2. Games

You can enjoy such entertaining games as Blackjack, Othello and Lottery with your phone. To access games:

- Press “MENU (· ·)”, “8. VAS”, and “2. Games”.
- Choose “1. Black Jack” or “2. Othello” and enjoy your games!

To set the phone in silent mode while playing games, press “MENU (· ·)”, “8. VAS”, “2. Games” and “3. Game Sound”. Set “Game Volume Off” and press “OK (· ·)”.

To see the game result you played, press “MENU (· ·)”, “8. VAS”, “2. Games” and “4. Game Result”. Choose “1. Blackjack” or “2. Othello”. The phone will then display the high scores of the selected game.

To view play keys of Othello, press “MENU (· ·)”, “8. VAS”, “2. Games”, “2. Othello” and “4. Key Help”. Key functions will show and press any keys to return to the previous menu.

3. Memory Manager

To see the total size of memory you are using for Camera, BREW, PCSync and WAP, Press “MENU (· ·)”, “8. VAS” and “3. Memory Manager”. And choose “1. Album”, “2. BREW”, “3. PCSync” or “4. WAP” and press “SEL (· ·)”. Then the phone will show you the total size of

memory capacity and total size of memory that you are using.

USING MENU During a Call

1. Phonebook Search

Find phone numbers during calls by pressing “MENU (· ·)” and “1. PB Search”.

2. Tx Voice Mute

To mute the microphone, press “MENU (· ·)” and “2. Tx Voice Mute”. To unmute the microphone, press “MENU (· ·)” and “2. Tx Voice Mute” again.

3. DTMF Mute

To mute key tone, press “MENU (· ·)” and “3. DTMF Mute”. To unmute DTMF, press “MENU (· ·)” and “3. DTMF Mute” again.

4. Mic Volume

To increase microphone volume, press “MENU (· ·)” and “4. MIC Volume”. Scroll “▲/▼” to adjust.

5. Voice Privacy

To set Voice Privacy, press “MENU (· ·)” and “5. Voice Privacy”. Choose between “standard” and “enhanced” and press “OK (· ·)” to save.

6. Beep Length


To set a beep length, press “MENU (· ·)” and “6. Beep Length”.

ENTERING LETTERS & NUMBERS

You can enter letters, as well as numbers, with your phone's keypad when storing information into your phone, writing a memo, or sending text messages (Short Messaging Service). To enter letters, press the key associated with the letter you wish to enter until it appears on the screen (numbers also appear).

1. Prediction Text Input




To enter a word by Prediction Text Input,

- Press "MODE (···)" until "" appears on the display.
- Press buttons once for each letter of a word you want to write.
- Then the phone shows predicted words that you may want to write on both sides of the bottom.
- Press "◀*" to write a word on the left side or press "#▶" to write one on the right side.
- Or press "0" to see the next predicted words.

eg). If you want to write "manual", press "6", "2", "6", "8", "2", "5" and "◀*". Then "manual" is written on the display.


Or you may press buttons for first few letters and "0" to find "manual".

2. ABC/123 Mode

- To enter a capitalized character, press "MODE (···)" until "" appears on the top right corner of the display. Now you can enter capitalized characters.
- To enter a small character, press "MODE (···)" until "" appears on the top right corner of the display. Now you can enter small characters.
- To enter a numeric character, press "MODE (···)" until "" appears on the top right corner of the display. Now you can enter numeric characters.

3. Inserting Punctuation & Special Characters

To enter punctuations or special characters:

- Press "MODE (···)" until "" appears on the display.
- Scroll "◀/▶/▲/▼" to choose a characters and press "OK (··)" to insert.

BATTERY LIFETIME

	Bateria	Tiempo de conversacion	Tiempo de reserva
Cellular digital	3.7V Li-ion 900mAh	Desde TBD min hasta TBD min	TBD hrs hasta TBD hrs
PCS	3.7V Li-ion 900mAh	Desde TBD min hasta TBD min	TBD hrs hasta TBD hrs
Analogo	3.7V Li-ion 900mAh	Desde TBD min hasta TBD min	TBD hrs con TBD min hasta TBD hrs con TBD min

FCC RF EXPOSURE INFORMATION

Read this information before using your handset

In August 1996 the Federal Communication Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachment s could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user 's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Bodyworn accessories that do not meet these requirements may not comply with FCC RF exposure requirements and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov