

IM_0911-05
04.18.2019

WHITE, FOLDED CARD PRINTED IN BLACK AND WHITE - 3.5" X 2" (FOLDED)

OUTSIDE

FOLD

SAFETY PRECAUTIONS:

WARNING—When using this product, basic precautions should always be followed, including the following:

- Read all the instructions before using the product.
- Charge the power bank fully before initial use. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Do not expose the device to moisture.
- Do not use the device in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury.
- Do not use the device if damaged or modified.
- Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not disassemble the device. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
- Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 212°F may cause explosion.
- Have servicing performed by a qualified repair person using only identical replacement parts.

This will ensure that the safety of the product is maintained.

FCC STATEMENT:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Warning Statements:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID:2ANFN0911-05

INSTRUCTIONS

0911-05

Titus Wireless Charging Re☒ilable Journalbook

FOLD-IN

BACK

FRONT

INSIDE

FOLD

1. Pen Loop
2. Phone & Tablet Stand
3. Wireless Charging Pocket
4. Cable Organizer
5. Card Pockets
6. ON/OFF Button
7. Journal Book
8. Charging Port

5. Card Pockets
6. ON/OFF Button
7. Journal Book
8. Charging Port

Secured with Secure®

hook and loop

Secured with

③

Form a peak

Form another

pea

SPECIFICATIONS:

Battery Type: Lithium Polymer
Battery Capacity: 5000mAh
Input: 5V/2.0A
USB Output: 5V/2.1A
Wireless charging Output: 5V/1.0A , 5W

INSTRUCTIONS:

Charging the power bank: Insert provided Micro-USB charging cable into power input port. Insert the USB end of the cable into a certified USB AC adapter or USB port of a computer to begin charging. When Charging, LED Indicator will flash BLUE. Once fully charged all LEDs will be illuminate BLUE.

Charging mobile phones and other electronic devices using appropriate cable: Connect the appropriate charging cable to your phone or mobile device. Connect the other end of the cable to the USB power output and press power button. BLUE LED Indicator will illuminate when charging. Remove the USB cable from your mobile device when it is fully charged.

Charging Mobile phones and other electronic devices with wireless output.

Press ON/OFF Button until the BLUE LED indicator turns on. Place wireless charging compatible device in Wireless Charging Pocket. LED will illuminate BLUE when charging. Remove device from Wireless charging pad once device is fully charged. Charging pad will turn OFF when idle for 20 seconds.

Note: In order to charge devices, use only the accessory cable or the cable included with your own device by the manufacturer.

INSIDE FRONT

INSIDE BACK

INSIDE FOLD-IN

3.500"

88.900 mm

3.500"

88.900 mm

3.500"

88.900 mm