 


S5

STREAMING
SPEAKER WITH
VOICE ASSISTANT

airo
studio
COLLECTION

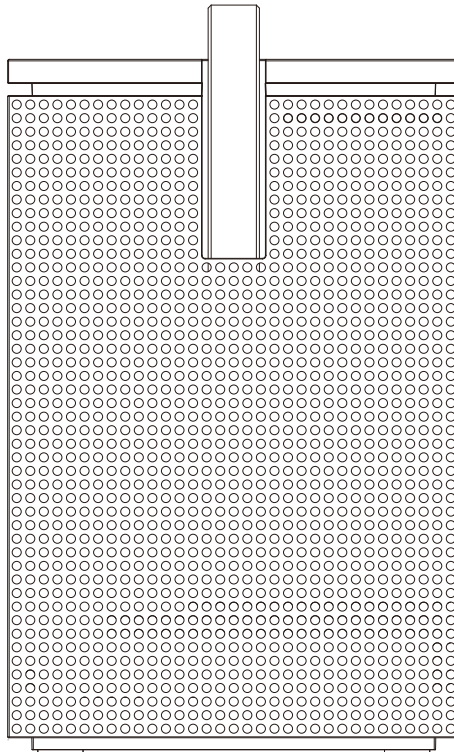

OWNER'S MANUAL

LUXMAN

Note: Explanations of required symbols in the operating manual shall precede any operating instructions.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.



LUXMAN

- 14.Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15.CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- 16.Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- 17.WARNING: Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc).
- 18.WARNING: Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
- 19.WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- 20.WARNING: The mains plug or appliance coupler is used as disconnect device, the disconnect device shall remain readily operable. or
- 21.☐ This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

22.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
 - Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
 - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
- 23.No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 24.Attention should be drawn to environmental aspects of battery disposal.
- 25.The product is designed to use in moderate climates.

TABLE OF CONTENTS

Confirmation of bundled items 5

Feature 6

Name and use of each part 7

Setup11

Method of operation15

Specifications23

Trademarks of each company24

Caution on safety26

IN THE BEGINNING

LUXMAN

Thank you very much for purchasing LUXMAN arro studio collection S5. Founded as a radio department in the corner of the frame shop "KINSUIDO" in 1925, when NHK started to broadcast this radio, LUXMAN has delivered many products to audio and music fans for over 90 years. In the meantime, the love of audio and music lovers has never changed.

We believe that the depth of emotion and attachment to the instrument that faithfully reproduces the artist's passion embedded in the music is the best value for the audio.


It's a pleasure to be able to share the same passion and values for audio and music as we have with our choice of LUXMAN products.

Be sure to read this owner's manual carefully before using the machine to ensure proper and safe use of the machine. As a result, the performance of this unit is fully demonstrated, and you can enjoy playing music with the highest grade. Please keep it with the warranty card after reading.


Thank you for your continued patronage.

CONFIRMATION OF BUNDLED ITEMS


Body

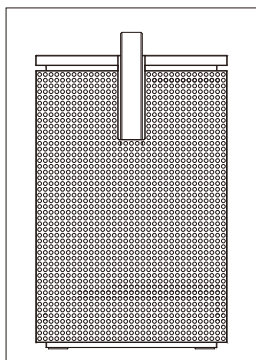


Power cable

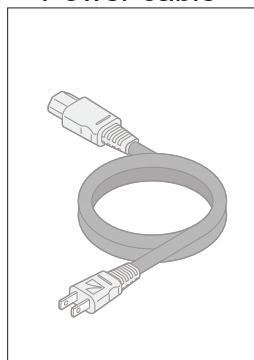

Owner's manual
(this book)

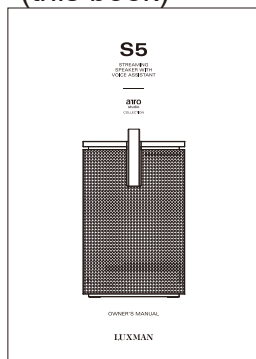

Cleaning cloth

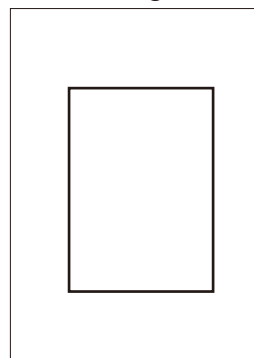

FEATURE

LUXMAN

- Object design

The refined and simple appearance using aluminum material matches rooms with various

- Dedicated application

We prepared exclusive application for iOS and Android that you can easily operate the functions of this unit.

- Equipped with Amazon Alexa

It is equipped with voice control technology Amazon Alexa, and it can instruct music playback and information acquisition by voice.

- Various connectivity

It enables playback from USB memory and digital / analog connection with conventional audio devices.

- Powerful and high sound quality

We realize powerful music reproduction of low-pass 30W + high-pass 15W * 3 although being a compact case.

- Correspondence to music service

We cope with streaming service and music reproduction from server installed in home.

- Bluetooth connection


You can play the music currently playing on your smartphone wirelessly by connecting to this unit with a simple operation.

- Multi-room playback

By preparing multiple recorders, you can control the music played in different rooms at one time.

NAME AND USE OF EACH PART

Top panel

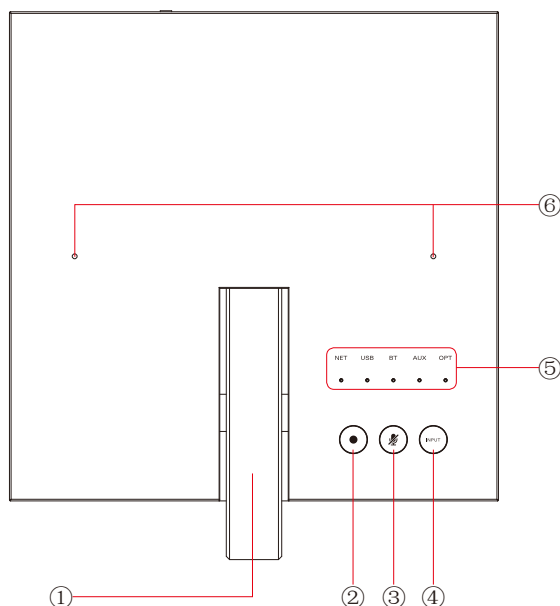

① Wheel

- power on / off

press and hold the wheel for 3 seconds directly below the product to turn on the machine.

when the machine is on, hold the wheel down the product for 3 seconds to turn off the machine.

while playing music, briefly press the wheel directly below the product to pause the music.

press the wheel a short time again to cancel the pause.

- Adjust volume

turning the wheel towards the back of the product will increase the volume. Turning the wheel towards you will reduce the volume.

The maximum volume is achieved by rotating the wheel three times from silence.

② Alexa button

Used to call Amazon Alexa with a button instead of voice.

③ Microphone mute button

Disable the microphone for calling Amazon Alexa by voice. When the microphone is disabled, press this button again to enable the microphone.

④ INPUT button


It is a button to switch to the sound source you want to listen to the input of this unit. Every time this button is pressed, the input changes in the order of NET → USB → BT → AUX → OPT. After OPT, it returns to NET, and repeats USB → BT → AUX → OPT.

⑤ INPUT indicator

This indicator shows the input operated by the INPUT switching button.

⑥ microphone


It is a microphone for calling Amazon Alexa by voice.
Please be aware that if you cover this part, voice input to the microphone will be blocked and you may not be able to call Alexa by voice.

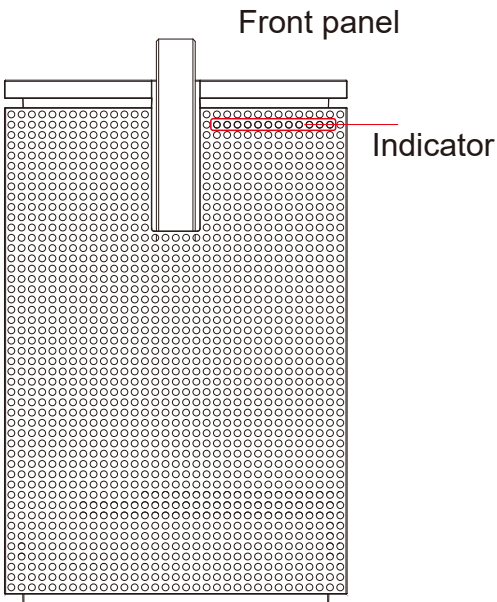

The volume of this unit is indicated by the number of green LEDs. In addition, when the operation of Amazon Alexa changes, the status is displayed by the color of the LED.

*Please refer to the explanation information of Amazon Alexa for the details of the color change by the operation situation of Amazon Alexa.

Rear panel

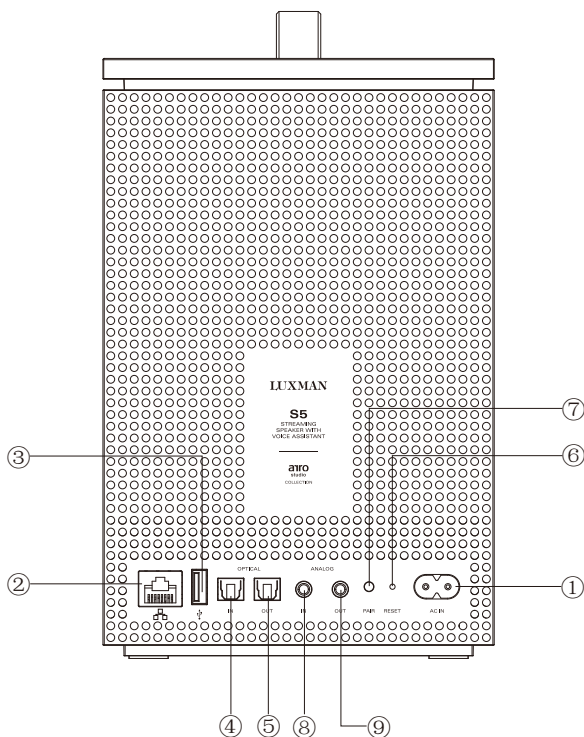

① AC IN terminal

Connect the supplied power cable.

③ USB terminal

Insert a USB flash drive with saved music data.

* You can play music by connecting a USB device compatible with the USB Mass Storage standard to this terminal.

② Wired LAN terminal

Connect to your home router or network hub using a LAN cable.
*When connecting this unit via Wi-Fi (wireless LAN), do not connect a LAN cable to this terminal.

④ OPTICAL IN terminal

Digitally connect an audio device with an OPTICAL output with an optical cable.

LUXMAN

⑤ OPTICAL OUT terminal

Digitally connect an audio device with an OPTICAL input with an optical cable.

⑥ ANALOG IN terminal

Connect an analog device with an audio device with analog output using a line cable (stereo mini plug type).

⑦ ANALOG OUT connector

Connect an analog device with an audio device with an analog input using a line cable (stereo / mini plug type).

⑧ PAIR button

Use during Wi-Fi setup or Bluetooth pairing setup. For more information on Wi-Fi setup, please refer to P9, and for Bluetooth pairing setup, please refer to P20.

⑨ RESET button


It is a button to reset the settings of this machine to the factory default.

To reset, gently press the ballpoint pen for 3 seconds and then release.

*LAN cable, optical cable and line cable are not included with this unit.

SETUP

- Connection of power supply
Connect the AC IN terminal on the back of the unit to a 100 V AC household outlet using the supplied power cable.

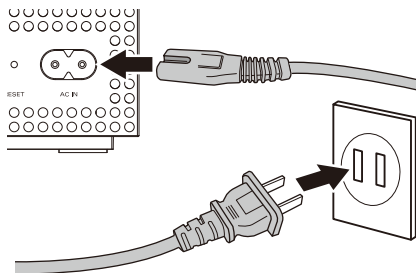

- Download the app
Download and install the dedicated application "LUXMAN CONNECT" from the Google Play Store or App Store according to the smartphone or tablet OS used.

- Wired LAN connection
When connecting this unit to a home network by wire, prepare a separate LAN cable and connect the wired LAN terminal on the back of this unit to a home router or a network hub.
*Please use LAN cable of category 5 or more type.
*When connecting this unit via Wi-Fi (wireless LAN), do not connect a LAN cable to this terminal.



LUXMAN

1. Before starting setup, make sure that the NET indicator on the top panel is lit or blinking. If anything other than NET is lit, press the INPUT button several times until NET lights or flashes.
2. Press the PAIR button on the rear panel for 3 seconds to put the unit into Wi-Fi setup mode. At this time, the INPUT indicator NET starts blinking.
3. Launch the "LUXMAN CONNECT" app and follow the on-screen instructions to proceed with the setup.



It is an application launch screen.




Press "Add Device" to start setup.



Switch your smartphone or tablet to the i-Fi setting screen.

SETUP

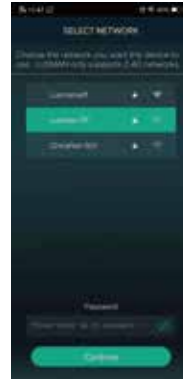

Follow the instructions on the screen to connect to your smartphone or tablet Wi-Fi network.

Device list screen.



Network connection is complete when this screen is displayed.

Then, set up an Amazon Alexa account that provides voice control to this unit.

LUXMAN




Follow the onscreen instructions to log in to Amazon.



When this screen is displayed, preparation for Amazon Alexa is complete.



You can give this machine a name you like so that you can distinguish individual products when using multiple machines or products of this series.

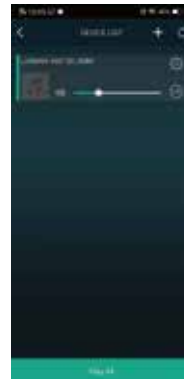

The setup is complete when the device name is displayed on the device list screen.

METHOD OF OPERATION

Network playback by dedicated application

This section describes network playback using the dedicated application of this unit.

Press the unit's INPUT button to select NET (Network).

Launch the dedicated application "LUXMAN CONNECT" from your smartphone or tablet.


This screen displays a list of devices (including this unit) set up in the same network.

This screen is displayed first when the app is launched.


1. Add device
2. Device List Update
3. Device settings
4. Audio channel selection

This screen is for selecting music service or input of this unit.

1. Move to main menu screen
2. Move to device list screen
3. Add music being played as a favorite
4. How current playlist
5. Toggle repeat / shuffle play
6. Adjust the volume
7. Regeneration operation

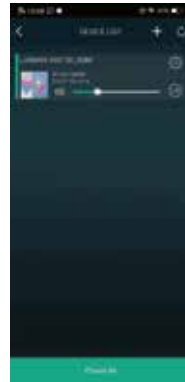

Device list screen.

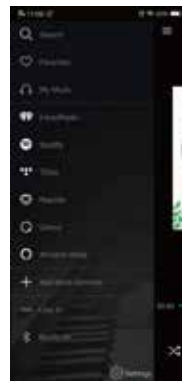

Main menu screen.

LUXMAN



Music playback screen.

This is a screen to control the music being played.

1. Search
2. Favorite
3. My music
4. Internet music service
5. Add service
6. AUX input
7. Bluetooth
8. USB device
9. Optical digital input

Voice control by Amazon Alexa

Press the unit's INPUT button to select NET (Network).

Talking to "Alexa" to this unit starts the voice control service by Amazon Alexa.

*This message indicates that Amazon Alexa has started up normally when a response sound of "Pong" is returned from the unit by calling "Alexa". If there is no response, please approach this unit and try again when the surroundings are quiet. Also, even if the Wi-Fi signal is weak, Amazon Alexa may not start properly.

Example:

Alexa, good morning

Alexa, tell us the weather today?

Alexa, what day is it today?

Alexa, tell me a delicious ramen shop nearby?

METHOD OF OPERATION

Wireless playback by AirPlay function

Press the unit's INPUT button to select NET (Network).

This unit is compatible with Apple's AirPlay.

First, play the AirPlay compatible music playback app on your iPhone or iPad. When you press the AirPlay icon of the application, you can play your music wirelessly by selecting this unit (ASC-S5) from the AirPlay compatible devices listed.

Reproduction by DLNA renderer function

Press the unit's INPUT button to select NET (Network).

This unit operates as a DLNA renderer device.

By specifying this unit as a Renderer from your DLNA compatible device, you can wirelessly play music from your DLNA compatible device.

Bluetooth playback

Press the unit's INPUT button to select BT (Bluetooth).

The same applies even if Bluetooth is selected from the main menu screen of the dedicated application.

Pairing with playback equipment

Please do the following pairing operation to play Bluetooth.

1. Before starting setup, make sure that the BT on the top panel INPUT indicator is lit. If anything other than BT is on, press the INPUT button several times until BT is on.
2. Press the PAIR button on the rear panel for 3 seconds to put the unit in Bluetooth pairing mode. At this time, BT of the INPUT indicator starts blinking. Open the Bluetooth settings on your smartphone or tablet and select "LUXMAN ASC-S5" from the list of available devices. It may take some time for your device to detect this unit and to be displayed in the list.

When paired successfully, BT of the INPUT indicator of this unit changes from blinking to lighting.

Start playing music on your smartphone or tablet. If the volume of the music being played is low, turn up the volume of your smartphone or tablet before performing volume control on the unit.

*This unit can store pairing with multiple Bluetooth compatible devices.

METHOD OF OPERATION

USB memory playback

By inserting a USB memory into the USB (A type) terminal on the back of this unit, you can play music data built in the USB memory.

When a USB memory is inserted into this unit, the input of this unit automatically switches to USB, and playback of the built-in music data starts in alphabetical order of file name.

If you want to stop playback, switch to another input with the INPUT button or remove the inserted USB memory.

*You can not use music pause / stop / song operation with the USB memory playback function of this unit.

*You can change the playback order of music data by putting playlist files (such as m3u specifications) in the root folder in USB memory.

Music playback by optical digital input

Press the unit's INPUT button and select OPT (Optical: Optical Digital).

It is the same even if you select the optical digital from the main menu screen of the dedicated application.

Use an optical cable to digitally connect an audio device with an OPTICAL output to the OPTICAL IN terminal of this unit.

The music played on the connected audio device is played from the projector's speaker.

Music playback by analog input

Press the unit's INPUT button several times to select AUX (analog input).

The same is true if you select Line In from the main menu screen of the dedicated application.

Connect the audio equipment with analog output and the ANALOG IN terminal of this unit with a line cable (stereo / mini plug type) in an analog manner. The music played on the connected audio device is played from the projector's speaker.

From the device list screen of the dedicated application, you can add a second device or device of the same series, or play a multi room or stereo pair.

METHOD OF OPERATION

Multi-room playback

[Solo mode]

When multiple devices are displayed on the device list screen, each device is operating independently.

By pressing the device icon, you can select Input from the main menu screen to play different music for each device.

[Multi mode]

When you want to play the same music on multiple devices, the devices need to be in the same group. Hold down the icon of one device on the device list screen for 2 seconds, then drag it onto the second device you want to group and stack it, the two devices will be in the same group and play the same music I can.

[Cancel multi mode]

When multiple devices are grouped, hold down the device icon for 2 seconds and then drag and release downward to release the group.

METHOD OF OPERATION

LUXMAN

Stereo pair playback

When multiple devices are grouped, you can change the audio channel played by the device by pressing the audio channel selection icon.

Set the audio channel of this unit on the left side to L and the audio channel of this unit on the right side to R of two units of this unit installed in the same room, the audio stereo (LR) signal. You can play stereo pairs with independent.

Music playback by optical digital output

Use an optical cable to digitally connect an audio device with the OPTICAL OUT connector of this unit and the OPTICAL input. The music played on this unit is played on the connected audio device.

Music playback by analog output

Connect an analog audio device with the ANALOG OUT connector of this unit and an analog input with a line cable (stereo / mini plug type).

The music played on this unit is played on the connected audio device.

SPECIFICATIONS

LUXMAN

Type: Streaming Speaker

Model name: ASC-S5

Output: Woofer 30W + tweeter 5W + Tweeter 5W + 5W for left and right channel

Speaker: Woofer 100mm + tweeter 25mm × 3

Crossover frequency: 2,300 Hz

Frequency response: 50-20,000 Hz (+0, -3 dB)

Input: Wi-Fi, wired LAN, USB, Bluetooth, OPTICAL, ANALOG (AUX)

Output: Wi-Fi, wired LAN, OPTICAL, ANALOG (AUX)

Wi-Fi standard: 2.4 GHz 802.11 b / g / n

Wired LAN standard: 10/100 Mbps

Bluetooth standard: 2.4G SBC, AAC, aptX, aptX HD

Accessories: Power cable, cleaning cloth, owner's manual (this manual), service information, warranty card

Power supply voltage: AC100-240V ~50 / 60Hz

Power consumption: 50W (according to the provisions of the Electrical Appliances and Materials Safety Act), 0.5W (in standby mode)

Maximum dimensions: 150 (width) x 250 (height) x 170 (depth) mm (height and depth include wheels)

Weight: 4.0kg (body)

Manufacturer: IAG Group Ltd.

Add: Sanecore Science & Technology Industry Park, Jiuwei Village, Xixiang Town, Shenzhen, China

TRADEMARKS OF EACH COMPANY



The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance.



Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc or its affiliates.



© Apple, the Apple logo, Airplay, iPod, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. And other countries. App Store is a service mark of Apple Inc.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. And any use of such marks by LUXMAN Corporation, Incorporated is under license. Other trademarks and trade names are those of their respective owners.



Qualcomm®
aptX™ HD

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries, used with permission. Qualcomm aptX is a product of Qualcomm Technologies International, Ltd.

LUXMAN

**English(US)**

Use your phone, tablet or computer as a remote control for Spotify.
Go to spotify.com/connect to learn how

German

Verwende dein Smartphone, Tablet oder deinen Computer als Fernbedienung für Spotify. Auf spotify.com/connect erfährst du mehr.

French

Utilisez votre téléphone, votre tablette ou votre ordinateur comme une télécommande pour contrôler Spotify. Accédez à spotify.com/connect pour en savoir plus.

Japanese

スマホ、タブレット、パソコンをリモコンにして、**Spotify** で音楽を楽しめます。詳しくは spotify.com/connect をご覧ください。

CAUTION ON SAFETY

<< FCC >>

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

<< CE >>

Use the ASC-S5 in the environment with the temperature between -10°C and 40°C , otherwise, it may damage your ASC-S5. It can be operating under 2000m

Hereby, (IAG Group Ltd.) declare that the radio equipment type ASC S5 is compliance with Directive 2014/53/EU.



For this device, Head SAR and Body SAR was performed with the device configured in the positions according to EN62209-1:2016 & EN62209-2:2010, and Body SAR was performed with the device 0mm from the phantom. Body SAR was also performed with the headset attached and without.

Caution:

To prevent possible hearing damage, do not listen at high
ne levels for long periods.



CAUTION:

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- Do not expose the set to dripping or splashing fluids.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- This apparatus is considered to be used for temperate zone.

ACHTUNG:

- Die Belüftung sollte auf keinen Fall durch das Abdecken der Belüftungsöffnungen durch Gegenstände wie beispielsweise Zeitungen, Tischtücher, Vorhänge o. Ä. behindert werden.
- Auf dem Gerät sollten keinerlei direkten Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden.
- Bitte beachten Sie bei der Entsorgung der Batterien die geltenden Umweltbestimmungen.
- Das Gerät sollte keinerlei Flüssigkeit, also keinem Tropfen oder Spritzen ausgesetzt werden.
- Auf dem Gerät sollten keinerlei mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden.
- Dieses Gerät ist für die Verwendung in einer gemäßigten Zone ausgelegt.

ATTENTION:

- La ventilation ne doit pas être gênée en recouvrant les ouvertures de la ventilation avec des objets tels que journaux, rideaux, tissus, etc.
- Aucune flamme nue, par exemple une bougie, ne doit être placée sur l'appareil.
- Veillez à respecter l'environnement lorsque vous jetez les piles usagées.
- L'appareil ne doit pas être exposé à l'eau ou à l'humidité.
- Aucun objet contenant du liquide, par exemple un vase, ne doit être placé sur l'appareil.
- Cet appareil est prévu à l'utilisation dans une zone tempérée.

PRECAUZIONI:

- Le aperture di ventilazione non devono essere ostruite coprendole con oggetti, quali giornali, tovaglie, tende e così via.
- Non posizionare sull'apparecchiatura fiamme libere, come ad esempio le candele accese.
- Prestare attenzione agli aspetti legati alla tutela dell'ambiente quando si smaltisce la batteria.
- L'apparecchiatura non deve essere esposta a gocciolii o spruzzi.
- Non posizionare sull'apparecchiatura nessun oggetto contenete liquidi, come ad esempio i vasi.
- Questo apparecchio è concepito per un utilizzo in zone temperate.

PRECAUCIÓN:

- La ventilación no debe quedar obstruida por hacerse cubierto las aperturas con objetos como periódicos, manteles, cortinas, etc.
- No debe colocarse sobre el aparato ninguna fuente inflamable sin protección, como velas encendidas.
- A la hora de deshacerse de las pilas, respete la normativa para el cuidado del medio ambiente.
- No se expondrá el aparato al goteo o salpicaduras cuando se utilice.
- No se colocarán sobre el aparato objetos llenos de líquido, como jarros.
- Este aparato está diseñado para ser utilizado en zonas templadas.

WAARSCHUWING:

- De ventilatie mag niet worden belemmerd door de ventilatieopeningen af te dekken met bijvoorbeeld kranten, een tafelkleed, gordijnen, enz.
- Plaats geen open vlammen, bijvoorbeeld een brandende kaars, op het apparaat.
- Houd u steeds aan de milieuvorschriften wanneer u gebruikte batterijen wegdoet.
- Stel het apparaat niet bloot aan druppels of spatten.
- Plaats geen voorwerpen gevuld met water, bijvoorbeeld een vaas, op het apparaat.
- Deze apparatuur wordt geacht te worden gebruikt voor gematigde zones.

OBSERVERA:

- Ventilationen bör inte förhindras genom att täcka för ventilationsöppningarna med föremål såsom tidningar, bordsdukar, gardiner osv.
- Inga blottade brandkällor, såsom tända ljus, bör placeras på apparaten.
- Tänk på miljöaspekterna när du bortskaffar batteri.
- Apparaten får inte utsättas för vätska.
- Inga objekt med vätskor, såsom vaser, får placeras på apparaten.
- Den här anordningen ska användas i tempererad zon.

• DECLARATION OF CONFORMITY

We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards: EN62368-1, EN55032, EN55020, EN61000-3-2 and EN61000-3-3. Following the provisions of 2014/35/EU, 2014/30/EU and 2011/65/EU Directive.

• ÜBEREINSTIMMUNGSERKLÄRUNG

Wir erklären unter unserer Verantwortung, daß dieses Produkt, auf das sich diese Erklärung bezieht, den folgenden Standards entspricht: EN62368-1, EN55032, EN55020, EN61000-3-2 und EN61000-3-3. Entspricht den Verordnungen der Direktive 2014/35/EU, 2014/30/EU und 2011/65/EU.

• DECLARATION DE CONFORMITE

Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants: EN62368-1, EN55032, EN55020, EN61000-3-2 et EN61000-3-3. D'après les dispositions de la Directive 2014/35/EU, 2014/30/EU et 2011/65/EU.

• DICHIARAZIONE DI CONFORMITÀ

Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative: EN62368-1, EN55032, EN55020, EN61000-3-2 e EN61000-3-3. In conformità con le condizioni delle direttive 2014/35/EU, 2014/30/EU e 2011/65/EU.

• DECLARACIÓN DE CONFORMIDAD

Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares: EN62368-1, EN55032, EN55020, EN61000-3-2 y EN61000-3-3. Siguiendo las provisiones de las Directivas 2014/35/EU, 2014/30/EU y 2011/65/EU.

• EENVORMIGHEIDSVERKLARING

Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit product, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen: EN62368-1, EN55032, EN55020, EN61000-3-2 en EN61000-3-3. Volgens de bepalingen van de Richtlijnen 2014/35/EU, 2014/30/EU en 2011/65/EU.

• ÖVERENSSTÄMMELSESI NTYG

Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder: EN62368-1, EN55032, EN55020, EN61000-3-2 och EN61000-3-3. Enligt stadgarna i direktiv 2014/35/EU, 2014/30/EU och 2011/65/EU.

CAUTION:

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.
The mains plug is used to completely interrupt the power supply to the unit and must be with easy access by the user.

VORSICHT:

Um dieses Gerät vollständig von der Stromversorgung abzutrennen, trennen Sie bitte den Netzstecker von der Wandsteckdose ab.
Die Hauptstromer werden vollständig um die Stromversorgung zum Gerät voll und ganz unterbrechen. Es muss für den Benutzer qui und einfach zu erreichen sein.

PRECAUTION:

Pour déconnecter complètement ce produit du courant secteur, arrachez la prise de la prise murale.
La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement.

ATTENZIONE:

Per scollegare definitivamente questo prodotto dalla rete di alimentazione elettrica, togliere la spina dalla relativa presa.
La spina di rete viene utilizzata per interrompere completamente l'alimentazione all'unità e deve essere facilmente accessibile all'utente.

CLASS I LASER PRODUCT
LUOKAN I LASERLAITE
KLASS I LASERAPPARAT

For CD Player

"CLASS I LASER PRODUCT"

ADVARSEL: USYNLIG LASERSTRALING VED ABNING, NAR
SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION.
OMGA UDSÆTTELSE FOR STRALING.

VAROITUS: LAITTEEN KÄYTTÄMINEN MUULLA KUIN TASSÄ
KÄYTTÖOHJEESSÄ MAINITULLA TAVALLA SAATTA
ALISTAA KAYTTAJAN TURVALLISUUSLUOKAN I
YLITTÄVÄLLE NÄKYMÄTÖMÄLLE LASERSÄTEILYLLE.

WARNING: OM APPARATEN ANVÄRDS PÅ ANNAT SÄTT ÄN I DENNA
BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAR
UTSÄTTAS FÖR OSYNLIG LASERSTRÄLNING SOM
ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS I.



ATTENZIONE: QUESTO APPARECCHIO È DOTATO DI DISPOSITIVO
OTTICO CON RAGGIO LASER.
L'USO IMPROPRIO DELL'APPARECCHIO PUÒ CAUSARE PERICOLOSE
ESPOSIZIONI A RADIAZIONI.

CAUTION:

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE
OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN
MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
THE SUPER AUDIO CD PLAYER SHOULD NOT BE ADJUSTED
OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED
SERVICE PERSONNEL.

PRECAUCIÓN:

Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared.
El enchufe de la alimentación se utiliza para interrumpir por completo el suministro de alimentación a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso.

VOORZICHTIGHEID:

Om de voeding van dit product volledig te onderbreken moet de stekker uit het stopcontact worden getrokken.

De netstekker wordt gebruikt om de stroomtoevoer naar het toestel volledig te onderbreken en moet voor de gebruiker gemakkelijk bereikbaar zijn.

FÖRSIKTIGHETSMÅTT:

Koppla loss släckproppen från eluttaget för att helt skilja produkten från näte.

Släckproppen används för att helt bryta strömförsörjningen till apparaten och den måste vara lätt i gång för användaren.

NOTE:



- This symbol represents CLASS II apparatus with functional earth terminal. (Signal ground terminal)
- Dieses Symbol stellt ein Gerät der Klasse II mit Funktions erdschluss dar. (Anschluss signalmasse)
- Ce symbole représente un appareil de CLASSE II avec une borne de terre fonctionnelle. (Borne de terre du signal)
- Questo simbolo rappresenta un apparecchio di CLASSE II con terminale di messa a terra funzionale. (Terminale segnale di massa)
- Este símbolo representa un aparato CLASE II con terminal a tierra funcional. (Terminal de tierra de la señal)
- Dit symbool staat voor CLASS II apparatuur met functionele aardingsaansluiting. (Signaal aardklem)
- Den här symbolen representerar en anordning enligt CLASS II med funktionell jordterminal. (Signalterminal)



- This symbol represents CLASS II apparatus without functional earth.
- Dieses Symbol stellt ein Gerät der Klasse II ohne Funktionserde dar.
- Ce symbole représente un appareil de CLASSE II sans borne de terre fonctionnelle.
- Questo simbolo rappresenta un apparecchio di CLASSE II senza messa a terra funzionale.
- Este símbolo representa un aparato CLASE II sin terminal a tierra funcional.
- Dit symbool staat voor CLASS II apparatuur zonder functionele aardingsaansluiting.
- Den här symbolen representerar en anordning enligt CLASS II utan funktionell jordterminal.



- This symbol that touching uninsulated terminals or wiring may result in an unpleasant sensation.
- Before connecting to speakers, turn off the main power switch.

LUXMAN CORPORATION

1-3-1 Shinyokohama, Kouhoku-ku, Yokohama-shi, Kanagawa 222-0033, Japan

AG00638A53C
Printed in china

A NOTE ABOUT RECYCLING:

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations.

When discarding the unit, comply with local rules or regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning chemical waste.

This product and the accessories packed together constitute the applicable product according to the WEEE directive except batteries.



HINWEIS ZUM RECYCLING:

Das Verpackungsmaterial dieses Produktes ist für zum Recyceln geeignet und kann wieder verwendet werden. Bitte entsorgen Sie alle Materialien entsprechend der örtlichen Recycling Vorschriften.

Beachten Sie bei der Entsorgung des Gerätes die örtlichen Vorschriften und Bestimmungen.

Die Batterien dürfen nicht in den Hausmüll geworfen oder verbrannt werden, bitte geben Sie die Batterien gemäß örtlichen Bestimmungen an den Sammelstellen oder Sortiermüllplätzen ab.

Dieses Produkt zusammen mit den Zubehörteilen ist das geltende Produkt der WEEE-Direktive, davon ausgenommen sind die Batterien.

UNE REMARQUE CONCERNANT LE RECYCLAGE:

Les matériaux d'emballage de ce produit sont recyclables et peuvent être réutilisés. Veuillez disposer de tout matériau conformément aux règlements de recyclage locaux.

Lorsque vous mettez cet appareil au rebut, respectez les lois ou réglementations locales.

Les piles ne doivent jamais être jetées ou incinérées, mais mises au rebut conformément aux règlements locaux concernant les déchets chimiques.

Ce produit et les accessoires emballés ensemble sont des produits conformes à la directive DEEE sauf pour les piles.

NOTA RELATIVA AL RICICLAGGIO:

I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smaltire i materiali conformemente alle normative locali sul riciclaggio.

Per smaltire l'unità, osservare la normativa in vigore nel luogo di utilizzo.

Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici.

Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie.

ACERCA DEL RECICLAJE:

Los materiales de embalaje de este producto son reciclables y se pueden volver a utilizar. Disponga de estos materiales siguiendo los reglamentos de reciclaje de su localidad.

Cuando se desecha de la unidad, cumpla con las reglas o reglamentos locales.

Las pilas nunca deberán tirarse ni incinerarse. Deberá disponer de ellas siguiendo los reglamentos de su localidad relacionados con los desechos químicos.

Este producto junto con los accesorios empaquetados es el producto aplicable a la directiva RAEE excepto pilas.

EEN AANTEKENING WAT BETREFT HET RECYCLEREN:

Het verpakkingsmateriaal van dit product is recycleerbaar en kan opnieuw gebruikt worden. Er wordt verzocht om zich van elk afvalmateriaal te ontdoen volgens de plaatselijke voorschriften.

Volg voor het wegdoen van de speler de voorschriften voor de verwijdering van wit- en bruingoed op.

Batterijen mogen niet worden weggegooid of verbrand, maar moeten volgens de plaatselijke voorschriften betreffende chemisch afval worden verwijderd.

Op dit product en de meegeleverde accessoires, met uitzondering van de batterijen, is de richtlijn voor afgedankte elektrische en elektronische apparaten (WEEE) van toepassing.

EN KOMMENTAR OM ÅTERVINNING:

Produkters emballage är återvinningsbart och kan återanvändas. Kassera det enligt lokala återvinningsbestämmelser.

När du kasserar enheten ska du göra det i överensstämmelse med lokala regler och bestämmelser.

Batterier får absolut inte kastas i soporna eller brännas. Kassera dem enligt lokala bestämmelser för kemiskt avfall.

Denna apparat och de tillbehör som levereras med den är de som uppfyller gällande WEEE-direktiv, med undantag av batterierna.