 


USE AND CARE GUIDE

Remote Controlled LED A19 Color Changing Smart Bulb Kit

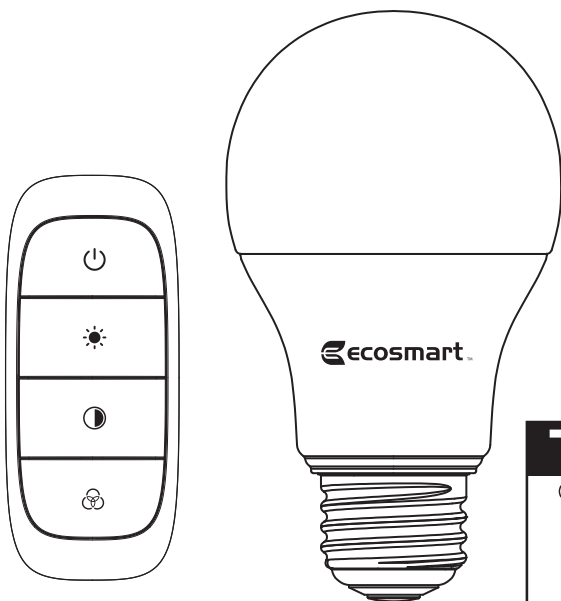

Questions, problems, missing parts? Before returning to the store,
call EcoSmart Customer Service 8 a.m. - 7 p.m., EST,
Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM/ECOSMART


THANK YOU


We appreciate the trust and confidence you have placed in EcoSmart through the purchase of this bulb. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing EcoSmart!


Table of Contents


Safety Information	2	Quick Start Guide by Remote	4
Wireless Protocol	2	Operation	4
Warranty	2	Factory Default	6
Pre-Installation	3	FCC Regulation	6
Bulb Specification	3	Troubleshooting	7
		Compatible Bluetooth Bulb Specification ..	7

Safety Information


 **WARNING:** Only use the control provided with or specified by these instructions to control this lamp. This lamp will not operate properly when connected to a standard (incandescent) dimmer or dimming control.


 **WARNING:** Not for use in totally enclosed fixtures. Not for use in recessed fixtures.

 **WARNING:** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

 **WARNING:** This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

 **WARNING:** For indoor use only. Do not use where directly exposed to water.

 **WARNING:** This device is not intended for use with emergency exits.

 **CAUTION:** Risk of Shock-Turn off power before inspection, installation, or removal. Do not open. There are no user serviceable parts inside.

Wireless Protocol

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by The Home Depot is under license. Other trademarks and trade names are those of their respective owners.




Warranty

THREE-YEAR LIMITED WARRANTY


Limited Warranty: Bulb is guaranteed to last 10 years based on 3 hours use per day, 7 days per week. The remote is guaranteed to last 3 years based on 100 times use per day, 7 days per week. The remote guarantee does not include normal wear and tear and batteries. If this product does not last 3 years after date of purchase (based on above using condition) due to a defect in materials or workmanship, please bring the defective product and a receipt indicating proof of purchase to any Home Depot store. The Home Depot will provide a replacement or, at our discretion, a store credit for the value of the original purchase price. This warranty will be voided for misuse of product per the caution statement. Some states do not allow the exclusion of limitation or consequential damages, so the above exclusion may not apply to you. This warranty gives you special legal rights and you may also have other rights that vary from state to state and province to province. Please see a store for more details.

Pre-Installation


Package Contents

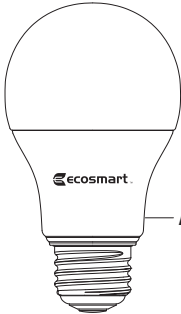

A

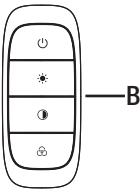


B

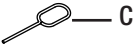


C

Model	Part	Description	Quantity
11A19060WRGBW02	A	A19 LED Bulb	1
11A19060WRGBWR1	B	Remote	1
	C	Reset Pin	1


REMOTE INTRODUCTION

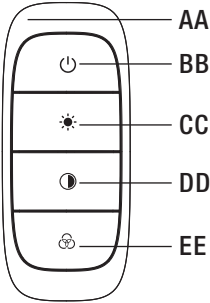

AA
BB
CC
DD
EE

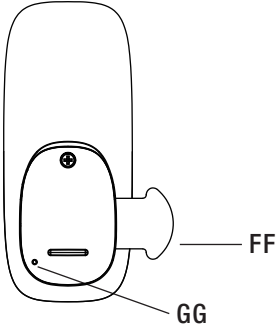

FF
GG

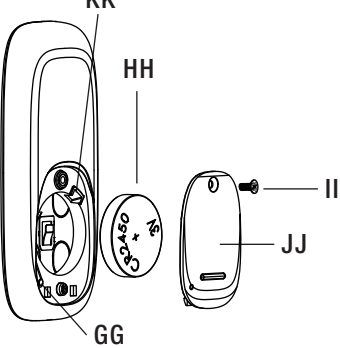

KK
HH
II
JJ
GG

Part	Description
AA	Indicator Light
BB	Remote ON/OFF
CC	Dimmer
DD	Customize White Light
EE	Change colors

Part	Description
FF	Plastic Battery Strip
GG	Reset Button (Pinhole)
HH	Battery CR2450 3V
II	Screw
JJ	Battery Cover
KK	Groove to pry out the battery

Bulb Specification

Model	Input Volts (AC)	Input Frequency (Hz)	Input Watts (W)	Lumens (LM)	Efficacy (LM/W)	CRI
11A19060WRGBW01	120	60	9	800	88	90

Quick Start Guide by Remote



NOTE: LED Bulb (A) and the remote (B) in the pack are already paired at the factory.

- 1** Screw the LED Bulb (A) into a standard E26 socket and make sure it is powered on.
- 2** Prepare the Remote (B) and remove the Plastic Battery Strip (FF) beneath the Battery Covering (JJ), Indicator Light (AA) will begin to blink indicating the power is on.
- 3** You are good to go now! Follow the instructions below to control your lights.

 
Operation

ON/OFF

- Press the ON/OFF button (⏻) (BB) to turn the light ON or OFF.

Dimming

- Press the dimming button (☀️) (CC) to change the brightness from 3%-100%. There are 5 brightness levels to dim the light: 100% -75%-50%-25%-3%.
- There are two ways to change the brightness with the dimming button (☀️) (CC):
 - Short presses on the button change the brightness in a step manner.
 - Holding down the button continuously, changes the brightness with a smooth transition.



Remote On/Off

Dimmer

Customize White Light

Change Colors

One Remote Controls
up to 20 Lights

Customize White Light

- Press the Customize White Light button (●) (DD) to customize your white light temperature from 2700K to 6500K. There are 5 color temperature options to change: 2700K-3500K-4500K-5500K-6500K.
- There are two ways to change the white light temperature with the Customize White Light button (●) (DD):
 - Short presses on the button change the white light temperature incrementally.
 - Holding down the button continuously changes the color temperature with a smooth transition.

Color Changing

 
 
- Press the Color changes button (🌈) (EE) to change the colors. There are 6 colors options to change: Red-Yellow-Green-Cyan-Blue-Magenta.
- There are two ways to change the color with the Color changes button:
 - Short presses on the button change the color incrementally.
 - Holding down the button continuously changes the color with a smooth transition.

Pairing the LED Bulb


- To pair an additional compatible LED bulb to your remote, follow the steps below.
- Compatible Bluetooth bulbs can be purchased on [Homedepot.com](https://www.homedepot.com) under product number 1006828294.
- If a compatible bulb has been paired to a remote before, it must be unpaired from original remote before it can be paired to a new one. See instructions for unpairing the LED bulb.

Operation (continued)

- Turn the bulb on and hold the remote within 2 inches of the LED bulb.

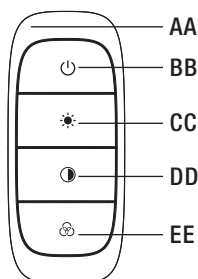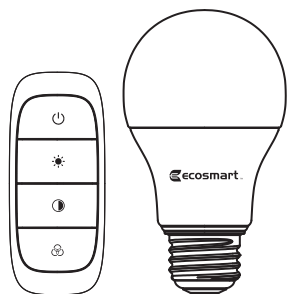


- Press and hold the ON/OFF button (BB) and Dimming button (CC) at the same time for 3 seconds. The indicator light (AA) will begin to flash.
- The remote (B) will start to search for the LED bulb (A). The indicator light (AA) will flash rapidly until the LED Bulb (A) is detected.
- During the linking process, the LED bulb (A) will flash one time. The indicator light on the remote (B) will remain on for 3 seconds. This indicates that the LED bulb (A) and remote (B) have been successfully linked.

 **NOTE:** 1. The existing linked LED bulb may blink. If this occurs, press any button on the remote to stop the blinking. Then proceed with repeating the linking process.
2. One remote controls up to 20 LED bulbs.

Unpairing the LED Bulb

If you want to unpair a LED Bulb that was already paired with a remote, you need to proceed to Step “Unpairing the LED Bulb” with original remote and then proceed to Step “Pairing the LED Bulb” to pair it with the preferred remote.

 - Position the remote (B) within 2 inches of the LED Bulb.

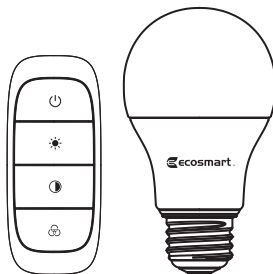


- To unpair the LED Bulb with the remote, hold down the ON/OFF button (BB) and the Customize White Light button (DD) at the same time for 3 seconds. The indicator light (AA) will flash as it attempts to detect the LED Bulb. Once detected, the indicator light (AA) will flash rapidly indicating the unpairing process is underway.
To reset the LED Bulb (A), flip the power switch off and on once.

 **NOTE:** Only one LED Bulb will be unpaired at a time. To unpair all the LED Bulbs simultaneously, reset all the LED Bulb and remote by following the instructions in the factory default section of the instructions.

Reset to Factory Setting

- Using the wall switch, physically switch ON and OFF 6 times within 5 seconds.
- The LED bulb will flash twice after a successful reset.

 
Factory Default

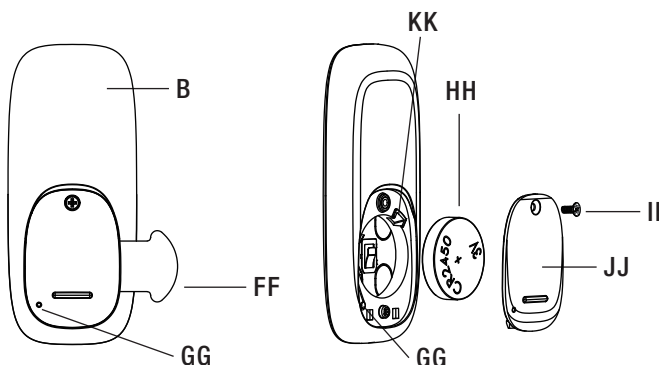

- To reset the remote (B), insert the reset pin (C) into the reset button pin hole (GG) and hold for three seconds. This will reset the remote without removing the battery cover (JJ).
- To reset the LED bulb (A), flip the power switch on and off six times within 5 seconds.

Low Power Notification and Replacing the Battery

- The indicator light (AA) will blink twice fast indicating that the battery is low.
- To replace the battery, remove the battery cover (JJ) with a screwdriver.
- Use a flat head screwdriver to remove the battery (HH) and replace with a new 3V CR2450 battery (HH).
- Replace the battery cover (JJ) on the remote (B) and tighten the screws (II).

 **NOTE:** Battery will weaken with age and should be replaced before leaking takes place as this will damage the remote. Dispose of used batteries properly and keep them out of the reach of the children.

FCC Regulation

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna; increase the separation between the equipment and receiver; connect the equipment into an outlet on a circuit different from that to which the receiver is connected; consult the dealer or an experienced radio/TV technician for help.

Troubleshooting

Troubleshooting: Control The LED Bulb by Remote

Problem	Possible cause	Solutions
The light cannot be turned on.	The power is off.	Ensure the power supply is on.
	The circuit breaker is off.	Ensure the circuit breaker is in the on position.
	<input type="checkbox"/> The battery power is off. <input type="checkbox"/> The battery is not installed correctly.	Make sure the battery CR2450 is installed correctly and still has power.
The remote does not work and no indicator light is on.	Plastic battery strip (FF) is not removed.	Remove plastic strip (FF).
	<input type="checkbox"/> The battery power is off. <input type="checkbox"/> The battery is not installed correctly.	Make sure the battery CR2450 is installed correctly and still has power.
The remote cannot pair the light successfully.	Plastic battery strip (FF) is not removed.	Remove plastic battery strip (FF).
	<input type="checkbox"/> The battery power is off. <input type="checkbox"/> The battery is not installed correctly.	Make sure the battery CR2450 is installed correctly and still has power.
	The devices need more time to respond.	Wait a second and try again.
	Remote has been linked with 20 LED Bulb and has reached the max limit.	Reset the remote and try again.
	The LED Bulb has been linked with another remote.	Reset light to factory default.
The remote cannot control the lights.	LED Bulb has not been linked successfully	Please refer to the solutions above for pairing issues.
	The light is out of control range.	Make sure the light is in control range.
	<input type="checkbox"/> The battery power is off. <input type="checkbox"/> The battery is not installed correctly.	Make sure the battery CR2450 is installed correctly and still has power.
The indicator is blinking constantly after resetting the remote.	The remote has been reset to factory default.	Press any button to stop the indicator from blinking. Repeat the linking process.
The remote fails to unpair the light when the indicator is blinking.	The devices have failed to respond to the steps of the unpairing process.	Press any button to interrupt the indicator blinking and retry the unpair process.

Compatible Bluetooth Bulb Specification

Model	Input Volts (AC)	Input Frequency (Hz)	Input Watts (W)	Lumens (LM)	Efficacy (LM/W)	CRI	Pack size
11A19060WRGBW21	120	60	9	800	88	90	A19 -2Pack

Remark:

- ☐ The compatible bluetooth bulbs can be purchased on Homedepot.com under product number: 1006828294



Questions, problems, missing parts? Before returning to the store,
call EcoSmart Customer Service 8 a.m. - 7 p.m., EST,
Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM/ECOSMART

Retain this manual for future use.