




ew 100 G4

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Παράρτημα οδηγός
Kısa Kılavuz
Краткая инструкция
快速指南
快速使用指南
クイックガイド
퀵 가이드

SENNHEISER

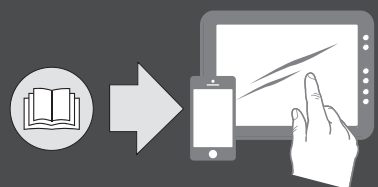

Sennheiser Documentation App



or online at
www.sennheiser.com/download
ew 100 G4_

Sennheiser electronic GmbH & Co. KG


Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany, Publ. 01/18, 575860/A01


EM 100



SKM 100

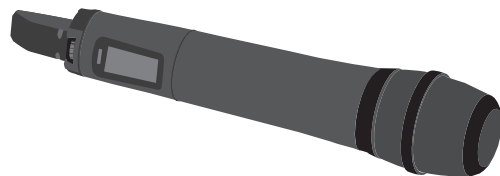


SKM 100-S

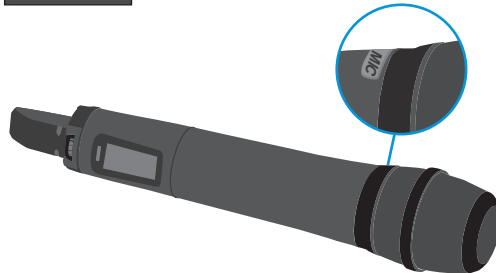

SK 100



Battery

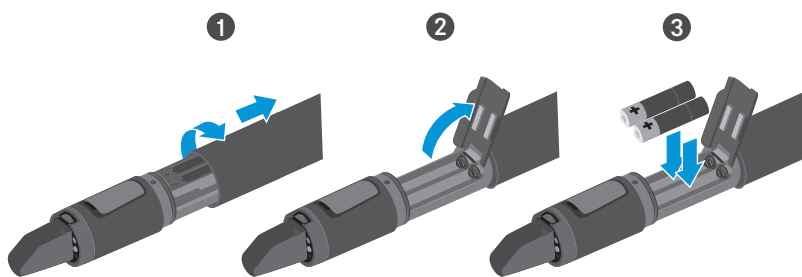


Low Battery





	100 %	> 8 h
	70 %	4 - 6 h
	30 %	2 - 3 h
LOW BATT		


Setup

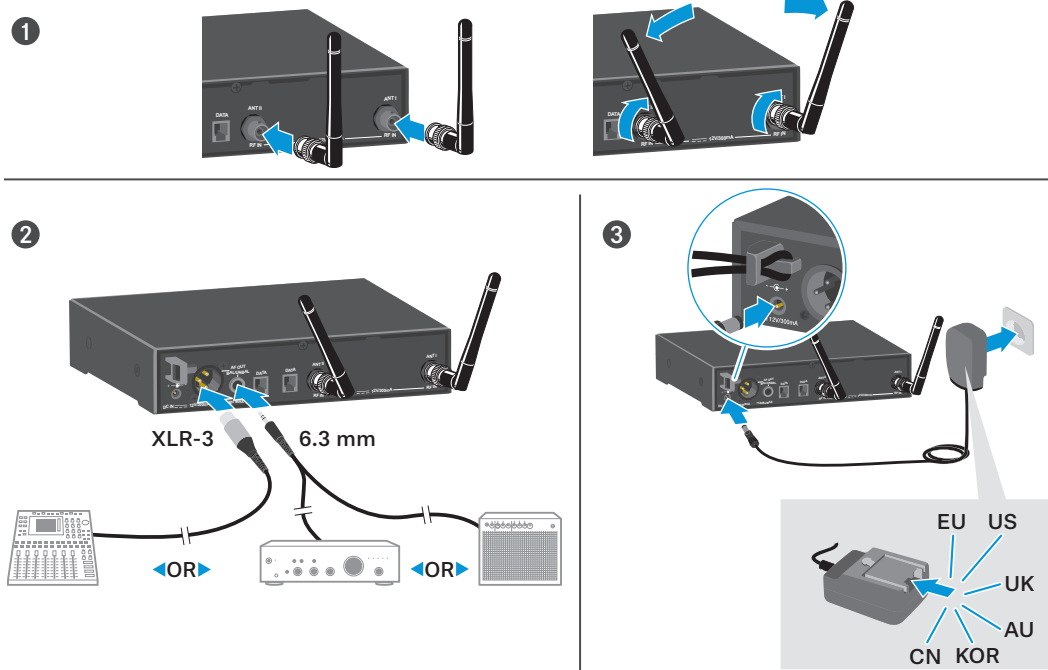


Standard display

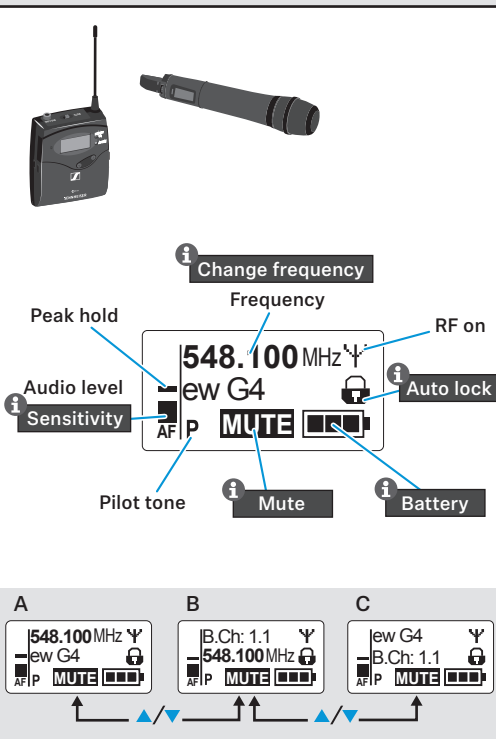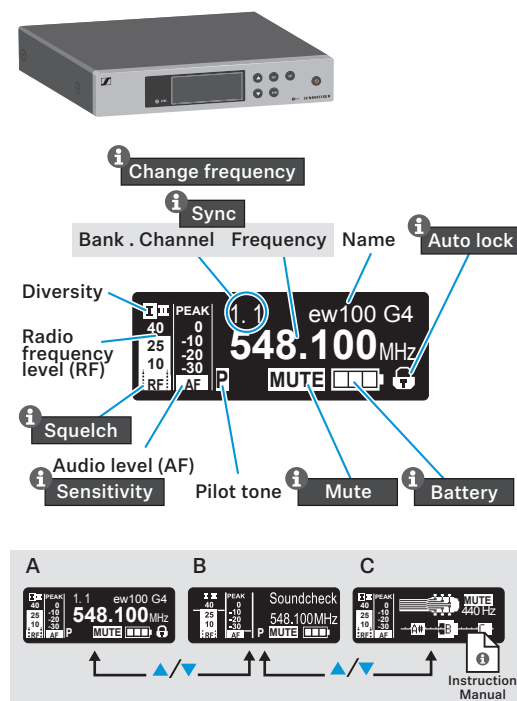


On

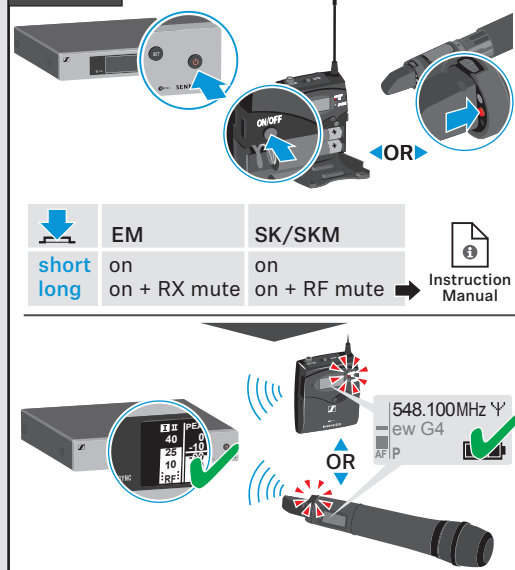


Off

 

Menu

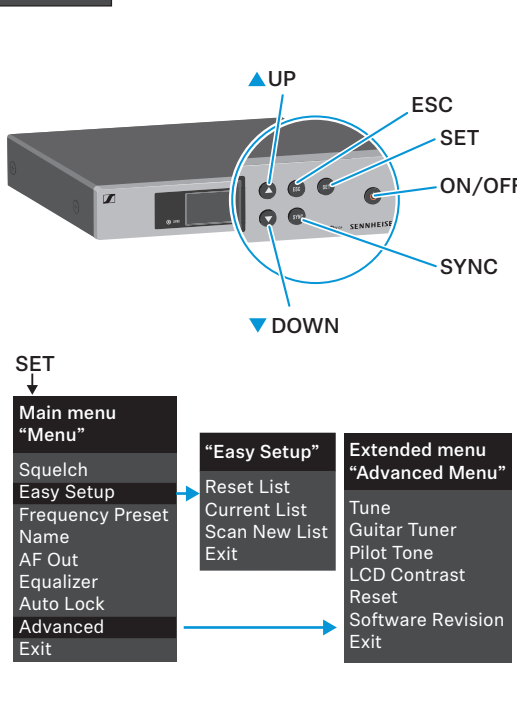


Menu

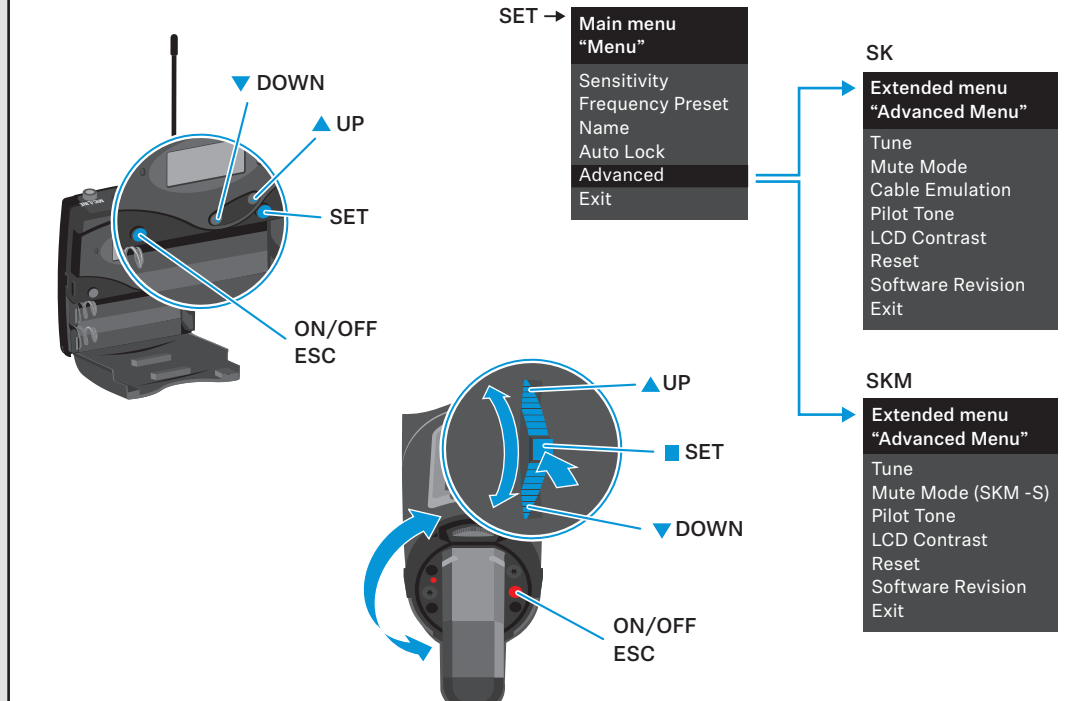


Auto lock


EM

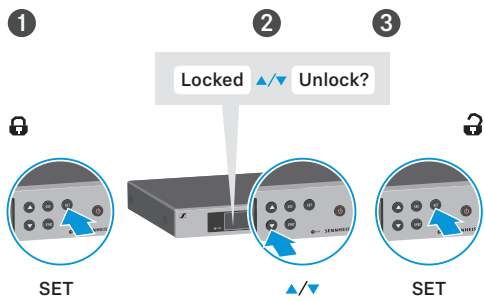

SKM

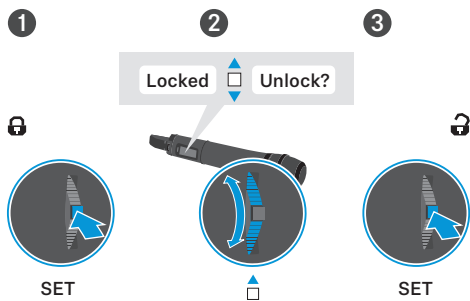

SK

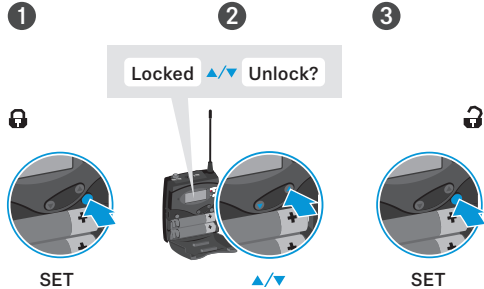


10 s → Auto lock

Instruction Manual

New frequency


Squelch

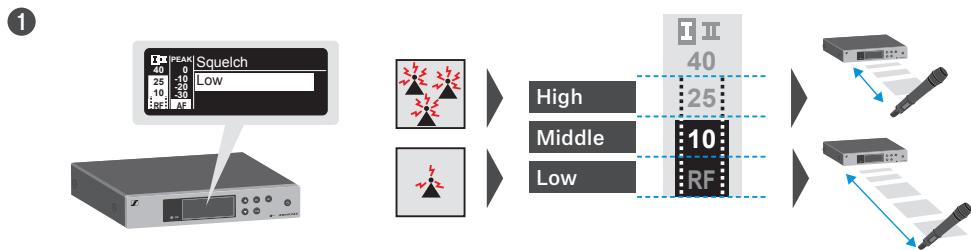

Change frequency

2 SKM/SK off!


3

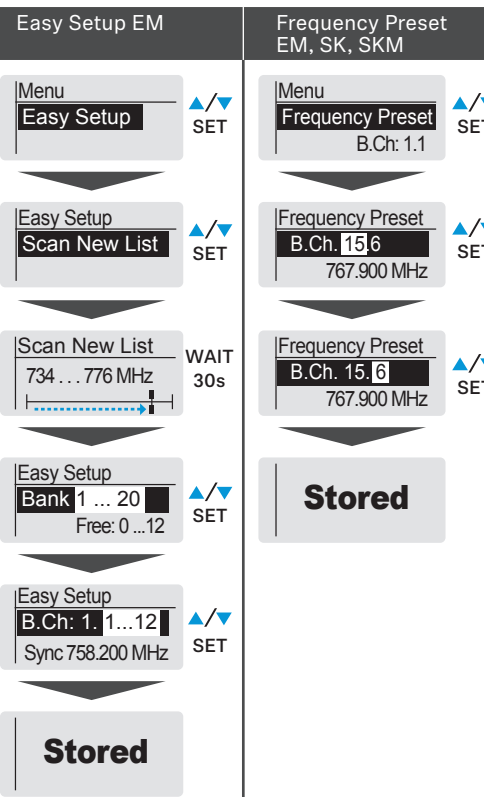

No frequency → 1 Squelch: Middle ...


Instruction Manual

Sync

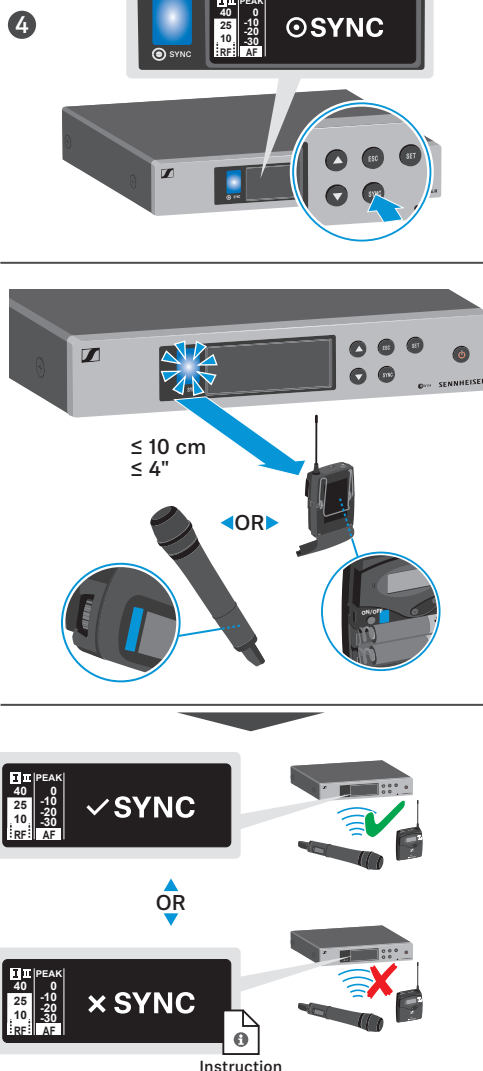


Sensitivity

5

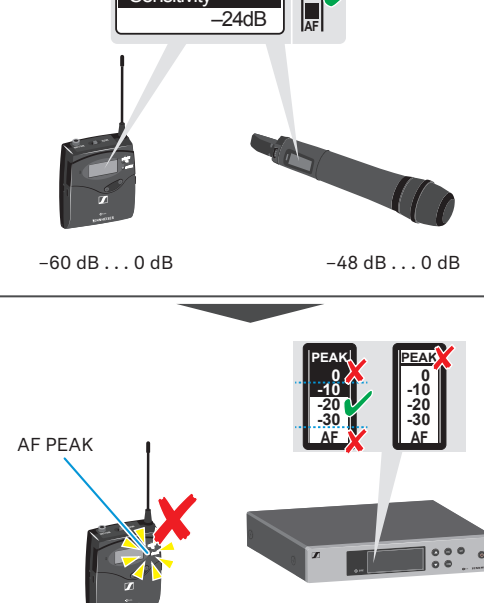

AF out

6

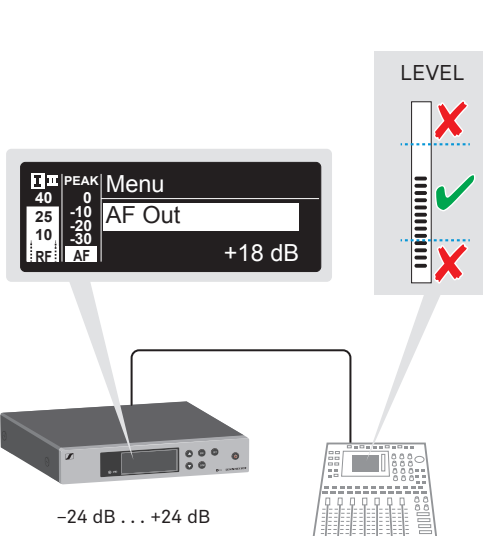


Mute

Instruction Manual


EM 100

SKM 100

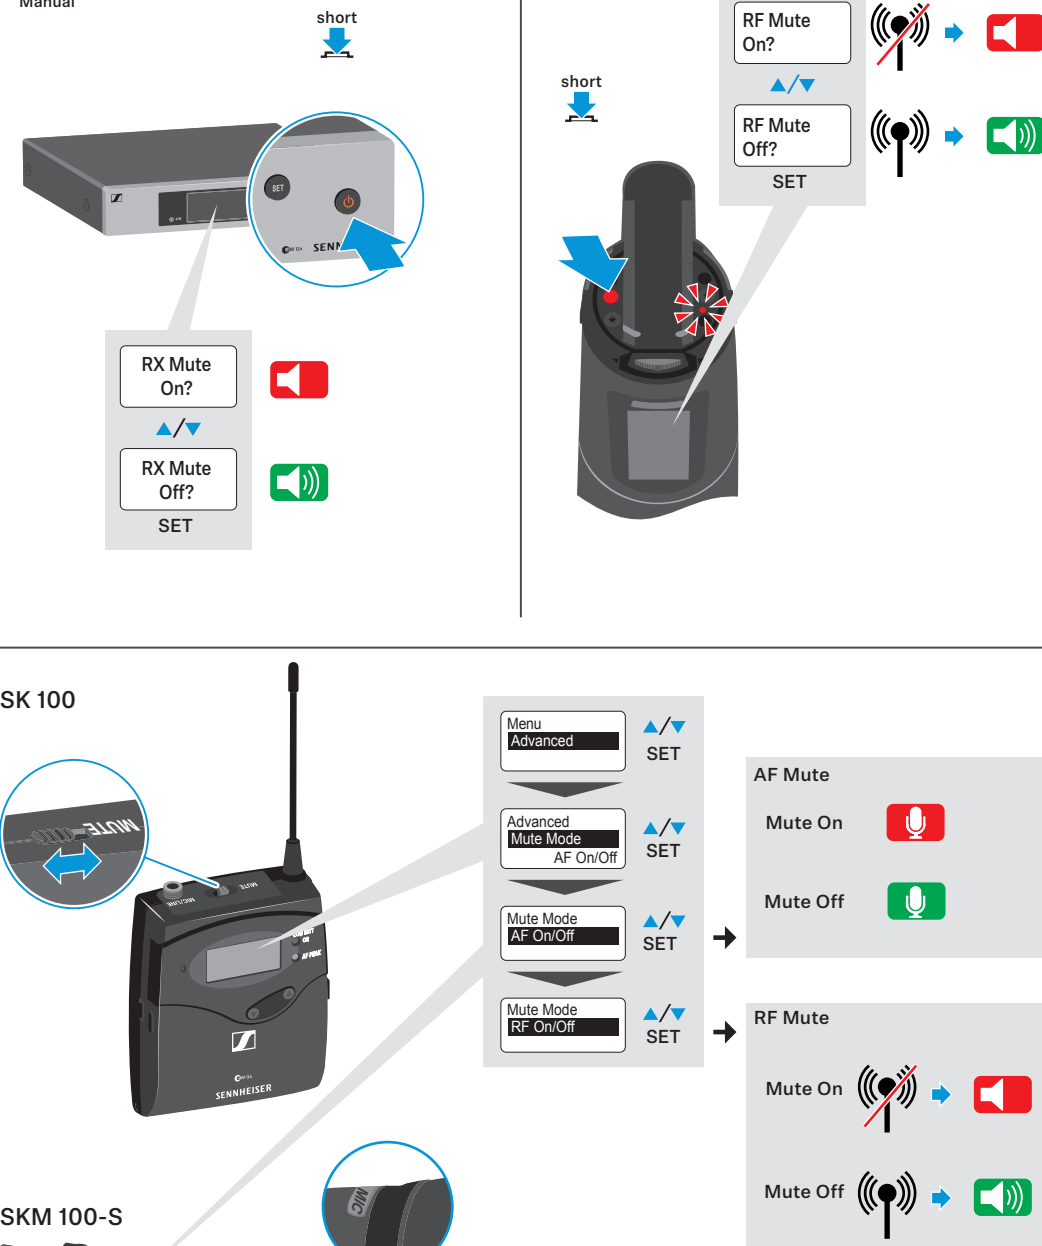


Multichannel - Easy Setup

Bank 1 ... 20; U
Channel 1 ... 12

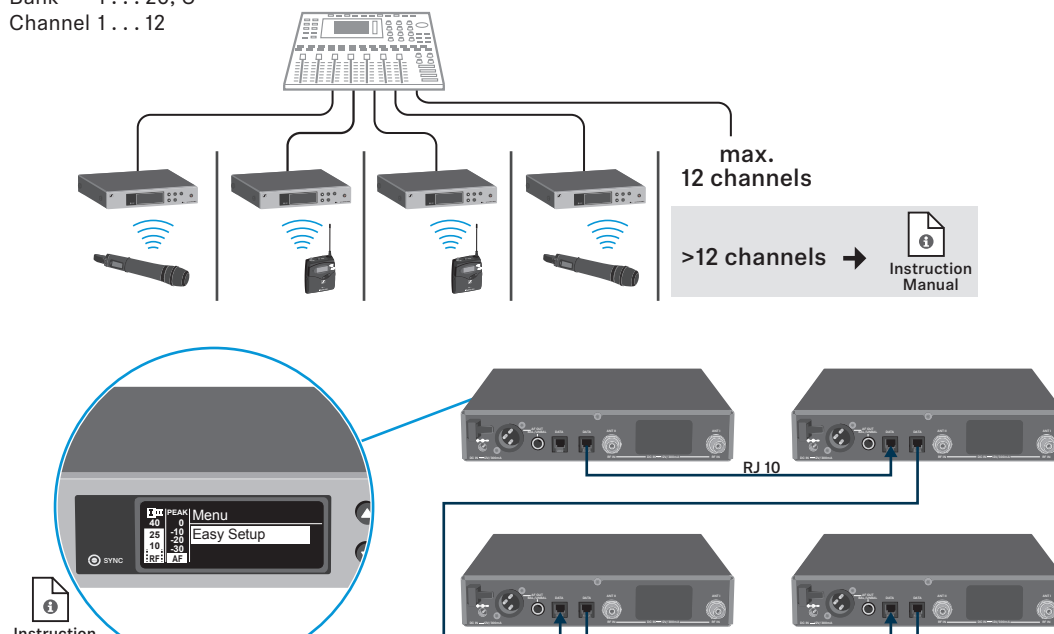

SKM

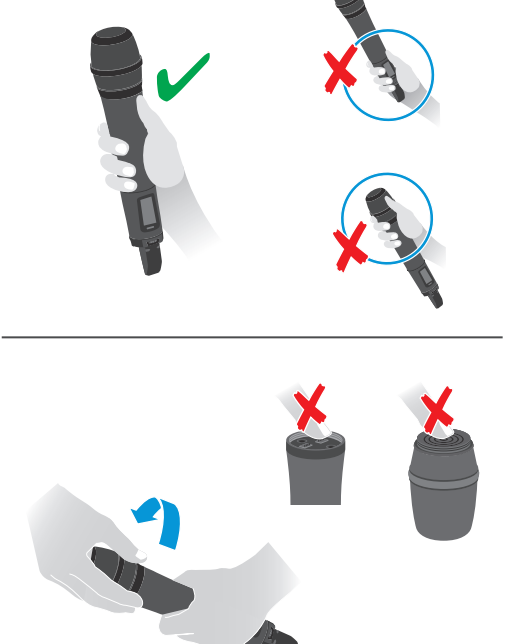

ME 2 | ME 4

