

CAUTION-ELECTRIC TOY
 NOT RECOMMENDED FOR CHILDREN
 UNDER 6 YEARS OF AGE. AS
 WITH ALL ELECTRIC PRODUCTS,
 PRECAUTIONS SHOULD BE
 OBSERVED DURING HANDLING
 AND USE TO PREVENT ELECTRIC
 SHOCK. INPUT: 120VAC, 60HZ 5.5W
 ONLY. OUTPUT: 12VDC, 0.2A

FCC NOTE:

THE ANTENNA PROVIDED IS A UNIQUE ANTENNA. BY
 INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS
 EQUIPMENT. SUCH UNAUTHORIZED INSTALLATION
 COULD VOID THE USER'S AUTHORITY TO OPERATE THE
 EQUIPMENT.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY
 RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED
 MODIFICATIONS TO THIS EQUIPMENT. SUCH
 MODIFICATIONS COULD VOID THE USER'S AUTHORITY
 TO OPERATE THE EQUIPMENT.

OPERATING INSTRUCTIONS

BATTERY INSTALLATION:- BATTERY LOADING

(The rechargeable Ni-Cd battery pack is not charged, please charge it for 4 hours prior to use)

(THE RECHARGEABLE Ni-Cd BATTERY PACK AND CHARGER MUST BE OPERATED BY ADULT ONLY.)

1. Plug the wall pack battery charger into wall outlet.
2. Connect the cables leading from the Battery Pack and the Charger together by snapping the jack and the socket tightly. (See Diagram 1)
3. To disconnect cables, press down on the clip and pull apart. (See Diagram 1)
4. After charging for 4 hours, the battery will be warm. This condition is normal for fully charged batteries.
5. If the speed of the car slows down suddenly, it is time to recharge.
6. After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging. Recharging a warm or hot battery pack will greatly shorten the use life of the battery.

BATTERY PACK CARE

- If battery pack and connector are wet, thoroughly dry before charging.
- Battery packs can be charged for much longer periods without harm. However we recommend unplugging the battery pack if battery pack will not be used for several days.

CAUTIONS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not charge battery pack that is hot, wet or shows leakages or corrosion
- May explode if disposed of in fire!
- Do not disassemble the battery pack.

ATTENTION PARENTS

It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.






HOW TO INSTALL BATTERIES IN VEHICLE

1. Push the ON/OFF to "OFF" position. (See Diagram 2)
2. Open the battery cover. (See Diagram 3)
3. Plug the jack of the battery pack into the socket of the Battery compartment just like Diagram 1.
4. Replace the battery cover.

HOW TO INSTALL BATTERY IN TRANSMITTER

1. Unscrew to open the battery cover at the back panel of the transmitter and put 2 x AA battery inside following the engraved signs. (See Diagram 4)
2. Replace the battery cover.

NOTE: REMOVE BATTERY AFTER YOU HAVE FINISHED USING YOUR VEHICLE.

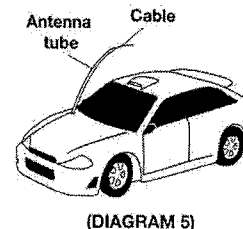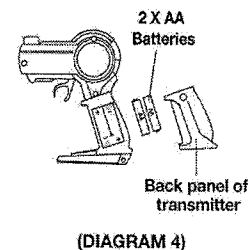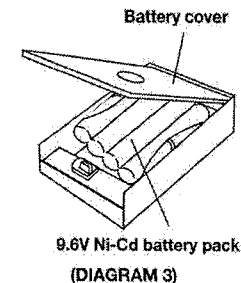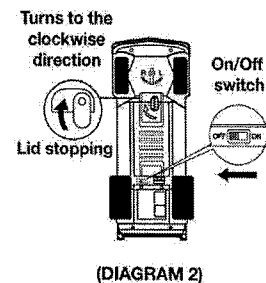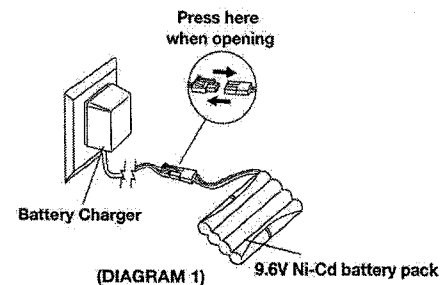

HOW TO PLAY

START PLAYING

- Build antenna by passing the cable through the antenna tube provided and plug into the vehicle tightly. Otherwise, the vehicle will not work. (See Diagram 5)
- Screw the antenna onto the top of the transmitter and extend it to full length. (See Diagram 6)
- Push the ON/OFF switch at the chassis to the 'ON' position. (See Diagram 7)

FORWARD RUNNING

- Pull the trigger backward for forward running. (See Diagram 8)

REVERSE RUNNING

- Push the trigger forward for reverse running. When the car is in reverse, it will only operate at normal speed (See Diagram 9)

STEERING OPERATION

- Turn the Steering Wheel to the anticlockwise or clockwise direction while pulling the trigger to the backward direction at the same time, the car will turn left or right and run forward. When the car is turning, it will only operate at normal speed. (See Diagram 10)
- Turn the Steering Wheel to the anticlockwise or clockwise direction while pushing the trigger to the forward direction at the same time, the car will turn left or right and run backward. When the car is turning, it will only operate at normal speed. (See Diagram 11)

FRONT WHEELS STEERING ALIGNMENT

- If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram 12)
- If the vehicle runs towards left, turn "Steering Alignment Lever" towards "R".
- If the vehicle runs towards right, turn "Steering Alignment Lever" towards "L".

STOP OPERATION

- Release the trigger to stop the vehicle with real brake sound. (See Diagram 13)

CHANGING BANDS FOR MULTI-PLAYER CONTROL SYSTEM

Collect multiple Multi-Player Control System vehicles to run up to 6 cars at the same time.

- Assign a different band to each car. The 6 available bands are Band 1, Band 2, and Band 3 for 27MHz (See diagram 14); Band 4, Band 5, and Band 6 for 49 MHz (See diagram 15).
- Adjust the transmitter to match the band selected for the car. For example, if Band 2 is selected for the car, slide the band switch of the transmitter to Band 2.
- Select a different band for each pair of car and transmitter and go racing. (See diagram 16)

TIPS FOR THE MULTI-PLAYER CONTROL SYSTEM

- When operating multiple cars, only one pair of car and transmitter shall be using the same band. Interference may occur if i) more than one car is set to the same band; or ii) more than one transmitter is set to the same band.
- If a car does not respond, check the transmitter and the car to ensure that both are set to the same band.
- The Multi-Player Control System allows multiple cars within the collection to be raced at the same time. Use of other radio control products that are not part of this Multi-Player Control System may cause interference and loss of control to the cars.

PERFORMANCE TIPS:

- Don't drive in grass, sand or carpet.
- Don't go through water.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure ON/OFF switch on your vehicle is on "OFF" when not in use.

- Don't bend antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in building will affect the operation of your vehicle.
- Don't leave the vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when not in use.

