pages 1 & 2 cover pages 3 & 4

## iHome. **Bluetooth**°



HM-AU-BE-246

### Bluetooth Earbuds




#### **Package Contents:**


- XT-84 True Wireless Farbuds
- Charging Travel Case
- 8 Ear Cushions in 3 sizes (2 Small, 2 Large, 4 Medium)
- USB-A to USB-C Charging Cable
- Instruction Manual

#### **Specifications:**

Bluetooth® Version: 5.4 Working distance: 33 ft Charge Connector: USB-C Speaker Size: Φ10 mm Frequency Response: 20Hz-20KHz Sensitivity: 100 dB +5 dB Charging Voltage: 5V/1A Case Battery: 300 mAh Case Charge time: Up to 2 hrs Earbuds Battery: 2 x 40 mAh Earbuds Charge time: 1.5 hr. Distortion Rate: THD < 10%

### **Operation Guide**

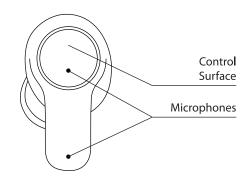

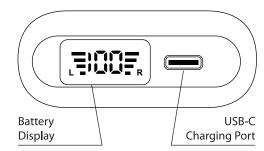

### **Getting Started**

Before using this device, fully charge it. Charging instructions can be found on page 6.

# Open the charging case and take out

the earbuds and place them in your ears. The earbuds will pair to each other automatically.

#### **Pairing**

2 3

- 1. Go to Bluetooth® Settings on your mobile device.
- 2. Turn Bluetooth® ON, on your device.
- 3. On your Bluetooth® device, select "iHome XT-84" from the list of available devices.

### **Using Siri or Google Assistant**

On the left earbud, tap the control surface three times, in quick succession, to activate your Al assistant. The Al assistant on your device must be activated prior to this operation.

#### **ANC Functions**

- ANC is disabled by default.
- Tap the control surface of the right earbud 3x to enable Transparency mode. This mode allows you hear to your environment without turning off the music or removing the earbuds.
- Tap the control surface of the right earbud 3x more to activate ANC mode, this filters out background noise allowing you to enjoy your music clearly.
- Tap the control surface of the right earbud 3x more to disable ANC function.

#### **Basic Functions**

### **Right Earbud:**

- Double tap the control surface to play or pause the audio.
- Tap and hold three second to skip to the next audio track.
- Single tap to raise the volume.

#### Left Earbud:

- Double tap the control surface to play or pause the audio.
- Tap and hold three second to skip to the previous audio track.
- Single tap to lower the volume.

#### Phone calls:

When there is a call, the unit will pause playback. Phone call functions work the same on either earbud.

To answer a call, tap the control surface of either earbud. To end a call, double tap the control surface. To reject an incoming call, tap and hold the control surface.

### **ENC**

ENC is activated automatically when you are on a call or giving instructions to vour AI voice assistant.

pages 5 & 6 pages 7 & 8 back

#### **Troubleshooting**

#### Earbuds do not sync with each other:

- 1. Place the earbuds in the case, then take out the earbuds, ensuring both earbuds are turned on.
- 2. On each earbud, press and hold the control surface for 5 seconds. The earbud will turn off after the LED flashes.
- 3. Replace the earbuds in the charging
- 4. Repeat the Getting Started process.

#### Earbuds do not pair to device:

- 1. Turn the Earbuds OFF by pressing the control surface on each earbud until the LED blinks red, and then turns off.
- 2. Replace the earbuds in the case. Turn your device's Bluetooth® OFF and then back ON. Then repeat the pairing process.

#### Charging

- 1. Replace the earbuds in the case.
- 2. Connect the USB-C charging cable to the charging port on the bottom of the
- 3. Plug the cable into a standard USB 5V/1A or higher power output.

When you plug the case into a charger, the LED display shows the current charge, blinking. This means it is being charged.

The lights on the buds in the case glow steady red, indicating they are charging.

The lights on the buds will go out when fully charged or the case is upplugged from the power source.

The LED display will show 100 and stop blinking when the case is fully charged.

4. When fully charged, promptly unplug the charge case from the power source.

If you want to charge the earbuds from the charge case internal battery, simply replace them in the case. They will begin charging from the built-in case battery.

#### **Warnings**

6 7

- Do not use this unit for anything other than its
- Do not puncture, throw, drop, bend, or modify this
- Do not throw this product into fire or water.
- Do not short-curcuit the battery with any metal or
- Do not expose this product to corrosive liquids such as salt water. · Do not operate the unit if it has been wet or moist
- to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not allow children to play with this product as it is not a toy, and may present a choking hazard.
- Avoid leaving your device in direct sunlight, such as on the dashboard, console, or seat of a vehicle
- Do not leave your device, or use your device, in any area where the temperature is likely to drop below 32°F, or may exceed 140°F, such as inside a closed vehicle on a hot day.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Protect your hearing by always listening at a safe level. Prolonged use at elevated volumes may affect your hearing capacity and could result in hearing loss.
- Use the earbuds with this charging case only.
- · To avoid damage to the charging case, please only use a USB 5V/1A or higher charger
- In order to ensure the battery life, charge normally at least once a month

#### FCC FCC ID: 2AHN6-AUBE246

This device complies with part 15 of the FCC Rules. Operation is subject to the

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

for compliance could void the user's authority to operate the equipment

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the nstructions, may cause harmful interference to radio communic However, there is no guarantee that interference will not occur in a particular nstallation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the inte

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receive
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The device has been evaluated to meet general RF exposure requirement device can be used in portable exposure condition without restriction

### Warranty

8 9

Bytech NY INC. warrants this product to be materially free from defects and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech responsibility with regard to this limited warranty shall be limited solely to repair or replacement at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 months period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase.

WWW.BYTECHINTL.COM Bytech NY Inc 2585 West 13street Brooklyn NY 11223 (718) 449-3700

(( ® @ O MADE IN CHINA

©2024 BYTECH NY INC.

\*All trademarks and copyrights are the property of the respective companies.

XT-84 User Manual v1 071924 Black ink only, thin glossy paper