


Thank You For Choosing
Headphone Player

User Manual

Product Display

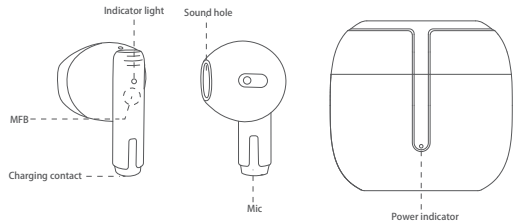

Earphones Specification

Wireless Version: V5.2	Play Time: About 5 Hours
Impedance: 32Ω	Standby Time: About 120 Hours
Product weight: 37g	Rated Input: 5V
Speaker Size: 13mm	Frequency: 20Hz~20KHz

Basic Operation

- ① Power on: Open Lid and earbuds boost up automatically; or Long Press for 3s. There is "Power on" prompt tone.
Power off: Put earbuds back to case and close lid, earbuds are automatically off; or Long Press for 5s. There is "Power off" prompt tone.
- ② Answer Call: Double Click
Hang up Call: Double Click
Reject Call: Long Press for 2s at coming call
- ③ Voice Assistance: Long Press Left earbud for 2s
- ④ Music Play: Double Click Music Pause: Double Click
- ⑤ Next song: Triple click right earbuds
Previous song: Triple click left earbuds
- ⑥ Volume Up: Single Click Right Earbud
Volume Down: Single Click Left Earbud

Bluetooth Pairing

- ① Pairing:open lid and take out earbuds from charging case,or earbuds in power on status,L&R will pair automatically with each other.
- ② Bluetooth connected with device: Earbuds on and un-connected status, one earbud light will flash, Search for Pairing name "TW82H" on your bluetooth device, Click connect and complete pairing.
- ③ Connected Successfully: voice prompt "connected"
- ④ Auto connect back: after first successful connection, earbuds will connect to the last paired phone by default.

Game Mode

Long pressing right earbuds for 2s to switch game mode,there is "Game mode on" and "Game mode off" voice prompt. Earbuds Indicator light do breathing effect when game mode on.

Earbuds Indicator

- ① Unpairing: blue light quickly flash.
- ② Pairing:blue light of master earbuds flash quickly,light of slave earbuds goes off.
- ③ Connected: indicator light goes off.
- ④ Power on:blue light flash.
- ⑤ Power off:red light flash,then goes off
- ⑥ In music or call status:indicator light goes off.
- ⑦ Game mode: both earbuds light do the breathing effect.
- ⑧ Low battery:red light flash once

Charging Case Indicator

- ① Charging:red light flash.
- ② Fully charged:indicator change to be white and keep on.
- ③ Low battery:white indicator keep flashing until case power off.
- ④ Earbuds being charged by case:white light keep on.
- ⑤ Earbuds fully charged:indicator goes off.

Factory Reset

- ① Delete "TW82H" pairing record on mobile phone.
- ② Earbuds power on and in unconnected status, double click earbuds, then click 5 times to clear pairing data.
- ③ Put earbuds back to charging case, close lid. Follow steps in "Bluetooth pairing" to reconnect and use.

Other Functions

- ① Timeout unconnected:earbuds will be off when fail to connect with device within 5 minutes.
- ② Bluetooth Disconnect :After successful connection,if closing the bluetooth of device or bluetooth distance exceed 10m(in the barrier-free environment) ,the Bluetooth will be disconnected.

Maintenance:

- The recommended operating temperature range is: 0-35 degrees excessive cold, overheating, or high temperature environments will reduce battery life and affect product performance.
- Do not use under thunderstorms.
After a long period of non-use, please charge it before use.
Please clean both contacts of earbuds by soft cloth and alcohol if earbuds cannot be charged after using for a period of time.

Accessory List

Bluetooth earphones	X2
Charging case	X1
Charging Cable	X1
User Manual	X1

Common Problem

- ① The earbuds cannot be connected with the mobile phone?
Please check whether the earbuds are in pairing mode, or back connected to other device, and check the mobile phone Bluetooth search function.
- ② The earbuds cannot be turned on?
Please check if the earbuds are fully charged and charge it.

Headphone Player

- ③ Can I replace the battery of earphone?

No, these earbuds use a non-removable battery.

Common Problem

- ④ Can I use the earbuds while driving?

You can use earbuds while driving, but it is not recommended to use a Bluetooth headset and minimize the volume.

- ⑤ The earphone is disconnected from the phone?

The effective distance of this earphone is 10 meters indoors. If the distance between the mobile phone and the earphone exceeds 10 meters or there are multiple obstacles, the earphone and the mobile phone will be disconnected. Please keep the earphone within the effective distance.

- ⑥ After the earbuds are connected to a computer or mobile phone hear different sounds?

Bluetooth is a wireless technology, it is very sensitive to objects between the earphone and the connected device. Please check whether there is metal or other objects in the connection range that affect the connection.

- ⑦ After earbuds are connected to mobile phone, can the earbuds be used to control the applications on mobile phone?

The software settings of device applications may be different, so that the functions of individual applications can't be controlled by earbuds.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and
- (2)This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
RF warning statement:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.