




singing machine®

creating Joy through music™

SMC2068

 INSTRUCTION MANUAL/
MANUAL DE INSTRUCCIONES/
MODE D'EMPLOI

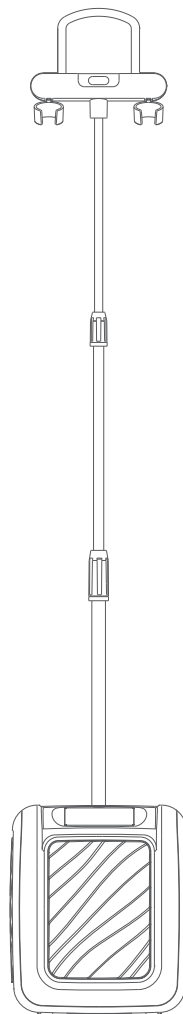

www.singingmachine.com

The Singing Machine® is a registered trademark of The Singing Machine Co., Inc.

The Singing Machine® es marca registrada de The Singing Machine Co., Inc.

The Singing Machine® est une marque déposée de The Singing Machine Co., Inc.

Warnings



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.

DRIPPING WARNING: This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

VENTILATION WARNING: The normal ventilation of the product shall not be impeded for intended use.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The rating information is located at the bottom of the unit.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Warning Statements:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

Important Safety Information

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the Manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket or table specified by the manufacturer, sold with the apparatus. When a cart is used use caution when moving the cart/apparatus combination to avoid injury from tip-over.

 
PORTABLE CART WARNING
(symbol provided by RETAC)




13. Unplug this apparatus during lightning storm or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
16. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.
17. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

Included


Please make sure that the following items are included.

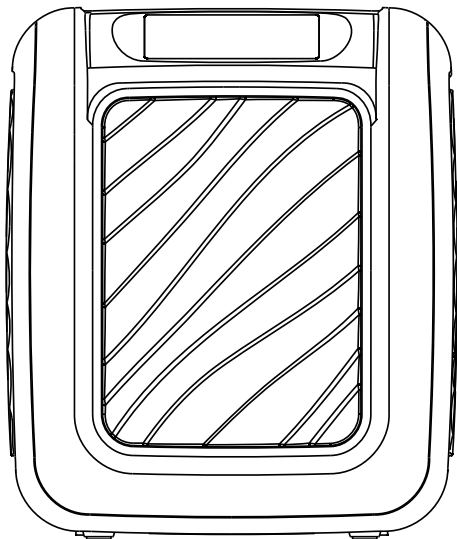


Main Unit

 


Wireless Microphone
x2

 


Extendable Mic stand

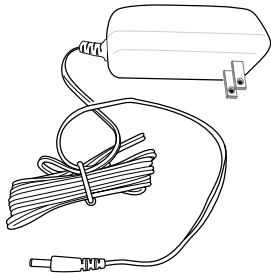 

AC Adapter

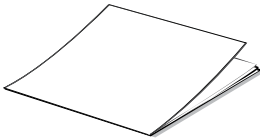 


Manual

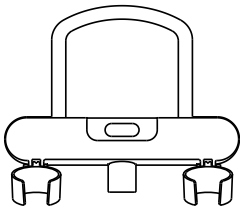 

Cradle with mic holders
(Detachable)

Assembly

 Not for use with other microphone stands. Only lift unit from bottom base. Use caution when placing larger-sized devices in holder.

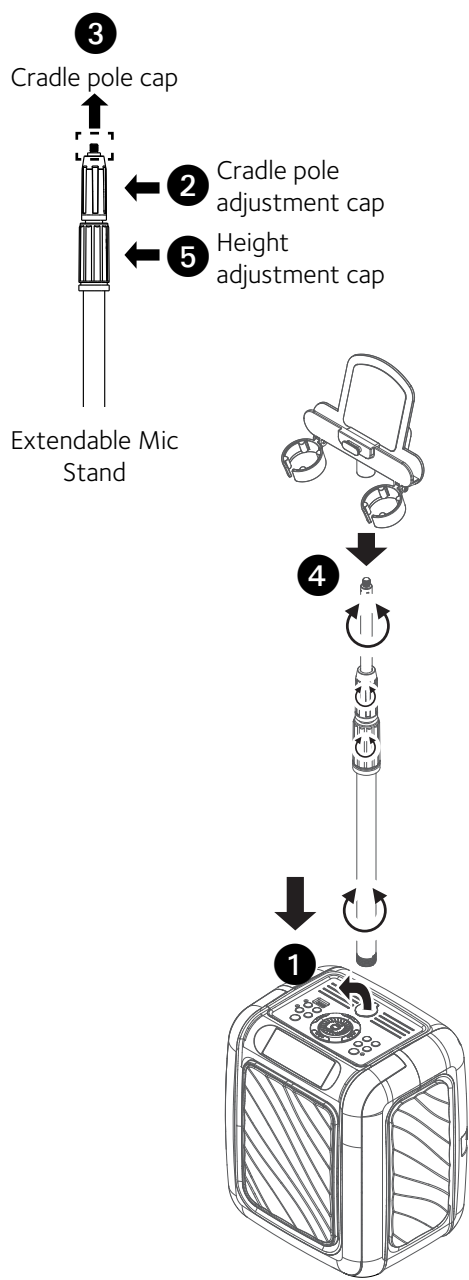

1 Lift the rubber cover on the top of the Main unit. Insert the Mic stand into the Main unit and rotate clockwise to tighten it.

 
2 Untighten cradle pole adjustment cap, pull up on the cradle pole. Retighten cap to keep in place.

3 Untighten cradle pole cap.

4 Insert then rotate to tighten the Cradle with Mic holders on the mic stand.





5 Untighten height adjustment cap to adjust to a suitable height. Retighten cap to hold in place

Location of Controls

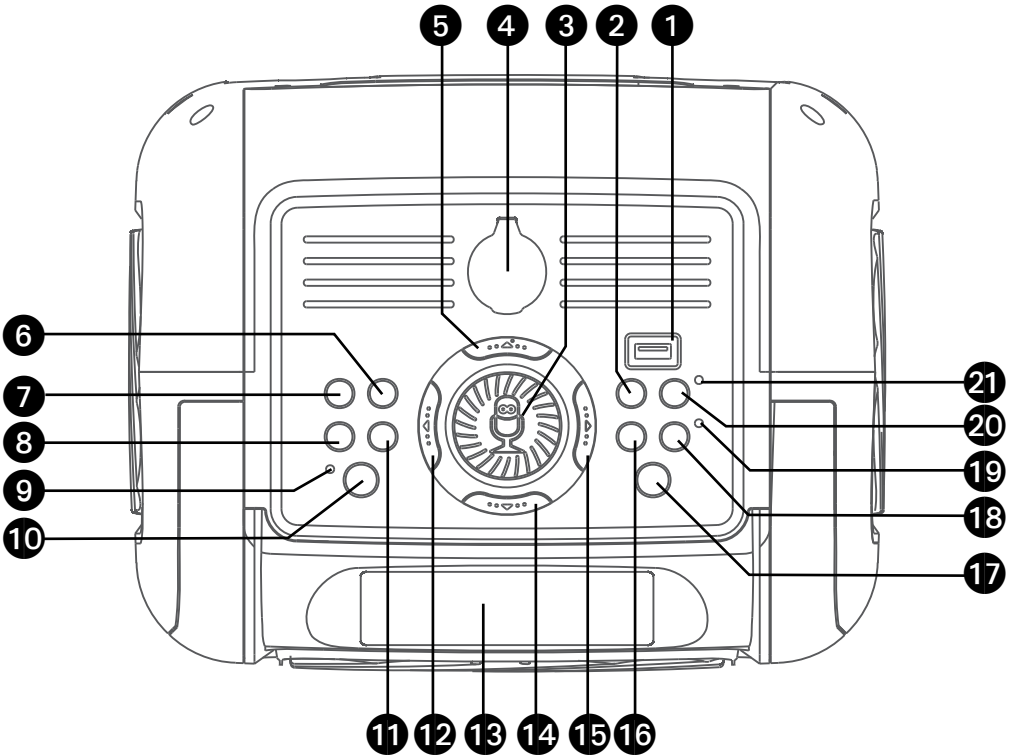

- | | |
|--|--------------------------------------|
| 1. USB slot | 13. Display |
| 2. 🗣️▲ (Voice effects up) button | 14. ▼ (Navigation Down) button |
| 3. Music Volume/Mic Volume control | 15. ⏭️ (Next Skip/Navigation) button |
| 4. Rubber Cover | 16. 🗣️▼ (Voice effects down) button |
| 5. ▲ (Navigation Up) button | 17. ⏯️ (Play/Pause/Stop) button |
| 6. ⏮️ BACK Button | 18. RECORD button |
| 7. 📶 (Casting) button | 19. Record indicator |
| 8. USB button | 20. 📶 (Bluetooth/Vocals off) button |
| 9. Power indicator | 21. Bluetooth indicator |
| 10. ⏻/☀️ (On/Standby/Lights button) | |
| 11. AUX IN button | |
| 12. ⏮️ (Back skip/ Navigation left) button | |

    Location of Controls

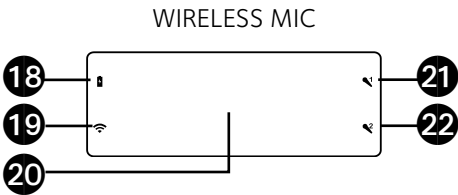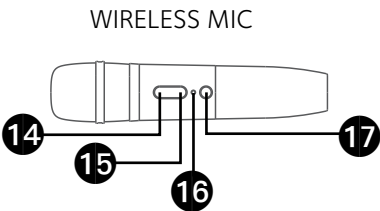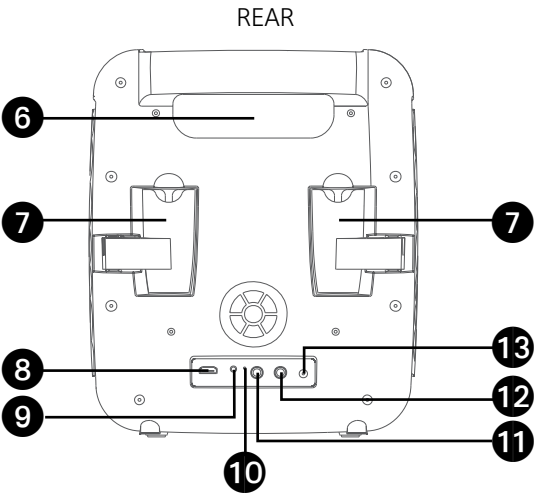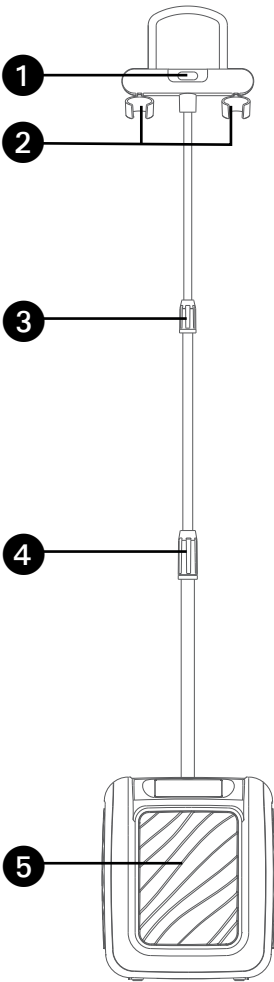


- | | | |
|-------------------------------|---|---|
| 1. Cradle | 9. Aux In Jack | 16. Wireless mic power indicator |
| 2. Mic Holders | 10. Reset hole | 17.  Wireless mic power button |
| 3. Cradle pole adjustment cap | 11. Mic 1 jack | 18. Battery indicator |
| 4. Height adjustment cap | 12. Mic 2 jack | 19. WiFi indicator |
| 5. Speaker | 13. DC In jack | 20. Display |
| 6. Handle | 14.  (Mic Volume +) button | 21. Mic 1 indicator |
| 7. Mic Holders | 15.  (Mic Volume -) button | 22. Mic 2 indicator |
| 8. HDMI Jack | | |

Rechargeable Battery

This unit comes with a built-in rechargeable battery pack that will allow the unit to be used without being connected to AC power. The rechargeable battery pack must NOT be serviced/replaced by the user.

 To optimize the battery life, we recommend to charge the unit once a month. When the battery indicator on the display flashes slowly, recharge the unit by following the steps below:

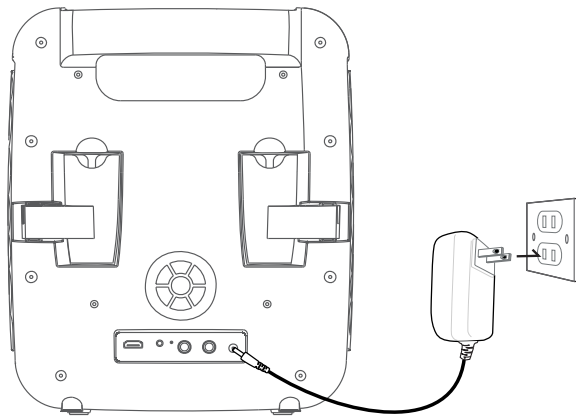

- 1 Insert the AC power cord into a conveniently located AC outlet having 120V, 60Hz.
- 2 Allow the unit to charge for approximately 5 hours for a full charge. When fully charged, the battery indicator will turn off.
- 3 Disconnect the AC cord and the fully charged unit can be used for approximately 4 hours depending on the function chosen.

ATTENTION: The sound volume will adjust automatically when the battery is not full.

Recycling and Disposal Information:

- Do not dispose of electronic devices or any of their components. (especially batteries and LCD displays) in your municipal trash collection.
- Consult your local waste management authority or a recycling organization like Earth911.com to find an electronics recycling facility in your area.



CAUTION: Rechargeable batteries must be recycled or disposed of properly.

 
Energy Saving (Auto Power System-APS)

If there is no audio playback, the unit will automatically enter standby mode after 20 minutes. To resume use of the unit press the  button.

APS is for energy saving purposes.

Connections

Charging the unit

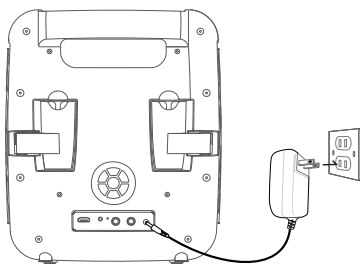


Insert the AC power cord into a conveniently located AC outlet having 120V AC, 60Hz.

NOTES:

- Make all connections prior to plugging the AC adaptor into a power outlet.
- The provided AC adapter can only be used to charge the built-in rechargeable battery. Do NOT use with other devices.

 Connecting the Unit to a TV

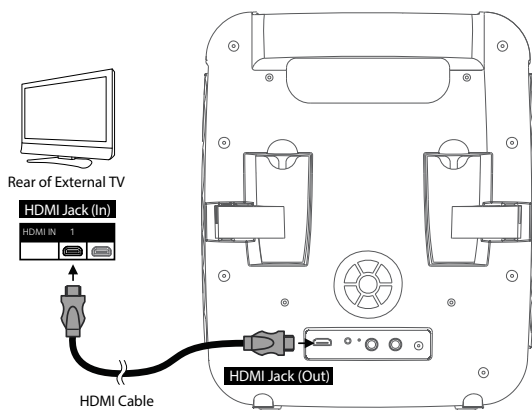

To output the casting video and casting audio to your TV, perform the following steps:

 
Plug the HDMI cable (not included) into the HDMI Jack on the back of the unit. Plug the other end of the HDMI cable into the HDMI input on your TV.

NOTES:

- This unit can be used with or without a TV, but it is highly recommended to use a TV in order to utilize all the features.
- Also refer to the TV's User Guide.
- Audio and mic input cannot be output to your TV.

Connections

Connecting the Wireless Microphone(s)

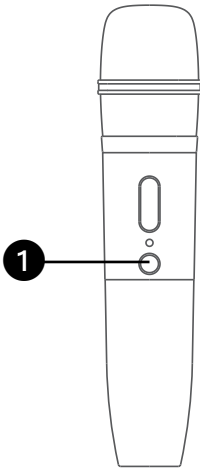


Press the  button to turn the unit on. Press the Wireless Mic's  button to turn on the mic. The Mic indicator 1 or 2 will blink. It will be light solid when connected.

NOTES:

- Working distance of up to 30 feet/10 meters in open space.
- If there is no audio input to the unit for 20 minutes, the wireless mics connection will automatically turn off. Turn on the unit and press the  button to reactivate the connection.

 Changing the Wireless Microphone's Battery

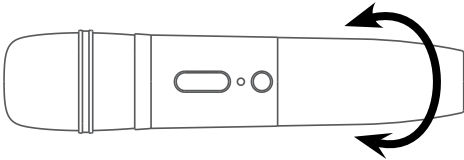

When the wireless mic batteries are low the battery indicator will flash. Change the batteries as follows:

- 1 Unscrew the bottom of the wireless microphone.
- 2 Replace the batteries with 2 x "AA" size/LR6 battery.
- 3 Replace the bottom of the wireless microphone and screw it back on.

 
Battery Precautions

The precautions below should be followed when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon Zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged, they can overheat and rupture. (Follow battery manufacturer's directions.)
6. Rechargeable batteries are to be removed from the product before being charged.
7. Rechargeable batteries are only to be charged under adult supervision.
8. Exhausted batteries are to be removed from the product.
9. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.


Connections

Connecting the optional wired Microphone

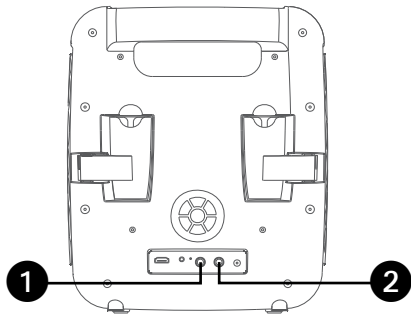


Connect the wired microphone (not included) into Mic jack **1** or **2** (when desired); the corresponding mic Indicator light will blink.

 Lights Mode

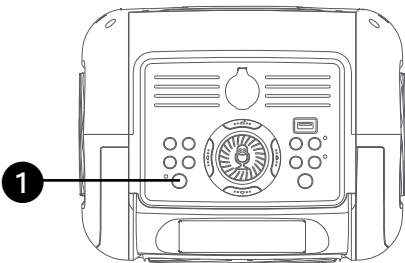




There are 3 built-in light modes. Repeatedly press the  button to switch between lighting effects.

 Cradle

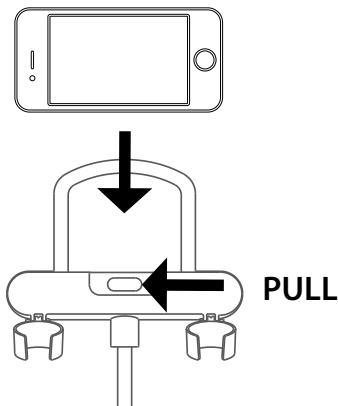

Connections

   Connect to Wi-Fi

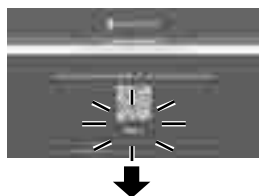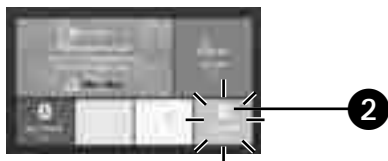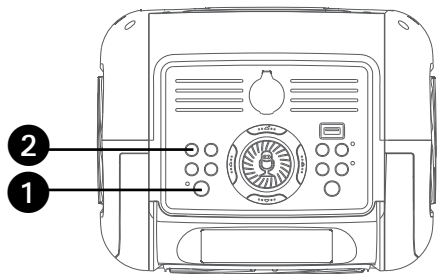

1

Connect the unit as described previously and ensure to connect it to a TV. Press the  button to turn the unit on.

2

USE YOUR MOBILE DEVICE TO CONNECT THIS UNIT

Press the  button or using the , , ,  Navigation and  button to select the **SINGCAST OPEN** in the main menu (the unit should be connected to a TV). "CAS" will display on the screen. If this unit has not been connected to your WiFi network, a step 1 QR code will pop up on screen. Use your mobile device to scan the QR code allowing it a moment to load. Once your mobile device connects to the unit successfully, the step 2 QR code will pop up on screen.

3

CONNECT THIS UNIT TO YOUR WIFI NETWORK

Use your mobile device to scan the step 2 QR code and allow it to load. The WiFi list will pop up on your mobile device. Search for and select your home WiFi and input your WiFi password to complete the login process.

 
 
If the unit does NOT connect to your home WiFi successfully, check your password and WiFi frequency and repeat above steps.

NOTES:

- Make sure the Wi-Fi network of the mobile device and unit are using the same network.
- WPA3 security settings can cause connection issues. If you have WPA3 security, we recommend lowering to WPA2 or lower. Or contact us for further help.

Connections

Connect to Wi-Fi (Continued)

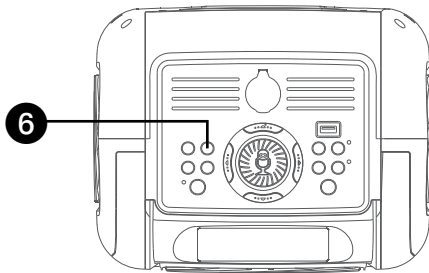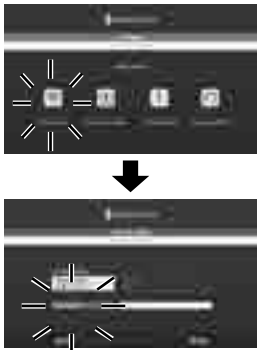

4 When the unit connects to your WiFi successfully, "connected" will display on-screen. You can download the **Singing Machine Karaoke App** to listen to your favorite karaoke music and project the HD karaoke video on your TV.

5 The unit automatically searches and pairs to a previously paired WiFi network. If you want to connect to another WiFi network, you can go to the main menu and select **SETTINGS>WiFi setting>DISCONNECT** to disconnect from the WiFi network in order to connect to another WiFi network.

6 Press the ↶ button to go back to the previous screen. Press and hold to go to the main menu.

Connections

Settings



1 Press and hold the  button to go to the main menu. Using the , , ,  Navigation and  button select the **SETTINGS** icon; "Set" will appear on-screen.

2 Select **WiFi setting** to connect or disconnect from the WiFi network and check the WiFi signal level.



3 Select **Software update** to update the software of the unit.

4 Select **Software info** to check the latest software version and serial number of this unit.

5 Select **Factory setting** to delete all data stored in the unit.

2

3

 
4

5

5

Operation

Using SingCast Casting

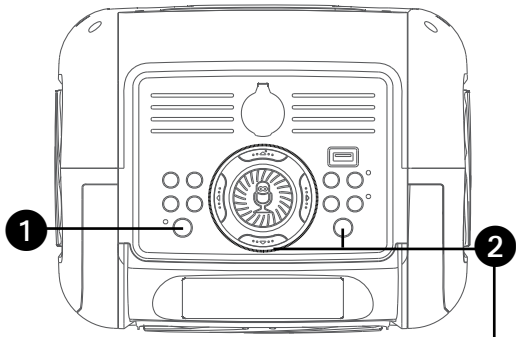

1 Connect the unit as described previously and ensure to connect it to a TV. Press the  button to power on the unit. The power indicator will light solid.

2 Press the  button or using the , , ,  Navigation and  button to select the **SINGCAST OPEN** in the main menu (the unit should be connected to a TV). "CAST" appears on the display.



3 Download the **Singing Machine Karaoke App** to choose from thousands of HD karaoke videos, project your favorite karaoke videos from your mobile device to your TV (make sure your mobile device and the unit are connected to the same WiFi network).

 


4 After registering your account, choose your favorite song. Press the icon  and select "SingCast_Cube" to cast to your TV.




Operation

Using SingCast Casting (Continued)

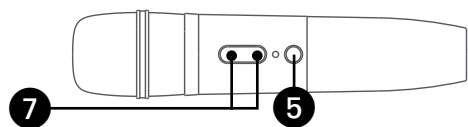


 5 Press the  button on the microphone to turn on the mic.

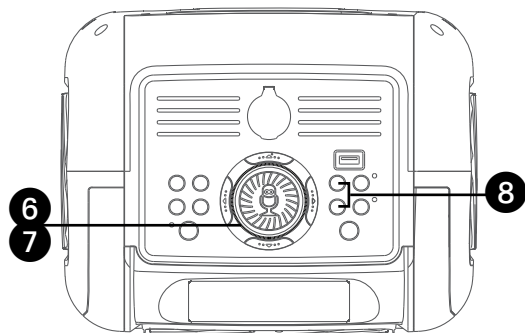

6 Adjust the volume to a comfortable level using the **MUSIC VOLUME/ MIC VOLUME** control.

 7 Toggle the **MUSIC VOLUME/MIC VOLUME** control on unit or press the the  or  buttons on mic as desired.
Increasing this control will increase the volume of the microphone.

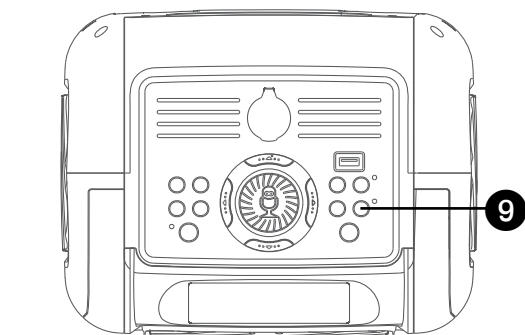

8 Press the ▲ or ▼ button to select a voice effect.

9 RECORD YOUR SINGING PERFORMANCE

To record your singing as well as the music, press the **REC** button. Recording will begin and the record indicator will light solid. When done recording, press the **REC** button again; the record indicator will turn off.

 
NOTES:

- A USB drive (not included) must be inserted into USB slot to record.
- The recorded audio file will record onto the USB drive.

9 Press and hold the /✱ button to turn off the unit.

Operation

Using a Bluetooth Device

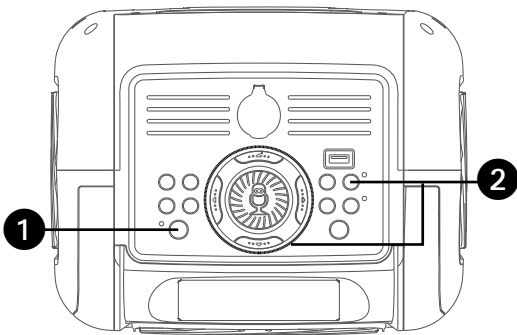


1 Connect the unit as described previously. Press the  button to turn the unit on.

2 Press the  button or using the , , ,  Navigation and  button to select the **BLUETOOTH OPEN** in the main menu (the unit should be connected to a TV); “BT” will light up on the display; the indicator will flash.



3 The unit automatically searches and pairs a previously paired Bluetooth device (if previously paired). If no previously paired devices are present, connect as shown in the next step.

 NOTE: You can also press and hold the  button to disconnect any paired device in order to pair another device.

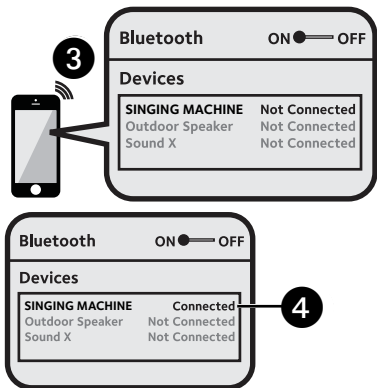

4 Turn on your device's Bluetooth option in settings to search for a discoverable device with a Bluetooth signal. Select “**SINGING MACHINE**” from the device results on the Bluetooth menu.

NOTE: Also refer to the user manual of your Bluetooth device for detailed instructions.

 
Operation

Using a Bluetooth Device (Continued)

5 “BT” and bluetooth indicator will light solid.

NOTES:


- If your Bluetooth prompts you for a passcode during the pairing process, please enter “0000” to connect.
- On some Bluetooth devices, once pairing is completed, select your Bluetooth device as “Use as Audio Device” or similar.
- If connection is lost after successful pairing, check to make sure the distance between speaker and Bluetooth-enabled device does not exceed 30 feet/10 meters.

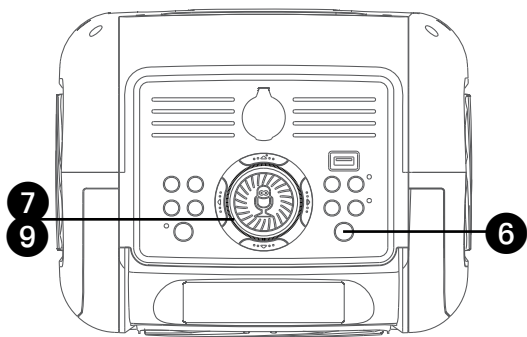

6 You can control your Bluetooth device to start the music playback OR press the ►|| button to start playback (music app must be open). Press the ►|| button during playback to pause the song.

7 Adjust the volume to a comfortable level using the **MUSIC VOLUME/ MIC VOLUME** control on this unit as well as the Volume on your Bluetooth device.

 NOTE: Bluetooth music and your singing performance are only played on the unit.

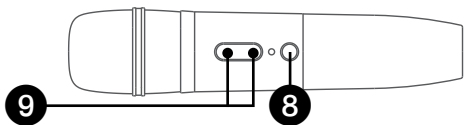


8 Press the ⏻ button on the microphone to turn on the mic.

9 Toggle the **MUSIC VOLUME/MIC VOLUME** control on unit or press the the 🔊 or 🔊 buttons on mic as desired.
Increasing this control will increase the volume of the microphone.

Operation

 Using a Bluetooth Device (Continued)

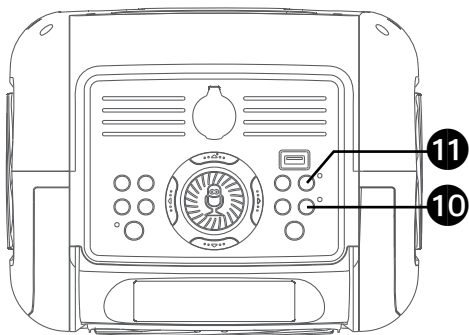

10 RECORD YOUR SINGING PERFORMANCE

To record your singing as well as the music, press the **REC** button. Recording will begin and the record indicator will light solid.

 
When done recording, press the **REC** button again; the record indicator will turn off.

NOTES:

- A USB drive (not included) must be inserted into USB slot to record.
- The recorded audio file will record onto the USB drive.

11 To sing without the lead singer on the recording, press the  button. To resume the lead singer, press again.

NOTE: Lead vocal removal might work better on some songs than others.

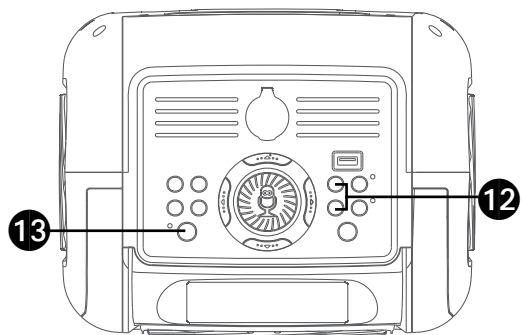


12 Press the ▲ or ▼ button to select a voice effect.

13 Press and hold the /Bluetooth icon button to turn off the unit.

Operation

 Playing songs from USB drive

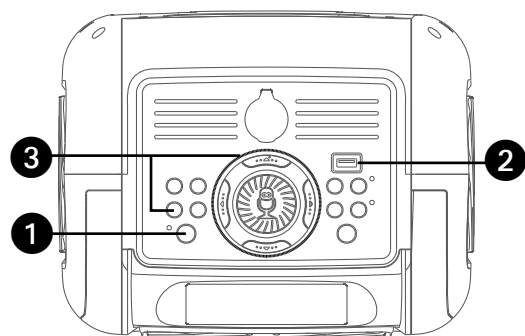


1 Connect the unit as described previously. Press the  button to turn the unit on.

2 Insert a USB flash drive into the USB port on the unit. Make sure to download music from the Karaoke store.




3 Press the **USB** button or using the , , ,  Navigation and  button to select the **USB OPEN** in the main menu (the unit should be connected to a TV). "READ" appears on the display.

 NOTE: The USB mode cannot be accessed until a USB drive with songs is inserted.

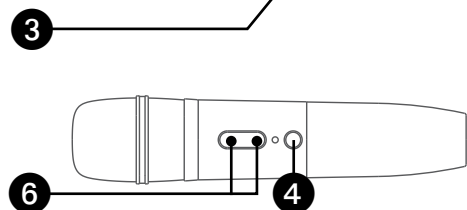

 4 Press the  button on the microphone to turn on the mic.

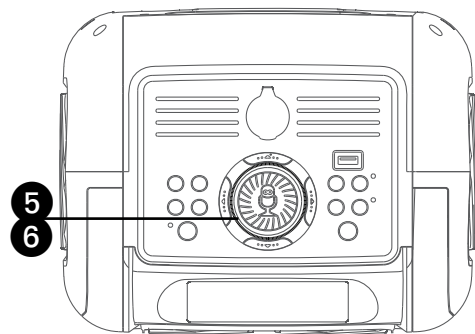


5 Adjust the volume to a comfortable level using the **MUSIC VOLUME/ MIC VOLUME** control.

6 Toggle the **MUSIC VOLUME/ MIC VOLUME** control on unit or press the  or  buttons on mic as desired. Increasing this control will increase the volume of the microphone.

Operation

 
Playing songs from USB drive (Continued)

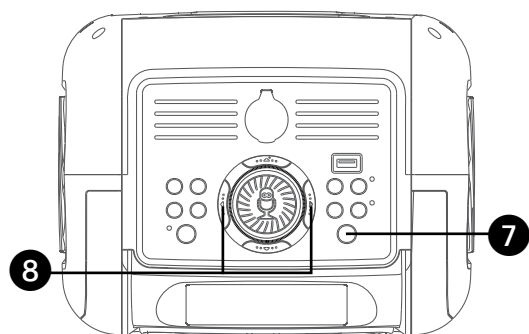

7 Press the **▶||** button to start playback; if listening to an MP3 file.

During playback, if you wish to pause the music momentarily, press the **▶||** button. Press again to resume normal playback. Press and hold the **▶||** button to stop playback.

 8 **SKIP:** Advance or go back one track by pressing the **▶▶** or **◀◀** button. You can also skip forward or backward 10 files/ tracks press and hold the **▶▶** or **◀◀** button.

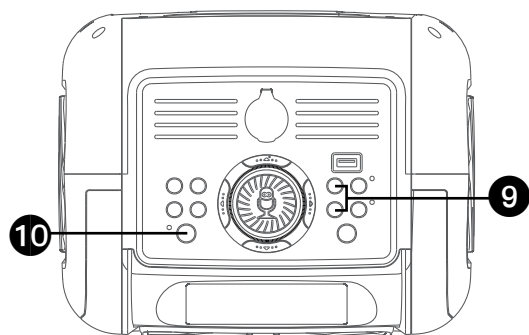


9 Press the **🔊▲** or **🔊▼** button to select a voice effect.

10 Press and hold the **🔌/⚡** button to turn off the unit.

Operation

 Using the AUX IN Jack

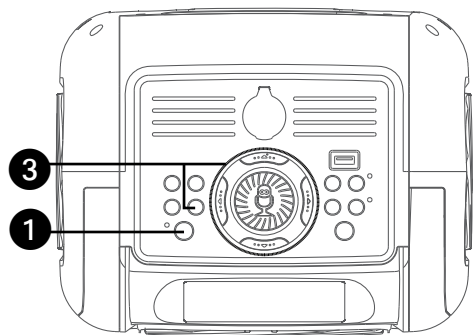

1 Connect the unit as described previously. Press the button to turn the unit on. The power indicator will light.

2 Connect the external unit to the AUX INPUT Jack using a 3.5mm auxiliary audio cable (not included). Connecting an external unit will allow the audio to be played through your Singing Machine.

NOTES:

 
- It is highly recommended to set the volume on the auxiliary unit to 1/3 or lower to avoid distortion.
- Skipping files/tracks is not possible in this unit when using an external device.




3 Press the **AUX** button or using the , , , Navigation and button to select the **AUX IN OPEN** in the main menu (the unit should be connected to a TV); "AUX" will light up on the display.

Operation

Using the AUX IN Jack (Continued)

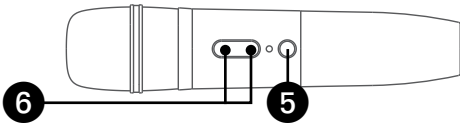

 
- 4 Adjust the volume to a comfortable level using the **MUSIC VOLUME/MIC VOLUME** control.

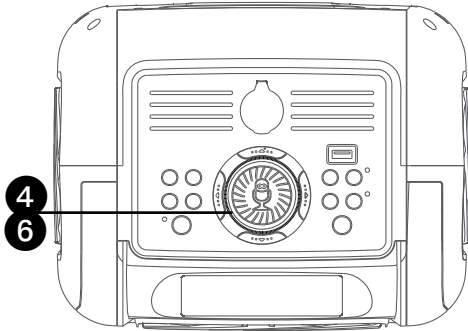

- 5 Press the  button on the microphone to turn on the mic.

- 6 Toggle the **MUSIC VOLUME/MIC VOLUME** control on unit or press the the  or  buttons on mic as desired.

 Increasing this control will increase the volume of the microphone.

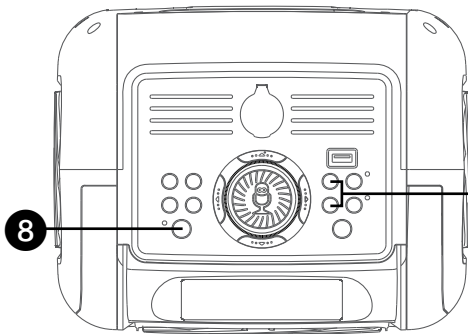

- 7 Press the  or  button to select a voice effect.

- 8 Press the  button to turn the unit off.

Operation

Sound Effects

Name	Effect Description
Basic Pitch	Silky smooth & balanced reverb & echo; a great all around go-to vocal enhancer
Alt-Rock	Queue up your fav alternative & rock tunes with this crowd-pleasing vocal effect
Reggae-Tone	Enhanced echo makes voices shine especially while singing reggae and reggaeton
Grunge	Unmistakably gritty, great for rock, alt, pop and just making your voice sound cool
Hip-Hop	Big room echo & reverb, great for hip-hop, rap and R&B
Oldtown Rd	A touch of echo with added vocal boost that's great for belting out country tunes
Up to Mars	Big echo, good for a wide range of songs from ballads to funk
Pitch Tune C	Pitch Tune like the pros with this pitch enhancing effect for singing in the key of C
Pitch Tune D	Pitch Tune & enhancing effect for singing in the key of D
Pitch Tune E	Pitch Tune & enhancing effect for singing in the key of E
Pitch Tune Chromatic	Pitch Tune & enhancing effect (Chromatic Scale)
Nosebleed Seats	Did someone say sold out stadium shows?
Radio	Great for singing 90's Rock or for making big announcements
Doubling	Classic & versatile doubling effect
Doubling Tuned	Voice doubling with pitch tuning enhancement
Radio Tuned	Classic radio effect with pitch tuning enhancement
Squeeze	A fun, voice morphing effect that tweaks voices to a higher pitch
Diva	Add a sassy touch to voices
Voice Drop	Deepens voices for a fun effect
Deep Deep	Tunes voices deep & low
Robot	Machiney & robotic
Chipmunk	Mousey, squeaky fun voice effect

Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

No Power

- Power is not on; Press the  button to turn power on.
- The unit has no battery left. Connect to AC power to recharge the battery.
- Confirm that the AC adapter is connected securely to the rear of the unit.
- Connect the unit to a different outlet.
- The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply restart the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in another location.

No Sound – General

- MUSIC VOL/MIC VOL is set to minimum; raise volume.
- Correct Function was not selected; select the correct function.
- If using an external device, raise the volume.

No Sound – If connected to a TV

- Correct mode (SingCast) was not selected on the unit.
- Bluetooth music audio and singing performance cannot output to the TV.
- Volume on the TV is muted or too low.
- Correct source (usually HDMI) was not selected on the TV's menu.

No sound from the microphone

- The wireless microphone has no battery left. Change the batteries.
- Make sure the mic's **ON/OFF** switch is set to the ON position.
- Make sure the **MUSIC VOLUME/MIC VOLUME** control is not set too low.
- Microphone input cannot output to the TV.

The Bluetooth device cannot be paired or connected with the unit

- Ensure any other Bluetooth devices are turned off to avoid accidental pairing.
- You have not activated the Bluetooth function of your device; see page E15 or refer to the Bluetooth device user's manual.
- The system is not in pairing mode; press and hold the  button to restart pairing.

The Music is not available on the unit after successfully connecting to Bluetooth

- Ensure your Bluetooth device can support the A2DP Bluetooth profile.
- The volume on the external Bluetooth device is set too low or muted; raise as desired.

Failed to connect to the Wi-Fi network

- The unit is not within the Wi-Fi signal range.
- Check that your Wi-Fi frequency is 2.4GHz.
- Ensure you have entered the correct password.
- Check that the mobile device and unit are using the same Wi-Fi network.
- WPA3 security settings can cause connection issues. If you have WPA3 security, we recommend lowering to WPA2 or lower. Or contact us for further help.

Need Help Casting? Start here!

Scanning QR code fail

- We recommend for you to scan the QR Code once more. If you cannot scan it successfully, you may need to try a specific QR code scanning APP to help.
- Alternatively, you can go into "SETTINGS menu/Wi-Fi setting" to connect the SingCast unit to your Wi-Fi network directly.

No Internet connection

- Ensure the unit is in SingCast mode.
- Ensure the input Wi-Fi password is correct.
- Ensure the SingCast unit is not too far from your router (recommended maximum 10 meters). If the Wi-Fi signal level is weak, we recommend that you relocate the SingCast unit closer to the router.
- This unit is only compatible with Wi-Fi security WPA3 or lower. Please check out below compatible Wi-Fi security list.
WPA, WPA-PSK, WPA2, WPA2-PSK, WPA3, WEP 64bit & 128bit, IEEE 802.11x and IEEE 802.11i.
- If your Wi-Fi security is set to above WPA3 on your router, you will need to set it to WPA3 or lower.
- Depending on the brand of your router, if you still cannot connect to the router with WPA3 or lower security standard, you are recommended to factory reset your router. *Make sure you have written down your existing customized SSID name and password. This will help in reconnecting your previously connected devices and revert to your previous Wi-Fi security settings.
- If the Singing Machines unit's Wi-Fi is connected to the router successfully. But you still cannot connect to the internet. You might need to check for any internet connection problems on your router. Or check out the router's settings to verify if that the unit is not restricted from going online. You are highly recommended to refer to your router's instruction manual.
- To ensure the unit's Wi-Fi function works fine, you can connect your unit's Wi-Fi to your mobile device's hotspot with data service to verify.

Cannot find the SingCast unit on your Karaoke app casting list / No Casting video to TV

- Ensure both the SingCast unit and your mobile device are connected to the same Wi-Fi network.
- If SingCast does not appear as a casting option, check advanced security settings to enable DLNA.
- If you are connecting a router with Mesh function, you need to make sure "Access Intranet" function is enabled.

Specifications

AUDIO

Output Power25 Watts (RMS)

BLUETOOTH

Bluetooth Version V5.0

Working Distance..... Up to 30 feet/10 meters measured in open space

WiFi

WiFi frequency 2.4GHz/5GHz

CONNECTING JACKS

Microphone 6.3mm

GENERAL

Power 100-240V, 50/60Hz

Output 9VDC  1A Positive Center

Dimensions:

Main Unit 8.7 x 11.0 x 12.9 inches (22.0 x 28.0 x 32.9cm)

Weight - Main Unit..... 7.7 Lbs (3.5 kgs)

Wireless Microphone 2.4GHz band Dynamic Microphone

Specifications are subject to change without notice.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks and logos by The Singing Machine Company, Inc. is under license. Other trademarks and trade names are those of their respective owners.

Mises en Garde



Mises en Garde
RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRIR



MISE EN GARDE: AFIN DE RÉDUIRE LE RISQUE D'ÉLECTROCUTION, NE PAS RETIRER LE COUVERCLE (OU LE DOS DU BÔTIER). AUCUNE PIÈCE POUVANT ÊTRE RÉPARÉE PAR L'UTILISATEUR NE SE TROUVE À L'INTÉRIEUR. POUR TOUTE RÉPARATION, CONTACTER UN TECHNICIEN COMPÉTENT.



TENSION DANGEREUSE: Le symbole de l'éclair dans un triangle équilatéral a pour but d'avertir l'utilisateur du danger présenté par des pièces non isolées à l'intérieur de l'appareil, dont la tension est suffisante pour provoquer des décharges électriques dangereuses.



ATTENTION: Le point d'exclamation à l'intérieur d'un triangle équilatéral a pour but d'avertir l'utilisateur de la présence de consignes importantes sur le fonctionnement et l'entretien (réparation) de l'appareil dans la documentation accompagnant ce produit.

AVERTISSEMENT D'ÉGOUTTEMENT: Ce produit ne doit pas être exposé à l'égouttement ni aux éclaboussures et aucun objet rempli de liquide, tel qu'un vase, ne doit être placé sur le produit.

AVERTISSEMENT D'AÉRATION: L'aération normale du produit ne doit pas être entravée pour l'usage prévu.

MISE EN GARDE: AFIN D'ÉVITER TOUT RISQUE D'ÉLECTROCUTION, JUMELER LA GRANDE BROCHE DE LA FICHE À LA FENTE LA PLUS LARGE ET L'INSÉRER COMPLÈTEMENT.

AVERTISSEMENT: AFIN D'ENRAYER TOUT RISQUE D'ÉLECTROCUTION OU D'INCENDIE, NE PAS EXPOSER CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ.

MISE EN GARDE DE LA FCC: Cet appareil peut générer ou utiliser des fréquences radio. Les modifications ou changements peuvent causer des interférences nuisibles, à moins que ces modifications ne soient approuvées expressément dans ce mode d'emploi. L'utilisateur pourrait perdre l'autorité de faire fonctionner cet équipement en cas de modification non autorisée.

Cet appareil répond aux exigences de l'alinéa 15 des réglementations FCC. Son utilisation est soumise aux deux conditions suivantes : 1) Cet appareil ne peut pas causer d'interférence nuisible et 2) Cet appareil doit accepter toute interférence reçue, incluant les interférences qui pourraient affecter son fonctionnement

REMARQUE: Suite aux tests effectués, il est établi que cet appareil numérique de Classe B répond aux exigences de l'alinéa 15 des réglementations FCC. Ces normes sont élaborées pour vous protéger contre toute interférence nuisible en installation résidentielle. Cet appareil génère, utilise et peut émettre des fréquences radio. Par conséquent, s'il n'est pas installé et utilisé en suivant les instructions, il peut causer des interférences nuisibles aux communications radio. Cependant, aucune garantie n'est donnée concernant la possibilité d'interférence avec une installation spécifique. Si une interférence se produisait en réception radio et/ou de télédiffusion, lors de l'activation et la désactivation de l'appareil, nous vous recommandons

- Réorientez ou déplacez l'antenne de réception.
- Éloignez l'appareil du récepteur.
- Branchez l'appareil à une prise de courant différente de celle utilisée par le récepteur.
- En cas de problème, contactez le vendeur ou un technicien spécialisé en réception radio/TV.

Le régime nominal est indiqué dans la partie inférieure de l'appareil.

AVERTISSEMENT: Les modifications ou changements qui ne sont pas expressément approuvés par la partie responsable de la conformité peuvent entraîner l'annulation du droit donné à l'utilisateur de se servir de cet appareil.

Énoncés d'avertissement d'exposition aux RF :
Cet équipement est conforme aux limites d'exposition aux rayonnements de la FCC définies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et le corps.

Renseignements Importants de Sécurité

1. Lisez ces instructions.
2. Conservez ces instructions.
3. Respectez toutes les mises en garde.
4. Suivez toutes les consignes.
5. N'utilisez pas cet appareil à proximité de l'eau.
6. Nettoyez l'appareil uniquement avec un chiffon sec.
7. Ne bloquez pas les ouvertures d'aération. Installez conformément selon les consignes du fabricant.
8. N'installez pas à proximité de sources de chaleur telles que les radiateurs, registres d'air chaud, cuisinières, ou autres appareils (notamment des amplificateurs) produisant de la chaleur.
9. Ne nuisez pas à la fonction de sécurité de la fiche polarisée ou de mise à la terre. Une fiche polarisée est dotée de deux broches dont l'une est plus large que l'autre. Une fiche de mise à la terre est dotée de deux broches et d'une troisième broche de mise à la terre. La broche la plus large ou la troisième broche est conçue pour votre sécurité. Lorsque la broche fournie ne convient pas à la prise, consultez un électricien afin de remplacer la prise désuète.
10. Protégez le cordon d'alimentation afin que personne ne marche dessus ou le pince, particulièrement au niveau des broches, de la prise et du point où ils sortent de l'appareil.
11. Utilisez seulement les accessoires spécifiés par le fabricant.
12. Utilisez seulement avec un chariot, une sellette, un trépied, un support ou une table. Lorsqu'un chariot est utilisé, prenez garde de ne pas déplacer la combinaison chariot/appareil pour éviter toute

- blessure causée par un renversement.
13. Débranchez cet appareil durant un orage ou lorsqu'il n'est pas utilisé pendant de longues périodes.
 14. Confiez toutes les réparations à un technicien compétent. La réparation s'avère nécessaire lorsque l'appareil a été endommagé, par exemple, si le cordon d'alimentation ou la fiche a été endommagé, du liquide a été renversé ou des objets sont tombés dans l'appareil, ou si l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement, ou a été échappé.
 15. **AVERTISSEMENT :** Pour réduire le risque d'électrocution, évitez d'exposer l'appareil à la pluie ou à l'humidité. Ne déposez pas d'objets remplis d'eau, tels qu'un vase, sur l'appareil.
 16. La fiche de secteur c.a. est utilisée pour débrancher l'appareil et doit être facilement accessible et utilisable durant l'usage prévu. Afin de couper complètement l'alimentation de l'appareil, la fiche de secteur doit être complètement débranchée de la prise c.a.
 17. **MISE EN GARDE :** Afin de réduire le risque d'incendie ou d'explosion, n'exposez pas des piles à une source de chaleur excessive telle que le soleil, le feu ou autre.

ATTENTION CHARIOT DE TRANSPORT
(symbole fourni par IRETAQ)



Visit Our Website: www.singingmachine.com
Visite Nuestra Pagina de Internet: www.singingmachine.com
Visitez notre site Web : www.singingmachine.com

Copyright © 2023 All Rights Reserved.
Derechos de autor © 2023 Todos los derechos reservados.
Droit d'auteur© 2023 - Tous droits réservés.

U.S. Representative
Company Name : The Singing Machine Company, Inc.
Address : 6301 NW 5th Way, Suite 2900,
Fort Lauderdale, FL33309, USA
Telephone : 1-866-670-6888
Website : www.singingmachine.com

PRINTED IN CHINA
IMPRESO EN CHINA
Imprimé en Chine
2068-2305-ESF01-US