

MUNBYN

MUNBYN

More Choice
For Your Growing Business

Logistics Label Printer

USER GUIDE



Version: 2.0.7

☐ White ☐ Gray ☐ Green ☐ Pink

Contents

01 Product Introduction	01
1.1 What's in the package?	01
1.2 Printer features	02
02 Set Up The Printer	02
2.1 Quick printer connection	03
2.2 Label setup	03
2.3 Driver installation	04
2.3.1 Windows Driver Installation	04
2.3.2 Mac Driver Installation	04
03 Pro Tips	05
04 FAQ	05
05 LED Status	06
06 Feeder Button Instruction	06
07 Specifications	07
08 Safety Notices	08
09 Tech Support	09

01 Product Introduction


1.1 What's in the package?



- | | |
|---------------------|----------------------|
| A Printer | B USB Cable |
| C Adapter | D Power Cord |
| E Quick tips | F Labels |
| | G User Manual |

- If contents are missing or damaged, please contact us

| 1.2 Printer Overview

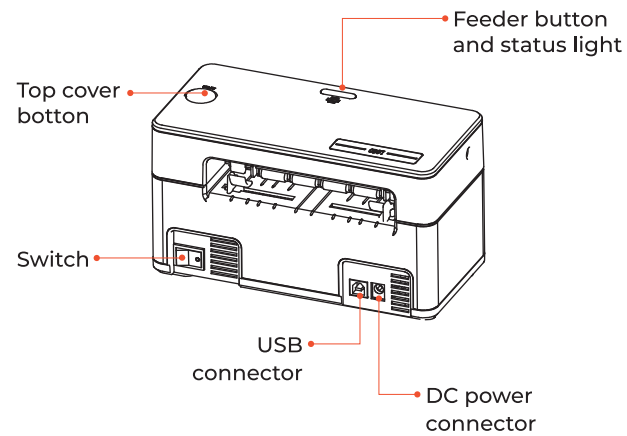


02 Set Up The Printer

Recommended:

Watch the short setup video at:
www.munbyn.biz/unboxing


2

| 2.1 Quick printer connection

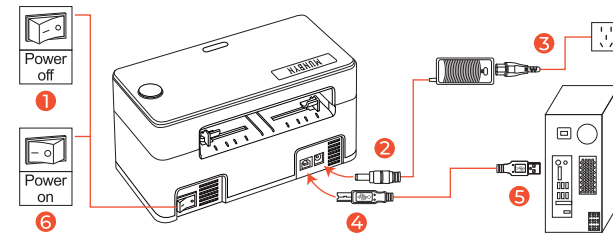

- Please follow the sequence of the above picture to operate

| 2.2 Label setup

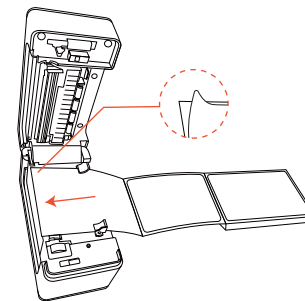

Automatic label identification:

- Load no less than 4 consecutive labels into the printer.
- After the paper is stable, press and hold feeder button, until you hear a beep.
- Then, the printer will automatically label identification.

3

I 2.3 Driver installation

For the latest driver, please visit:
www.munbyn.biz/941d

- Please run the downloaded software from the web address indicated above and follow the prompts to complete installation.

2.3.1 Windows Driver Installation



2.3.2 Mac Driver Installation



03 Pro Tips

- Anytime you change your label, run the automatic label identification.
- Press the feeder button on the printer to **skip a blank label**.
- To run a **self-test**, press and hold the feeder button until you hear two short beeps.
- Avoid **poor quality labels** as they can damage the printer.
- Regularly **clean the printer head**.
- If the paper is jammed and the red light flashes, run Automatic label identification.
- Insert Munbyn into the **same USB port** on your computer every time. This will avoid creating duplicate copies of the printer in your operating system..

04 FAQ

FAQ file, please visit:
www.munbyn.biz/941faq

05 LED Status

Light	Description	Troubleshoot
Green	Normal operation	/
Flashing Red (every 2 seconds)	Label paper is not identified	Run automatic label identification
Flashing Red (every 1 second)	Cover is not closed	Check that the cover is completely closed
Flashing Green and Red	Printer head is overheated	Printer will automatically resume once the printer head has cooled down

06 Feeder Button Instruction

Printer status	Feeder button	Function
Printing	Press the button	Pause printing
Standby	Press and hold on until you hear one beep	Automatic label identification
Standby	Press and hold on until you hear five beeps	Reset Printer

07 Specification

Method	Direct Thermal
Resolution	203 dpi
Max Printing Speed	150 mm/s
Paper Width	40-110 mm (1.57-4.3 inches)
Paper Thickness	0.06-0.25 mm
Power Adapter	24V / 2A
Printing Life	TPH 100Km
Operating Environment	Temperature: -10 to 50 °C Humidity: 10-90% (non condensing)
Storage Environment	Temperature: -40 to 80 °C Humidity: 5-95% (non condensing)
Connection	USB
Weight	1.90 lbs / 0.9kg
Dimensions	D198 mm * W 96mm *H 109 mm

08 Safety Notices

- The printer head can become very hot after printing labels. Do not touch the printer head.
- Do not bend the power cord excessively or place objects on the cord.
- Do not use the printer if you find any irregularities as these could result in fire or electrocution.
- Keep the printer out of reach of children.
- Use only approved accessories and do not try to disassemble, repair the unit by yourself.
- Keep the printer away from water and other objects that could penetrate the components.
- Please unplug the printer when it is not in use for long periods.

09 Tech Support

E-mail: support@munbyn.com
Whatsapp: +8617817881067
Phone: +1 403 477 1911
Skype: munbyn
Support time:
Monday to Friday 24 hours.



MUNBYN provides 18 months warranty and lifetime free service.

If you encounter any issues with the product, please contact the MUNBYN team to promptly receive troubleshooting tips or a replacement.

Website: www.munbyn.com
(how-to videos, warranty details)

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.