



9.12.1 Entering a PLU Using Discount Rate (S11 Mode)


Note: To use the default End Time simply press the Print/* key again.

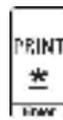

Press the SAVE key

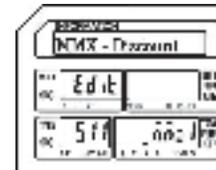

Press the FEED/ESC key.

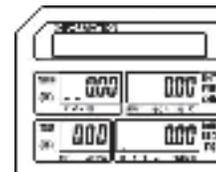

Note: After a discount has expired it must be manually deleted. Please refer to the Delete Discount procedure for the proper method to delete a discount.



9.13 MMX – New Price (S12 Mode)

9.12.2 Deleting a Discount


Follow the steps below to delete a Discount.

1.) From the Discount Number Screen




2.) Enter the Discount Number to delete

Ex.) Select Discount Number 1 to be deleted by pressing the number one key

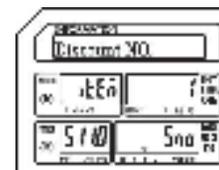

Press the VOID key

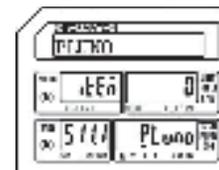

Press the FEED/ESC key



Note: Each Discount programmed can be deleted individually using the method above.


9.13 MMX – New Price (S12 Mode)

9.13 MMX –New Price (S12 Mode)



The MMX mode provides the ability to apply discounts to programmed PLU's. The S12 Mode allows you to discount PLU's based on a new Unit Price. This type of discount may also be programmed to be active based on a date and time schedule.

9.13.1 Entering a PLU Discount using New Price


1.) Start at the normal weigh mode screen

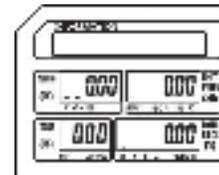


2.) Press the Mode Key twice

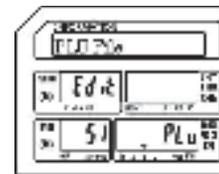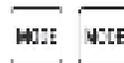

3.) Press the number 1 key then the number 2 key then press the X key

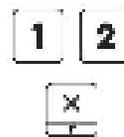

Note: This has the same results as pressing the X key eleven times.

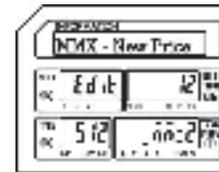

4.) Press the Print/* key





5.) Enter the Discount Number

Ex.) Enter Discount Number 5 by pressing the number five key.



9.13 MMX – New Price (S12 Mode)


Press the Print/* key

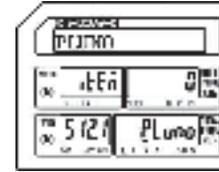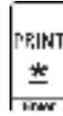


9.13.1 Entering a PLU Discount Using New Price (S12 Mode)

6.) Enter the Discounted PLU Number

Ex.) Select PLU Number 18 for Discounting by pressing the number one key then the number eight key.


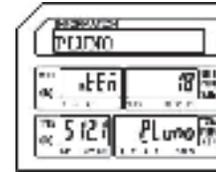


Press the Print/* key

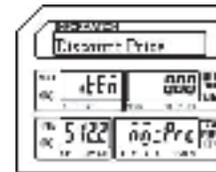


7.) Enter the New Price Discount

Ex.) Use \$7.99 as the New Price Discount by pressing the number seven key then the number nine key twice.

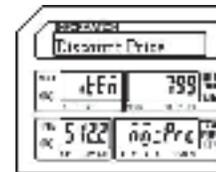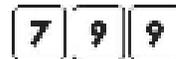


Press the Print/* key

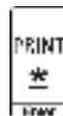

Note: The current date will be displayed. If you wish to use the current date you can just press the Print/* key again.

8.) Enter the Discount Start Date



Ex.) Enter a Start Date of December 20, 2016 (122016) using the number keys.

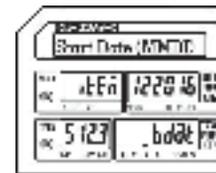

9.13.1 Entering a PLU Discount Using New Price (S12 Mode)

Press the Print/* key

Note: The current date will be displayed. If you wish to use the current date you can just press the Print/* key again.

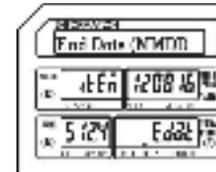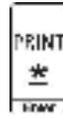


9.) Enter the Discount End Date

Ex.) Enter an end Date of December27, 2016 (122716) using the number keys.



Press the Print/* key

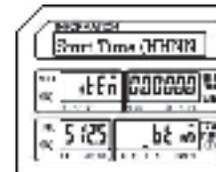

10.) Enter the Discount Start Time on each day in the date range

Ex.) Use the Start Time of 9:00AM (09:00:00)



Note: To use the default Start Time simply press the Print/* key again.




Press the Print/* key



9.13.1 Entering a PLU Discount Using New Price (S12 Mode)


11.) Enter the Discount End Time on each day in the date range

Ex.) Use the End Time of 6:00PM

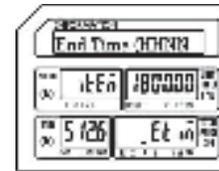

Note: To use the default End Time simply press the Print/* key again.

Press the Print/* key

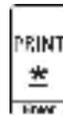

Press the SAVE key




Note: After a discount has expired it must be manually deleted. Please refer to the Delete Discount procedure for the proper method to delete a discount.

9.13.2 Deleting a Discount (S12 Mode)

9.13.2 Deleting a Discount

Follow the steps below to delete a Discount.

1.) From the Discount Number Screen

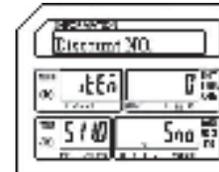


2.) Enter the Discount Number to delete


Ex.) Select Discount Number 5 to be deleted by pressing the number five key



Press the VOID key

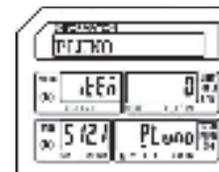

Press the FEED/ESC key

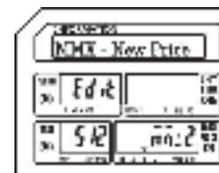

Note: Each Discount programmed can be deleted individually using the method above.


9.14 Clerk Information (S13 Mode)

9.14 Clerk Information (S13 Mode)



This mode allows you to enter Clerk Information such as Clerk No., Clerk Name and Clerk Password.

- Note: To use the Clerk function you must assign the function key of Logon/Logoff.


1.) Start at the normal weigh mode screen

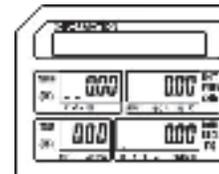


2.) Press the Mode Key twice

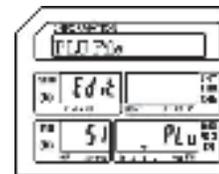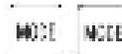



3.) Press the number 1 key then the number 3 key then press the X key

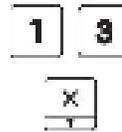

Note: This has the same results as pressing the X key twelve times.

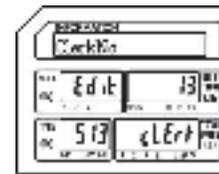

4.) Press the Print/* key

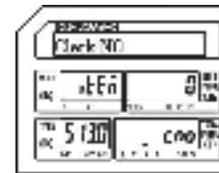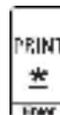



5.) Enter the Clerk Number

Ex.) Enter Clerk Number 1 by pressing the number one key.




9.14 Clerk Information (S13 Mode)

Press the Print/* key

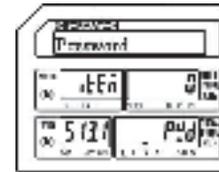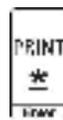


6.) Enter the Clerk Password

Ex.) Enter 1537 for Clerk Number 1's password (1537) using the number keys.

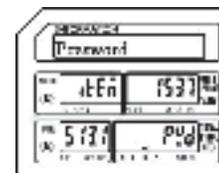

Press the Print/* key


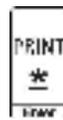


7.) Enter the Clerk Job ID Number

Ex.) Use 9 as the Clerk Job ID Number by pressing the number nine key.



Press the Print/* key

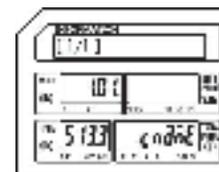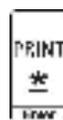


9.14 Clerk Information (S13 Mode)

8.) Enter the Clerk Name

Ex.) Enter Clerk 1's Name as MIKE.



Press the Print/* key

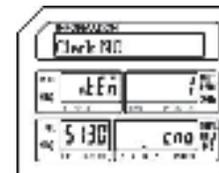

Press the SAVE key



DLP-300 Series

ShangHai DB Scale Co.,Ltd

No.788 SongXiu Rd, QingPu District, ShangHai, PR.CHINA Tel: 86-21-59757333 Fax: 86-21-59757058

<http://www.dbscale.com.cn>