 


# ASTRO TAB A750

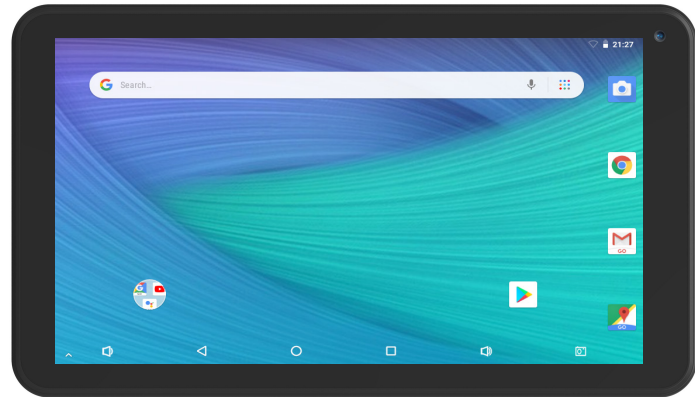

## Internet Tablet With Touchscreen Quick Start Guide

Please read carefully before using.

# Table of Contents

<b>THANK YOU .....</b>	<b>3</b>	<b>CONNECTING TO THE INTERNET .....</b>	<b>19</b>
Package Contents.....	3	Requirements .....	19
Features.....	4	Connect to a Wi-Fi Network.....	20
<b>GETTING TO KNOW THE INTERNET</b>		<b>BROWSING THE WEB .....</b>	<b>22</b>
<b>TABLET.....</b>	<b>5</b>	<b>OPTIONAL CONNECTIONS .....</b>	<b>26</b>
About the Touchscreen .....	8	Connecting to a Computer .....	26
Protective Film .....	8	Connecting Headphones .....	27
Touchscreen Actions.....	8	Using the USB Full-Size Adapter.....	28
About the Orientation Sensor .....	9	Connecting a Keyboard .....	28
Charging the Tablet .....	10	Connecting a Storage Device .....	28
Inserting a Memory Card .....	10	<b>SETTING THE SYSTEM OPTIONS .....</b>	<b>29</b>
Resetting the Tablet.....	11	<b>SPECIFICATIONS .....</b>	<b>30</b>
<b>GETTING STARTED.....</b>	<b>12</b>	<b>WARRANTY .....</b>	<b>31</b>
Turning the Tablet On and Off .....	12		
Turning the Screen On and Off (Standby) .....	13		
Unlocking the Screen .....	13		
Home Screen at a Glance .....	14		
About Applications .....	15		
Preinstalled Applications.....	15		
Installing Applications .....	16		
About Widgets .....	17		
About Notifications.....	18		

# Thank You

Congratulations on your purchase of this Internet Tablet. This guide is provided to help you get quickly started with your tablet; please read it carefully and save it for future reference.



*To view PDF documents, download and install the free Adobe Acrobat reader from the Adobe website at [www.adobe.com](http://www.adobe.com).*

## Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from whom you purchased this product.

- ✦ Internet Tablet
- ✦ USB cable
- ✦ USB host/keyboard adapter
- ✦ Power adapter

 
## Features

- ✦ Browse the Web  
Visit your favorite websites
- ✦ Check your e-mail  
Keep in touch with friends and family
- ✦ Watch YouTube™ videos  
Browse the world's most popular video-sharing community
- ✦ Read your favorite books  
Download thousands of books with the included E-book reader \*
- ✦ Discover thousands of apps for Android™  
Games, applications and more with the installed marketplace
- ✦ Connect to the Internet wirelessly  
High-speed Wi-Fi 802.11 b/g/n networking
- ✦ Enjoy your media library anywhere  
Portable powerhouse plays popular music, video and photo formats
- ✦ MicroSD memory card reader  
Increase your storage capacity (up to 32 GB supported)
- ✦ Built-in camera  
Convenient front-facing camera
- ✦ Automatic orientation detection  
Read any way you want; the display adjusts automatically!
- \* Reading books in the ePub format requires the included E-book reader application.


# Getting to Know the Internet Tablet

## Unit at a Glance


Name		Description
1	Camera	Front-facing camera

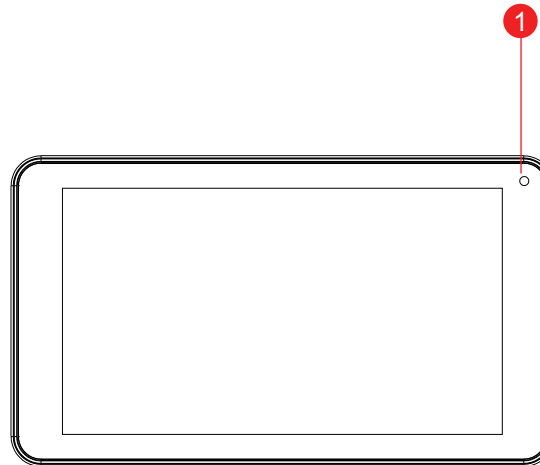

		Name	Description
2		Power Key	Press to turn the unit on, or to turn the screen on and off.
3		Headphone jack	Audio output connection for head-phones.
4		USB Host	Connect a storage device to the tablet.
5		Volume + key	Press to increase the volume level.
6		Volume - key	Press to decrease the volume level.
7		SD Card slot	Load external microSD memory cards here.

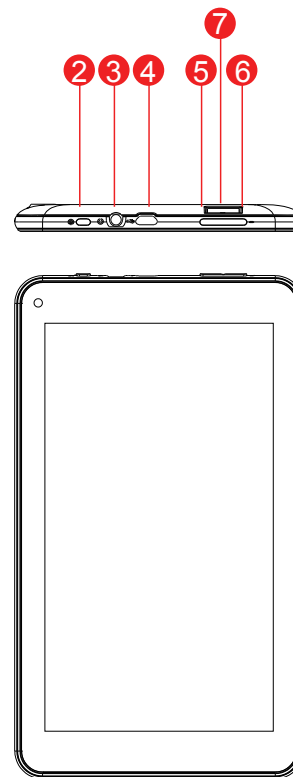 

Name		Description
8	camera	Rear-facing camera
9	Speaker	Speaker output is automatically muted when using headphone jack.
10	Reset	Press to reset the tablet if it freezes or otherwise behaves abnormally. (Use a paperclip or other small object to gently press this key.)

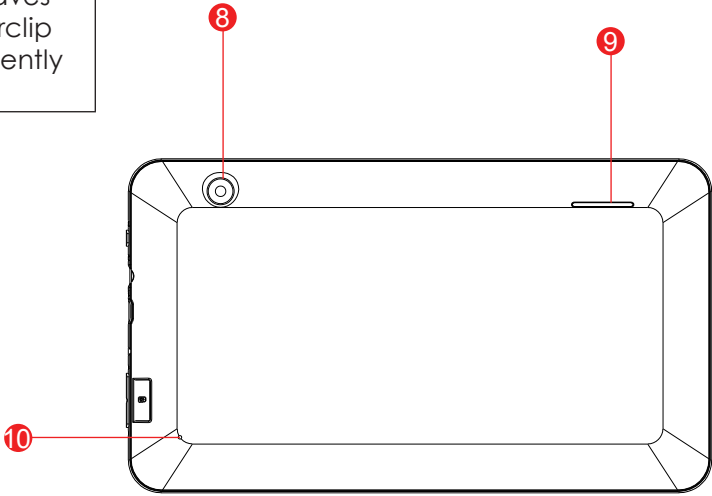 

## About the Touchscreen

Your tablet comes equipped with an easy-to-use touchscreen which allows access to the tablet's functions. Use your fingertip to touch the area of the screen where a control icon is displayed. If you touch and hold the screen, it will register as a continuous button press.



*To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the touchscreen controls.*

### Protective Film

A thin film has been applied to the touchscreen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

### Touchscreen Actions

You can control the functions of the tablet by using the touchscreen in combination with the three touch keys located on the bezel. To control the tablet with the touchscreen, use your fingertip to manipulate icons,

buttons, menu items, the on-screen keyboard and other items displayed on the screen.

You can perform the following actions on the touchscreen using your fingertip.

<b>Touch:</b>	To activate an on-screen item (e.g., application icons, buttons, menu items and the letter/symbols of the on-screen keyboard), simply touch it with your fingertip.
<b>Touch and Hold:</b>	Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip until the action occurs.
<b>Drag:</b>	Drag an on-screen item to change its position (e.g., an application icon on the home screen). To drag an item, touch and hold it for a moment, then without lifting your fingertip, move your fingertip on the screen until the item reaches its target destination.



<b>Swipe:</b>	<p>Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view.</p> <p>To swipe, touch the screen and then quickly move your fingertip across the screen without lifting your fingertip. Do not pause on the screen with your fingertip at the initial point of contact or you may accidentally drag an item instead.</p>
<b>Double-tap:</b>	<p>Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a webpage section will cause the browser to zoom and fit that section to the width of the screen.</p>


## About the Orientation Sensor


The tablet contains a sensor that will automatically change the orientation of most screens as you rotate the tablet. The sensor works best when the tablet is rotated perpendicular to the ground (i.e., when the tablet is held upright and not flat on its back).



The orientation sensor can be turned on and off in the **Display** settings menu.

## Charging the Tablet

The current battery status will be always displayed in the lower right of the screen in the system information bar. The battery icon  will change in accordance with the battery status.

When connected to the DC charger, the status area on the bottom bar will display the  charging icon. Note the lightning symbol inside the battery icon.

### To charge the battery:

1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the power jack on the tablet.
3. Disconnect the power adapter when the tablet is fully charged.



*The battery used in this device may cause a fire or chemical burn if mistreated. Do not disassemble, incinerate or heat the device. Do not leave the device in direct sunlight or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label, as this may result in a fire or electric shock.*

## Inserting a Memory Card

The tablet accepts microSD memory cards. Insert a memory card into the microSD card slot to:

- ✦ Increase the memory capacity of your tablet
- ✦ Play media files stored on the memory card (e.g. music, video or photo files).

### To insert a memory card:

1. Align the memory card with the card slot. The metal contacts of the memory card should face down and towards the LCD screen.
2. Slide the card into the spring-loaded slot. Push the card in until it clicks into place.



*Do not attempt to insert objects other than a microSD memory card into the card slot. A compatible memory card should fit easily into the card slot. If you encounter resistance, check the alignment of the card. Do not attempt to force the card in.*

*Avoid touching the gold contacts of the memory card.*