

Model : PN-810

How to enter Bluetooth Test Mode

1. Introduction

This is for the engineer who tests Bluetooth.



2. How to enter Bluetooth Test Mode

1) Turn on the phone


[Step 1] In Main display

Press [Menu] → [1. CUSTOMIZE] → [8. Settings] → [7. Bluetooth] → [1. Power] → [On]

Main Menu Screen

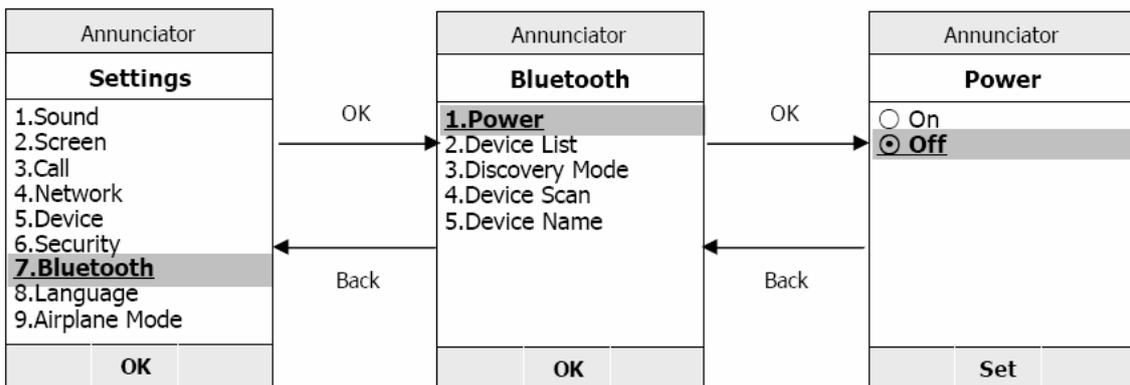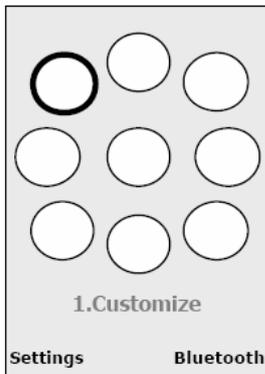

Default : Off

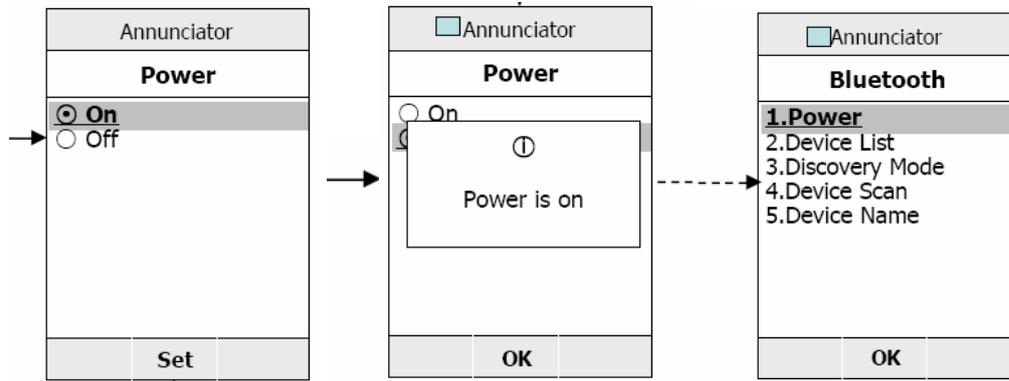

* Bluetooth icon displayed in indicator area

[Step 2] In Main display

(a) Input Followings ; #76810#8378#

(b) You can enter 'TEST Menu' → Select [21. BT RF TEST] → 'Test Mode Entered!'