

# **Wireless Speaker with Light**



**Model No. YS-BS0239 (SSS-6/2400)**

## **INSTRUCTION MANUAL**

**PLEASE READ ALL INSTRUCTIONS CAREFULLY  
AND RETAIN FOR FUTURE USE**

## **Getting started**

Remove the product from the box.

Please retain all packaging until you have checked off all parts and contents on the package contents list.

## **Package Contents**

Sound Splash Bluetooth Enabled Speaker

USB charging cable

3.5mm Aux cable

Instruction Manual

## **Features**

Wirelessly connects to all Bluetooth enabled devices

Compatible to iPad, iPhone, Samsung Galaxy phones, laptops and more

Play music wirelessly

IPX4 water resistance

Speaker power - 3 watts

Wireless range: 33 feet

Suction cup sticks to any smooth surface

Built-in mic for speakerphone & hands-free conversation

Built-in rechargeable battery

USB cable for recharge included

Auxiliary input

Auxiliary cable included

## **IMPORTANT SAFETY INFORMATION**

1. Read all instructions before using this product.
2. Do not leave this product unattended while connected to a power supply.
3. Do not immerse in water or any other liquids.
4. Do not use if unit has been dropped or damaged in any way.
5. Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
6. Place the unit on a sound, even surface, free of vibrations and away from sources of heat.
7. Do not use with wet hands.
8. Do not place objects into openings.
9. Keep free of dust, lint, hair etc.
10. Do not use this unit for any other reason than its intended use.
11. Keep this product out of reach from children.
12. This product is not a toy.
13. Do not play music at excessive levels, especially near children, as it may damage hearing.


## **CAUTION: SPLASH PROOF**

This unit is designed to resist mild steam and light splashes from a shower and/or bath. Speaker must never be operated under running water. Under no

circumstances should it ever be fully immersed in water.

This unit has rubber seals to minimize the risk of moisture getting inside. Do not immerse it in water or else risk permanent damage to the electrical and mechanical parts.

## Description of Parts

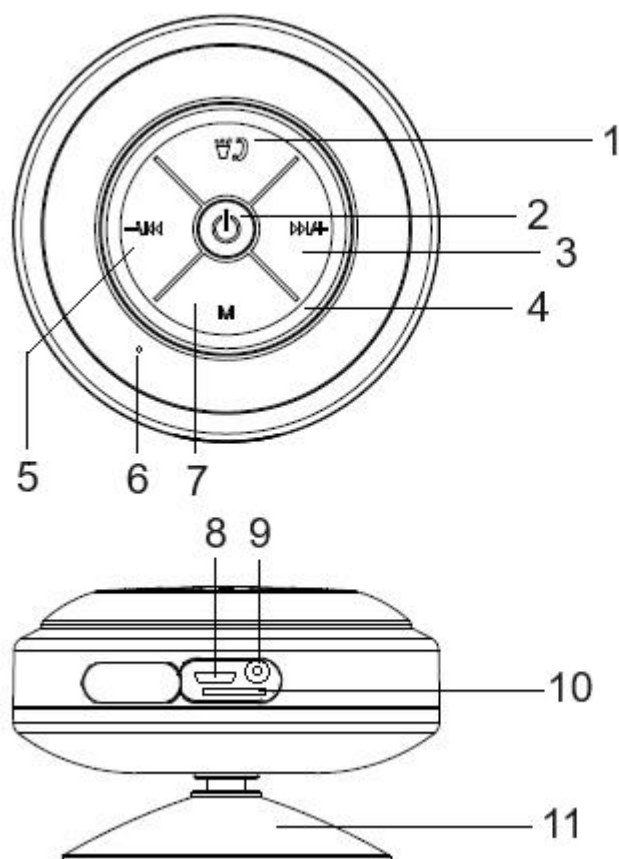

S.No.	Description	S.No.	Description
1	Light / Phone Button	7	Mode / TWS Button
2	Power Button / LED Indicator / Play/Pause Button	8	Charging Port
3	Next Track / Volume Increase	9	Aux-In Port
4	Color Changing Light	10	Micro SD (TF) Card Slot
5	Previous Track / Volume Decrease	11	Suction Cup
6	Built-in Microphone		

## INSTRUCTIONS FOR USE

### Charging the speaker

**For best results, fully charge the speaker before its first use.**

Connect the USB cable (included) to the charging port of the speaker and insert the other end into a suitable USB port of your computer or a similar power source.

When the LED Indicator light turns red, it indicates the speaker is charging. Once fully charged, the red LED light will turn off.

It takes 1.5 to 2 hours for the speaker to fully charge.

Once the speaker is fully recharged, disconnect the USB Cable and firmly close the USB Charging Port with the Rubber Cover.

If the USB charging port is not securely covered, water may seep into the circuitry and may damage the speaker. This damage will NOT be covered under product warranty.

**Note:** When the speaker is running on low battery, please recharge it.

**Never exceed the recommended charging time. Never leave product unattended whilst charging.**

### **Turn On/Off the Speaker**

Long press the “Power” button until you hear the indication tone from the speaker with color changing light on. Your speaker is now ON and is entering “pairing” mode.

Long press the “Power” button until you hear a unique tone to indicate that the speaker has turned OFF.

### **Turn the speaker to Bluetooth pairing mode**

Long press the “Power” button until you hear the indication tone from the speaker with color changing light on. Your speaker is now ON and is now in “pairing” mode.

**(Note:** The speaker will first search for previously paired devices. It will automatically pair after finding a previously paired device.)

### **Pairing your device with Bluetooth Speaker**

Your **Wireless Speaker** can wirelessly stream audio from any Bluetooth enabled device within 33 feet. Simply follow the steps below.

1. Turn the speaker ON, you would hear the indication tone from the speaker with color changing light on.
2. Enable the Bluetooth feature on your smartphone, tablet or computer.
3. It will search for various devices
4. The pairing name of the Bluetooth Speaker is “**SL SOUND SPLASH**” Pair it with this device.
5. You might be prompted with “Pair with **SL SOUND SPLASH?**” on your mobile device, with “Cancel” and “OK” options. Please click “OK”
6. If a password is required, enter ‘0000’ to finalize pairing.
7. Once paired successfully, another indication tone would be heard.
8. If you fail to pair it within the allotted time frame or you want to pair it with a different Bluetooth device, please follow the steps outlined above.
9. Select your favorite song on the Bluetooth device to play it through the Wireless Shower Speaker.

### **Listening to Music Wirelessly**

In order to stream music wirelessly, please ensure that your device (smartphone, tablet or computer) is paired with the Bluetooth speaker. Once paired, play music from your device.

Function	Operation	Button
Increase Volume	Playing music	Press & Hold the Volume Increase button to increase the volume
Decrease Volume	Playing music	Press & Hold the Volume decrease button to decrease the volume
Pause	Playing music	Press Play / Pause button once to pause music
Play	Pause	Press Play / Pause button once to play music
Previous track	Playing music	Short press the Previous Track button to the previous track
Next track	Playing music	Short press the Next Track button to the next track

(**Note:** An indication tone will alert you when the volume is adjusted to minimum or maximum level.)

### Phone calls using the Bluetooth Speaker

Please ensure that you are paired with the Bluetooth Speaker to use the functions below. When there is an incoming phone call, the music will automatically pause and you will hear the phone ringtone on your phone.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the Phone button once to answer an incoming call.
Reject incoming call	Incoming Call	Press and hold the Phone button.
Increase Volume	Incoming Call	Press & Hold the Volume Increase button to increase the volume
Decrease Volume	Incoming Call	Press & Hold the Volume Decrease button to decrease the volume
End Call	Incoming Call	After your phone conversation, press the Phone button
Redial last number	Standby mode and connected to a device	Short press Phone button twice

### TWS pairing use (if you own 2 SL Splash Proof Bluetooth Speakers)

- Make sure both speakers are “ON” and not paired with any Bluetooth device. An indication tone would be heard from each speaker.
- Long press the TWS button on any one speaker.
- Both units will wirelessly connect with each other, and you would hear an indication tone after they pair together successfully.
- Activate the Bluetooth function on your source device (Mobile Phone, Tablet etc.) Please refer to manufacturer’s instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find “**SL SOUND SPLASH**” – Pair it with this device.

- You might be prompted with “Pair with **SL SOUND SPLASH?**” message on your source device, with “Cancel” and “OK” options. Please click “OK”.
- If required, enter the password “0000” to pair with the device.
- Once paired successfully, an indication tone would be heard.
- You can now stream wireless music on your speaker through your source device.

**Note:** TWS stands for True Wireless. If you want to separate 2 speakers again for individual use, long press the TWS button on any one speaker.

### **Stream music from Micro SD (TF) Card**

- Turn ON the speaker.
- Insert the Micro SD (TF) Card preloaded with songs into the Micro SD (TF) Card Slot of the speaker. Speaker would automatically start playing songs.  
*Note: Micro SD (TF) Card not included.*
- To Skip Track Forward – Short press the Skip Forward button.
- To Skip Track Backwards – Short press the Skip Backward button.
- To Pause the Track – Short press the Play/Pause button.
- To Play the Track – Short press the Play/Pause button.
- Long press + to increase the volume or - to decrease the volume.

**Note:** Micro SD (TF) Card: Supports up to 32GB; Supports music file format: MP3.

### **Listening to Music using AUX-In**

1. Turn on the speaker.
2. Plug the 3.5 mm Aux-in cable (included) into the AUX-In port of the speaker, and plug the other end of the cable to the audio device (such as computer / tablet / MP3 Player etc.).
3. Select your favorite song at the source device to play.

(**Note:** While using AUX-In function, except volume function, all functions such as playing next/previous track can be controlled only through your source device).

### **Color Changing LED light Mode (LEDs are not replaceable)**

1. Turn ON the device.
2. Short press the Light button to turn on/off the color changing LED lights.

### **Tips!!**

1. Short press the “Mode button” to switch between different functions of the speaker – Bluetooth / Aux / Micro SD (TF).  
(Note: This switching function cannot work in TWS pairing use.)
2. Do not play music at excessive levels as it may result in damage to hearing and/or equipment.
3. When the speaker is not in use, turn OFF in order to save battery power.

### **Specification**

Bluetooth version: 5.3

Bluetooth Range: 33 feet

Speaker output: 3W

Size (including suction cup): Dia. 3.63” x 2.22” H

Weight: ~4.3 oz

Power input: DC 5V

Charging time: 1.5-2 hours

Play time: about 1 hour

Built-in rechargeable lithium battery: 3.7V 300mAh

(**Note:** Battery life and charging time may vary based on usage, type of devices connected & wireless distance.)

#### **CAUTION: SPLASH PROOF LIMITATIONS**

1. The Bluetooth Speaker can handle a brief splash of water on its surface (IPX4 water resistant). Speaker must never be operated under running water. Under no circumstance should it ever be fully immersed under water. Before using the Bluetooth Shower Speaker in a bathroom, make sure that the splash proof Rubber Cover is tightly closed in the correct position.
2. After use in the bathroom always wipe the outside of the speaker thoroughly if it becomes damp with moisture or condensation. This will help prevent the internal parts of the unit from possible moisture damage.

#### **Troubleshooting**

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
<b>Low sound level</b>	Source (smartphone, tablet, computer, etc.) volume too low.	Adjust source volume.
	Battery dead	Charge Battery.
<b>Sound distorted</b>	Battery nearly dead	Charge Battery.
<b>No sound at all</b>	Source (smartphone, tablet, computer, etc.) turned off.	Turn the source on.
	Speaker turned off.	Turn the speaker on.
	Volume turned down source.	Adjust volume source.
	Media paused on source.	Play media from source.

#### **Care and Maintenance**

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives.

#### **FCC Instructions**

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

**Caution:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**NOTE:** This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause

- harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna. Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

#### Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.