

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

03/00

© 2000 Tandy Corporation.

All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

Cat. No. 60-2774

RC School Bus

Your RadioShack RC School Bus is your own personal School Bus. You can charge forward, turn around, then charge off in another direction.

Note:

You need four AA batteries (not supplied) to power the School Bus, and one 9V battery (not supplied) for its transmitter.

INSTALLING BATTERIES

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the School Bus or the transmitter.
- Dispose of batteries promptly and properly; do not bury or burn them.
- If you do not plan to use the School Bus for several days, remove the batteries.

Installing the School Bus's Batteries

You need four AA batteries (not supplied) to power your School Bus. We recommend RadioShack alkaline batteries.

Follow these steps to install the batteries.

1. Set ON/OFF on the bottom of the School Bus to OFF.
2. Use a coin to twist the slot on the battery compartment cover, then lift the cover to open it.

Caution: The battery compartment cover is hinged. Do not try to remove it.

3. Install the batteries as indicated by the polarity symbols (+ and -) marked inside.
4. Replace the cover. Be sure it snaps in.

If the School Bus moves slowly or does not move at all, replace the batteries with fresh ones.

Installing the Transmitter's Battery

The transmitter requires one 9V battery (not supplied). We recommend RadioShack alkaline battery.

1. Press and slide the battery compartment cover off the transmitter.
2. Put the battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover. Be sure it snaps in.

When the transmitter's range decreases, replace its battery.

OPERATION

Warning: Never play with your School Bus in the street.

1. Set ON/OFF on the bottom of the School Bus to ON.
2. To have the siren sound, music & realistic human voice when your are playing the School Bus, slide ON/OFF of sound switch to ON.
3. The School Bus's transmitter has two control buttons. Press and hold down the forward button to move forward with music, headlight & flashing emergency light.
4. Release the button to stop the School Bus with flashing emergency light & realistic human voice.
5. Press and hold down the backward button to make it reverse in circle with music, headlight & flashing emergency light.

HELPFUL HINTS

These hints can help you get the most enjoyment from your School Bus.

Running your School Bus continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your School Bus's batteries run down, let the School Bus cool at least 10 minutes before installing new batteries.

If the School Bus's motor runs but the School Bus does not respond to the transmitter, move the transmitter closer to the School Bus and try again.

If someone uses a CB nearby, it might interfere with control of the School Bus. If this happens, move the School Bus away from the CB.

You cannot operate your School Bus near devices with transmitters that use the same frequency (27 MHz).

CARE AND MAINTENANCE

The following suggestions will help you to take care of your RadioShack RC School Bus so you can enjoy it for years.

Do not expose the School Bus and its transmitter to temperature extremes.

Wipe the School Bus with a damp cloth occasionally to keep it look new.

Do not use the School Bus on a wet floor, on sand, or in mud, rain or snow. These may damage it.

If the School Bus moves slowly, and you have installed fresh batteries, check the wheel mechanisms and remove any lint, thread, hair or dust you see.

Modifying or tampering with the School Bus's or the transmitter's components can cause a malfunction and might invalidate the warranty and void your FCC authorization to operate them. If the School Bus does not work properly, take it to your local RadioShack store for assistance.

THE FCC WANTS YOU TO KNOW

Your School Bus or its transmitter might cause TV or radio interference even when they are operating properly. To determine whether your School Bus or its transmitter is causing the interference, release the transmitter's control button and turn off your School Bus. If the

interference goes away, your School Bus or transmitter is causing it. Try to eliminate the interference by:

- Moving your School Bus away from the TV or radio

- Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your School Bus and transmitter.