

Quick Start Guide



MAGIC ARM
Phone Stand with Bluetooth Speaker

01 WHAT'S IN THE BOX

Phone Stand with Speaker x 1
Type-C Charging Cable x 1 Quick Start Guide x 1

02 SPECIFICATIONS

- 1 Product Name.....Magic Arm
- 2 Bluetooth Version.....V5.3
- 3 Working Range.....>70ft
- 4 SNR.....>65dB
- 5 Charging Input.....DC 5V/1A
- 6 Battery Capacity....3.7V 1500mAh
- 7 Item size.....144.5*89.5*55mm
- 8 Item weight.....372g

03 CONTROL BUTTONS

⏻	Long press (2-3s)	Power on/off
⏻+⌚	Long press(8-10s)	Factory data reset
⏻	Short press	Play/Pause Music
⏻	Short press	Turn down volume.
⏻	Long press	Previous track
⏻	Short press	Turn up volume
⏻	Long press	Next track

04 TIME INSTRUCTION

It enters to time mode and show time on LCD display when turn on the phone stand speaker.

Time Adjustment:
Short press button "⌚" to adjust 12 hours by short press button "⏻" and "⏻". After adjusting hours, short press button "⌚" to enter the minutes setting. After correcting the time, short press button "⌚" to complete the setup

Alarm Mode:
Long press button "⌚" to enter alarm mode. Setting the time of alarm is the same as setting the time. Please refer to "Time Adjustment". (A small blinking bell in the upper right corner indicates that the alarm is being set.)

Snooze Mode:
When the clock alarms, short press any button other than button "⌚" to enter snooze mode. The clock will alarm again after 5 minutes. (When the LCD display shows the time and the alarm display flashes, the clock is in snooze mode)

Turn off the alarm:
Short press button "⌚" to turn off the day's alarm clock.

Cancel the alarm:
Double click button "⌚" can cancel the alarm clock setting.

NOTE:
> If you have set the alarm clock, it will still alarm at the set time even if the speaker is turned off.
> If you want to use it as an alarm clock for a long time, we recommend that you always use the charger. Avoid shutting down due to low battery.

05 SCREEN CONTROLS

Short press button "⏻" to turn off the LCD screen. Short press button "⏻" again to turn on the LCD screen.

06 INDICATOR LIGHT STATUS

- >Bluetooth pairing indicator: When the speaker is turned on, a "BT" character is flashing status. That means the speaker is ready to pair. Once pair, the "BT" will be solid white.
- >TF card mode: After inserting TF card, the "TF" character will be solid white.
- >Battery charging: While the speaker is charging, the indicator light will turn solid red. Once speaker is fully charged, the red light will turn off. (This charging indicator is on the right of the charging port.)

NOTE:
During use, the charger connector will automatically stop charging when the battery is full and switch to the charger supplying power directly to the speaker and the battery will stop supplying power. The battery is only used to supply power again if the speaker shows low power current and exceeds the supply current of the charger.

07 SPEAKER PAIRING

- To pair the speaker:
- > Make sure the smartphone, tablet, or computer you're using with the speaker has Bluetooth.
 - > Turn on the speaker (press and hold the button "⏻" for 2-3 seconds) until the display lights up.
 - > Find the Bluetooth name "Magic Arm" in your device's list, then select to pair.

NOTE:
>Auto re-connection: The device and Bluetooth will find each other every time, so long as the speaker is set to Bluetooth and your device's Bluetooth is on.
>Low power shutdown: Automatic shutdown when the power is lower than 3.3V.

08 DISCONNECT AND RECONNECT DEVICE

Double click the button "⏻" to disconnect the speaker from the device and enter into pairing mode. If you want to reconnect the speaker and the device, just need to double click the button "⏻" again.

09 CALLING MODE

- >Receiving: Short press button "⏻" to receiving a call when call is coming.
- >End Call: Short press button "⏻" again when need to end a call.
- >Reject Call: Long press button "⏻" for 2 seconds when call is coming.

10 SAFETY PRECAUTIONS

- Please follow the instructions for all operations and use.
- > Do not charge near a water source or in the rain to prevent electric shock.
 - > Do not damage the cable, especially the connectors.
 - > Unplug the Type-C charging cable when it is not in use or during a thunderstorm.
 - > Please keep the speaker away from heat sources (including all equipment that generates heat), such as stoves.
 - > Do not expose the speaker to extreme temperatures for a long time. Excessive heat or extreme cold temperatures may damage the battery.
 - > Do not attempt to disassemble the speaker.

11 ONE YEAR WARRANTY

- > Our products are covered by a 12-month warranty, starting from the date of purchase.
- > For quality-related issues, we will, at its sole option, either repair or replace the defective product or part. We are not liable to the buyer for any operational loss or other indirect or consequential losses whatsoever.

12 Not Covered Under Warranty:

- > Damage from outside sources.
- > Damage from misuse of products (including, but not limited to: falls, extreme temperatures, water, operating devices improperly, incorrect connections, incorrect battery use).
- > Damage caused by accident, improper care, negligence, excessive wear and tear, or improper installation or assembly contrary to any written installation instruction.
- > Items that have expired their warranty period.
- > Non quality-related issues (after 30 days of purchase).
- > Repairs through 3rd parties.



Scan the code for more video tutorials

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. operation is subject to the following two conditions

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.