



CONTENTS	
DISCLAIMER AND SAFETY GUIDELINES	01
MAINTENANCE AND CARE	03
PRODUCT OVERVIEW	04
FLIGHT PREPARATION	05
FLIGHT OPERATION GUIDE	08
Remote Operation Guide	09
1. Pair the Remote with the Drone	09
2. Flight Calibration	10
3. Flight Instructions	10
Take-off	10
Landing	12
Flight Directions	12
Speed Switch	14
Headless Mode	14
360° Flip	15
One Key Return	16
High-Speed Rotation	16
Circle Fly	17
Photo/Video	18
Altitude Hold/Hover	18
Emergency Stop	18
App Operation Guide	19
1. App Downloading and Installation	19
2. Link the App with the Drone	20
3. Function Overview of the App	22
TROUBLESHOOTING GUIDE	22
SPECIFICATIONS	26

## DISCLAIMER AND SAFETY GUIDELINES

- DO NOT look directly into the drone light.
- DO NOT treat the product as household waste.
- DO NOT fly above or near obstacles, crowds, open water, public road, high voltage power lines or trees.
- DO NOT use the drone in severe weather conditions. These include wind, snow, rain, fog, hail, lightning, tornadoes or hurricanes.
- Stay away from the rotating propellers and motors to avoid some tiny objects (e.g. hair) to get into them.
- This product is not a toy and not recommended for users under age 14.
- Please maintain line-of-sight of your drone at all times after it is powered up. Do not rely on the camera image to control your drone.

- This drone does not come with a GPS module. Please fly the drone within the control range and always keep an eye on the flying.
- This product is not intended for professional aerial drone photography.
- Be sure to observe all local regulations, obtain appropriate authorizations and understand risks. Please note it is solely your responsibility to comply with all flight regulations.

DYNALOG accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this product. The user shall observe safe and lawful practices including, but not limited to, those set forth in these Safety Guidelines. DYNALOG reserves the right to update this user manual.

## MAINTENANCE AND CARE

- Thoroughly check the drone after a crash or violent impact.
- Do not charge battery if it is hot. Let it cool down first.
- Remove the batteries from both the drone and the remote if they will not be used for a long time.
- Unplug the charger once the battery is fully charged.
- Store the drone and remote in a cool, dry place away from direct sunlight.
- Avoid direct contact of the camera with water or other liquids. Wipe dry with a soft absorbent cloth if it gets wet.
- Do not charge the battery next to inflammable materials, such as carpet, wood floors or countertops etc., or on surfaces that are electrically conductive. Do not leave the battery unattended while charging.
- To extend the battery's lifespan, recharge it at least once every three months if not using it for long periods of time.
- Please use the original battery provided. Use an incorrect type of battery may lead to fire hazards.
- Do not dispose of the battery in fire or a hot oven, cut or mechanically crush the battery, as this may cause explosions.
- Do not leave the battery in an extremely high-temperature environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not expose the battery to the extremely low air pressure, as this may result in an explosion or the leakage of flammable liquid or gas.

