

pocket watch



QUICK



**DJ COMBO  
ALARM CLOCK**

WITH LED LIGHTS

 
## WHAT'S IN THE BOX?

---


**A**



**B**



**C**

 

**D**

**QUICK START  
GUIDE**

**E**

**WARRANTY  
CARD**

- A - 1 Alarm Clock / Speaker  
B - 1 Micro USB Charging Cable  
C - 1 AUX Cable  
D - 1 Quick Start Guide  
E - 1 Warranty Card

## DEVICE OVERVIEW

---



## BUTTONS

---



### **Power Button**

- Press and hold for 1 second to turn the speaker on
- Press once to turn the speaker off.
- Press and hold the power button for 3 seconds while the speaker is on to set the timer to turn off in 30 minutes.



### **Bluetooth® Button**

- Press to switch between Bluetooth®, White Noise, AUX-In, and USB / Memory Card modes.
- Press and hold for 3 seconds to enable/disable lights and motion.

Note: Lights and motion are disabled by default in White Noise mode.



### **Previous**

- Press to play the previous track.



### **Play/Pause**

- Press to play/pause music or turn off an alarm.
- Press twice to enter clock brightness settings.
- Press and hold until LED flashes to enter clock settings.



### **Next**

- Press to play the next track.

## BUTTONS

---



### **Volume + / ALM1:**

- Press to increase volume.
- Press and hold to set up Alarm 1.

 


### **Volume - / ALM2:**

- Press to decrease volume.
- Press and hold to set up Alarm 2.

## PORTS

---

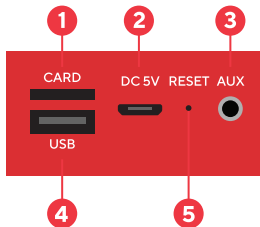

1 - **Memory Card Slot**

2 - **Micro USB (DC IN / Charging Port)**

3 - **AUX IN**

4 - **USB Input**

5 - **Reset Button:** Press and hold to return the device to its default factory settings.

## CHARGING YOUR DEVICE

---



DC IN / Charging Port

Use the included Micro USB cable to connect your device to a power source. Plug the Micro USB end of the cable into the **DC IN** charging port located at the back of the alarm clock, and connect the other end of the cable to a power adapter (sold separately). Please fully charge your device before using it for the first time.

## CLOCK SETUP

---



Press and hold the **Play/Pause button** for 3 seconds until you hear a "Time Adjustment" voice prompt, indicating Clock Setup.



Use the **Volume +** and **Volume - buttons** to adjust the time, and press and hold the **Play/Pause button** to confirm the hour/minute.

## ALARM SETUP

---

The Ryan's World DJ Combo Clock lets you set up to two alarms at a time.

### To set up Alarm 1:

- Press and hold the **Vol+ button** for 3 seconds until you hear a "Set Up Alarm 1" voice prompt, indicating Alarm 1 setup.
- The screen will either display "off" or "on". Press the **Vol+ button** to switch to "on" if you wish to set up the alarm, or press it again to switch to "off" to cancel the alarm. Press and hold the **Vol+ button** to confirm your selection. The clock will proceed to the next steps if you selected "on" and will exit Alarm 1 setup if you selected "off".
- Adjust the alarm time by pressing the **Vol+** and **Vol-** buttons. Press and hold the **Vol+ button** again to confirm the hour/minute.
- You will hear a "Set Up Alarm Sound" voice prompt, and an alarm song will play. Press the **Previous** and **Next buttons** to select a different alarm tone.
- Press and hold the **Vol+ button** to confirm your selection. An "Alarm Song Selected" voice prompt will play.

## ALARM SETUP (CONTINUED)

---

### To set up Alarm 2:

- Press and hold the **Vol- button** for 3 seconds until you hear a "Set Up Alarm 2" voice prompt, indicating Alarm 2 setup.
- The screen will either display "off" or "on". Press the **Vol- button** to switch to "on" if you wish to set up the alarm, or press it again to switch to "off" to cancel the alarm. Press and hold the **Vol- button** to confirm your selection. The clock will proceed to the next steps if you selected "on" and will exit Alarm 2 setup if you selected "off".
- Adjust the alarm time by pressing the **Vol+** and **Vol- buttons**. Press and hold the **Vol- button** again to confirm the hour/minute.
- You will hear a "Set Up Alarm Sound" voice prompt, and an alarm song will play. Press the **Previous** and **Next buttons** to select a different alarm tone.
- Press and hold the **Vol- button** to confirm your selection. An "Alarm Song Selected" voice prompt will play.



## ADJUSTING SCREEN BRIGHTNESS

---



Press the **Play/Pause button** twice to enter LED Brightness Settings. Use the **Vol-/Vol+ buttons** to make the display dimmer or brighter.

## BLUETOOTH® SPEAKER MODE

---



Press the **Bluetooth® button** until you hear a "Bluetooth® Mode" voice prompt. The device will automatically start searching for Bluetooth®-enabled devices nearby.

Enter Bluetooth® settings on your smartphone or other Bluetooth®-enabled device, and search for "**Ryan's World DJ Combo**". Tap to connect to Bluetooth®.

Note: If connected to Bluetooth® and you choose to change alarm or white noise sounds, Bluetooth® will automatically disconnect. Follow the steps above to reconnect to your Bluetooth®-enabled device.

## AUX MODE

 
---



1. Connect your external device to the **AUX input** at the back of the speaker via the included AUX cable to automatically enter AUX Mode.
2. An "Auxiliary Mode" voice prompt will play. You may now start streaming audio from your device.

## USB / MEMORY CARD MODE

---

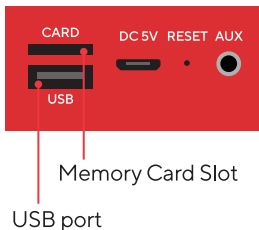

1. Insert a flash drive or other USB device (sold separately) into the **USB input**, or insert a memory card (sold separately) into the **Memory Card Slot** to automatically switch modes.
2. A "USB/Memory Card Mode" voice prompt will play. You may now start streaming audio from your USB device or memory card.

Note: If your speaker is connected to multiple devices, you can press the **Bluetooth® button** to switch between modes.

## WHITE NOISE MODE

---



To play white noise and sleep sounds, press the **Bluetooth® button** until you reach White Noise mode. Press the **Previous** and **Next buttons** to switch between sounds.



Press and hold the **Power button** to set the white noise timer to 30 minutes.



To turn off white noise, press the **Bluetooth® button** to enter a different mode, or turn off the speaker.

## HEAD AND HAND MOVEMENTS

---



The DJ Combo speaker features sound-reactive lights and motion to help get the party started! Play music in Bluetooth®, AUX, USB or Memory Card Mode, and DJ Combo's head and hands will move from side to side to the song's beat. When the music stops, DJ Combo will stop moving.

## SPECIFICATIONS

---

- Built-in Rechargeable Battery, 3.7V 3000mAh
- Up to 10 Hours Playing Time
- Bluetooth® Wireless Technology
- LED Screen Display
- LED Lights
- 2 x 3W RMS Power
- White Noise
- USB & AUX In Ports
- Memory Card Slot

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

## NEED HELP?

 
---

For customer support regarding your device, please submit a request by emailing **support@dpaudiovideo.zendesk.com**. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a DPAV customer service representative by calling **1-833-909-2673**. We are available Monday - Friday, 9am - 5pm PST, except major holidays. DPAV strongly urges customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Thank you for purchasing a Ryan's World product.

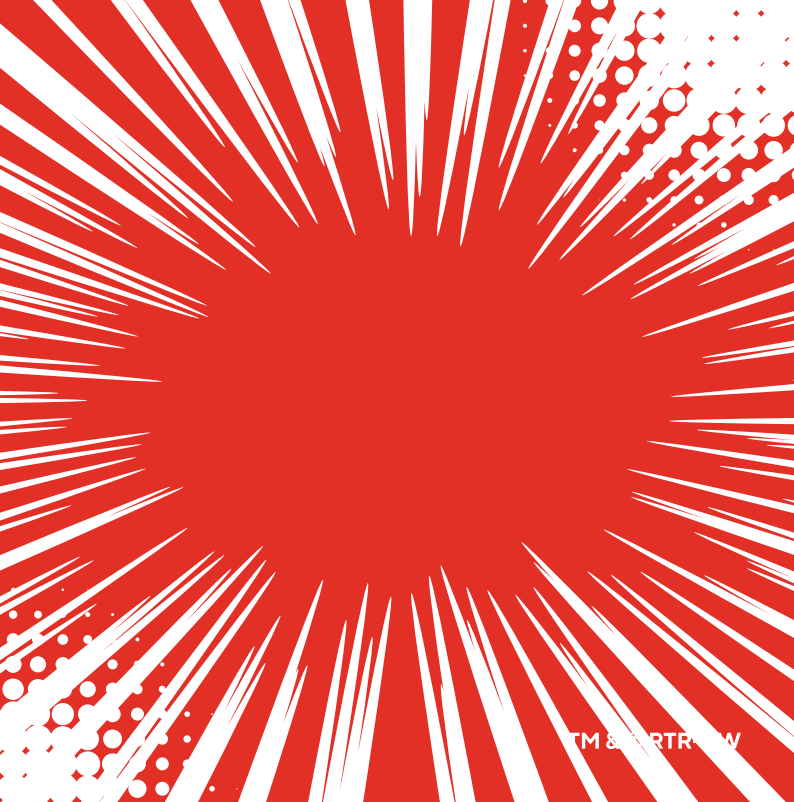

TM & © RTW