

打印机品牌色

 
CMYK
C:90 M:0 Y:60 K:0

潘通色
PANTONE: 无光版3265U / 上光版2240C


展开尺寸: 315*297mm

材质: 80g书写纸/双面印刷/折叠


折叠要求: 保证封面在最前面

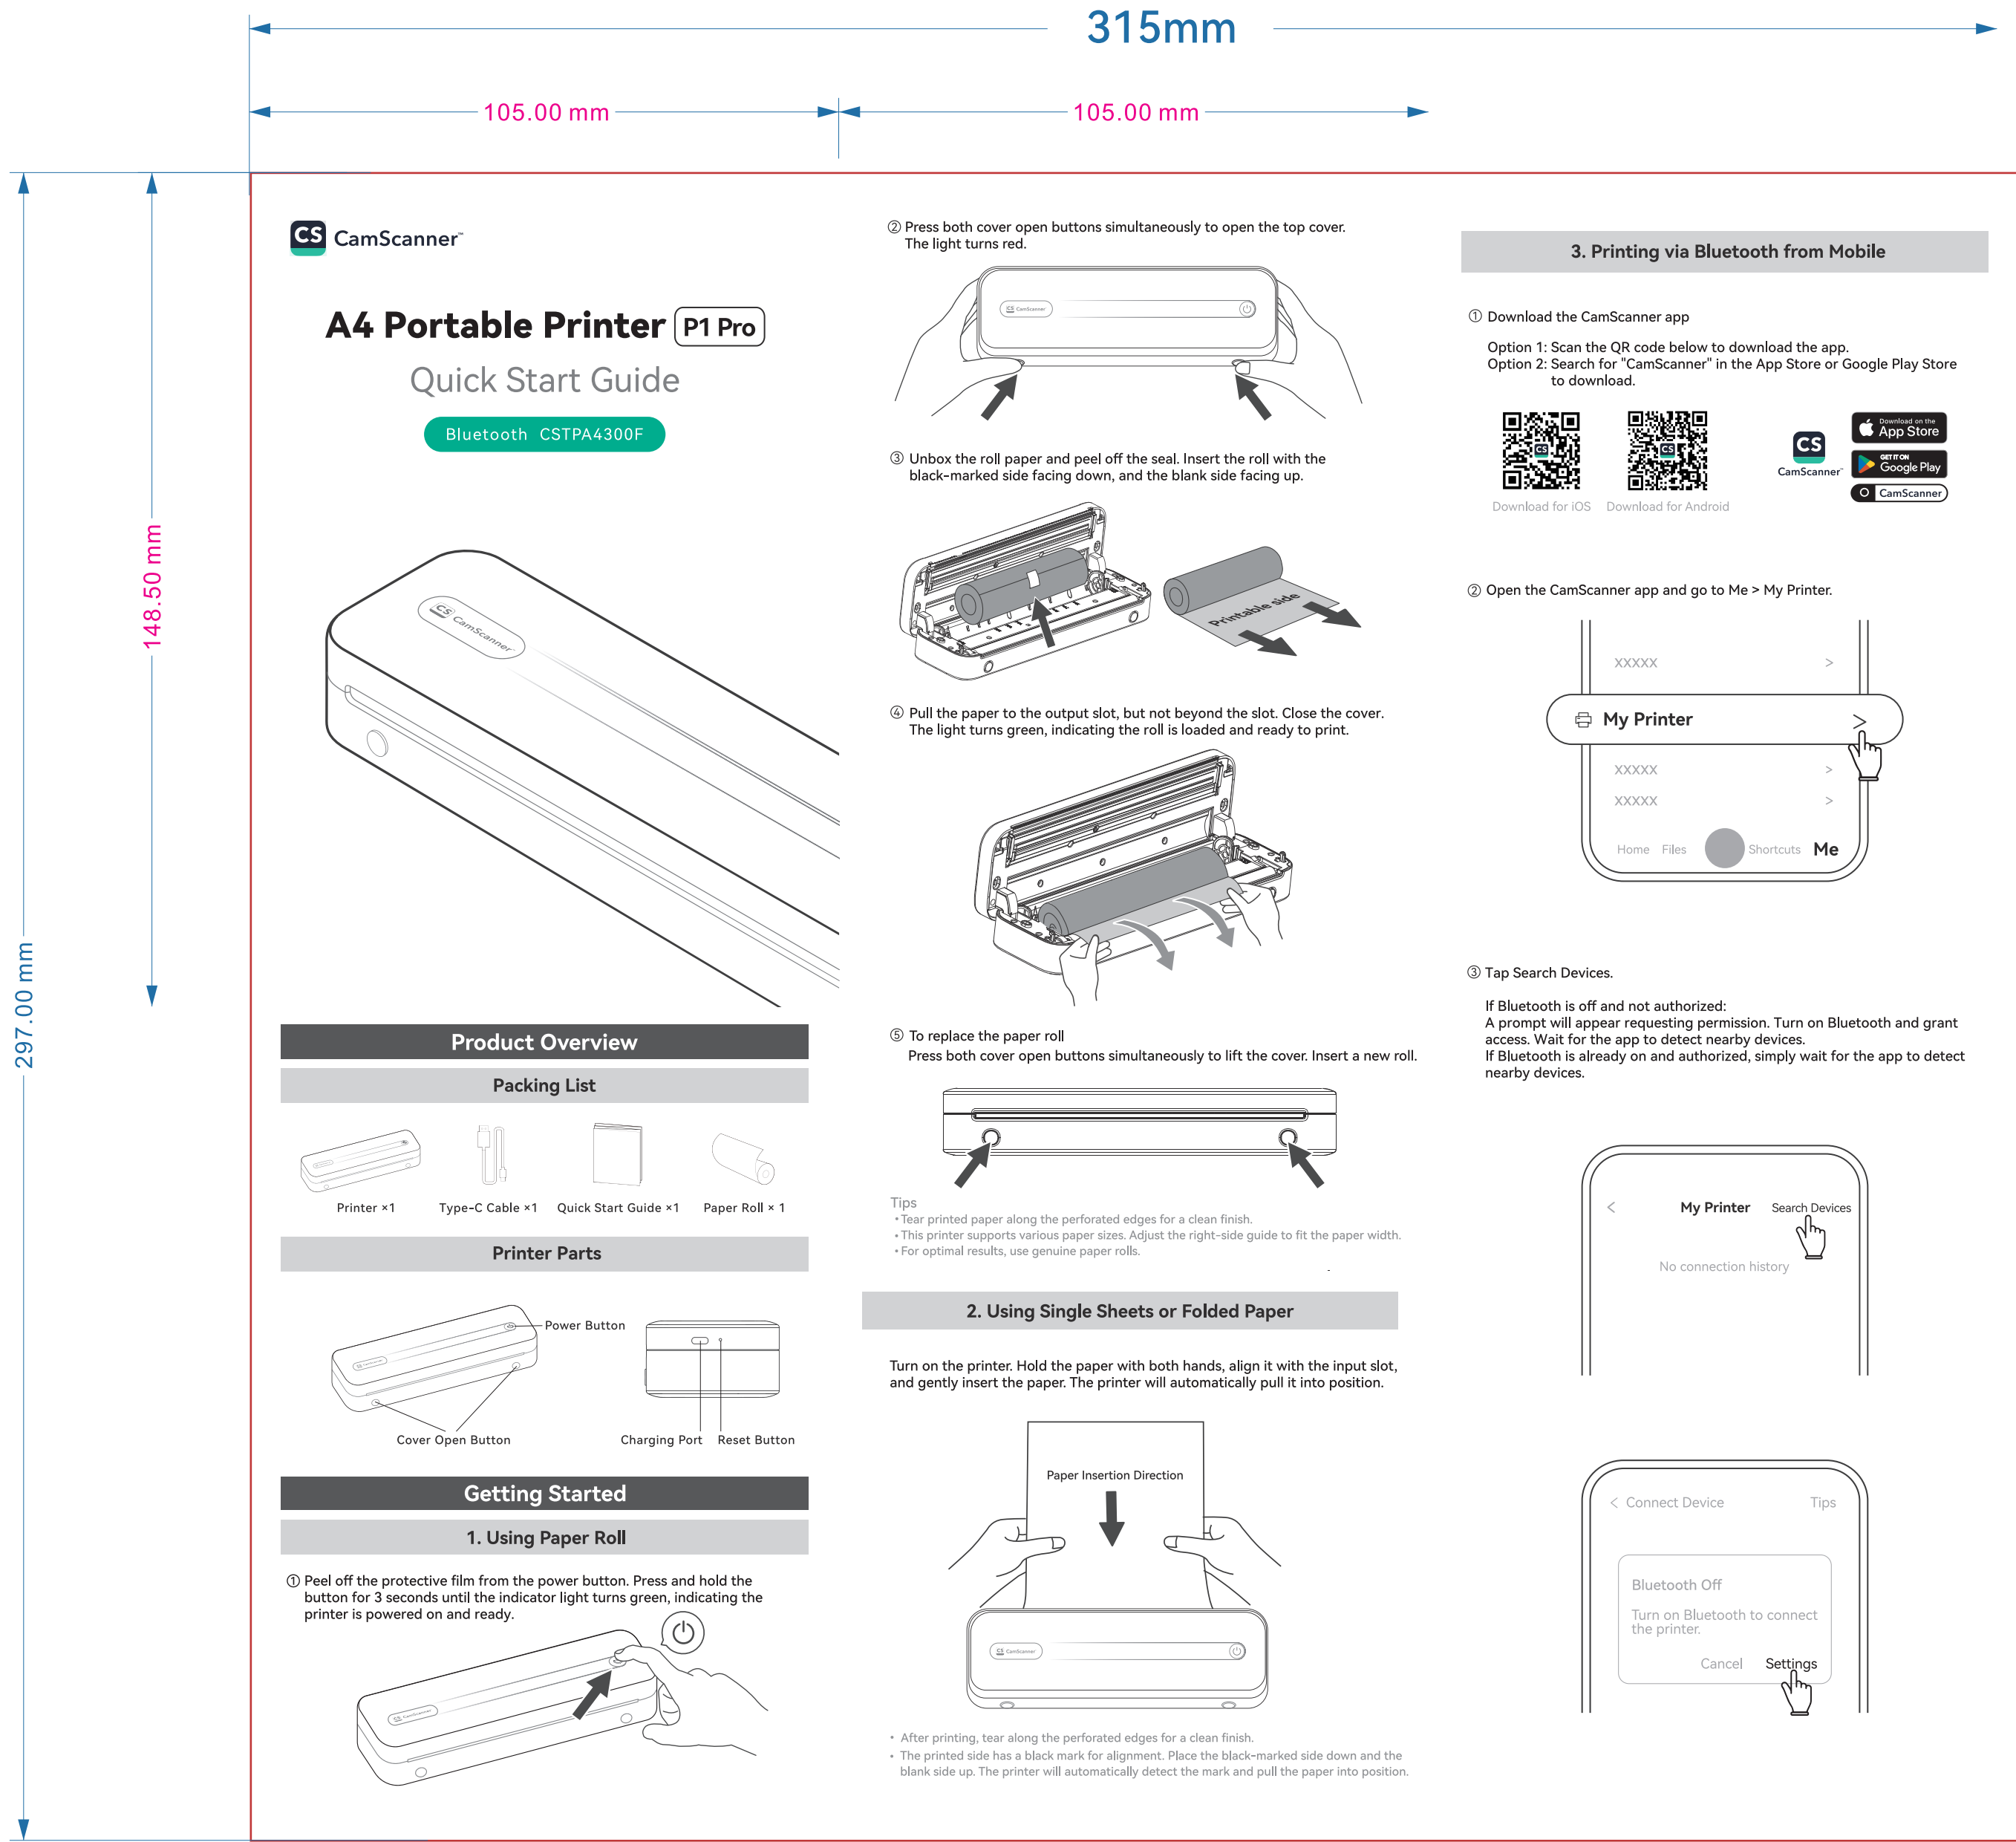

 ④ Ensure the printer is powered on and nearby. Select the printer to connect.

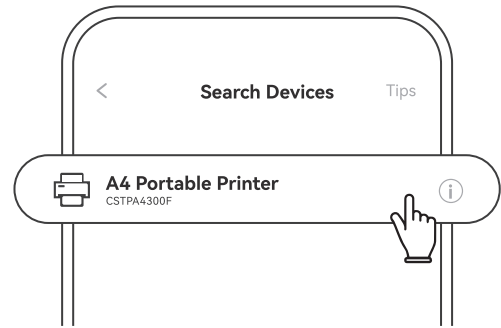

 ⑤ Once connected, select your file and start printing.

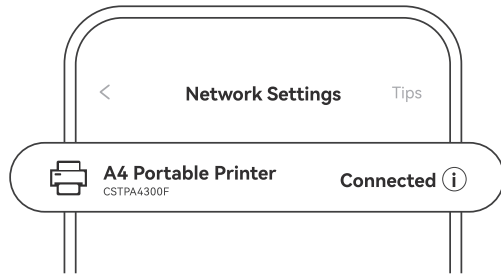

4. Printing via USB or Bluetooth on Computer

1. Install the Printer Driver

Download and install the printer driver from the CamScanner website: <https://www.camscanner.com/download>

2. Printing via USB

- ① Keep the printer powered on and connect it to your computer using the USB cable.
- ② Open the downloaded driver and complete the installation.
- ③ Select the file you want to print, then choose CSTPA4300F as your printer to start printing.

Tip: If the printer doesn't appear, reconnect the USB cable, then go to Add Printer to locate and add the device again.

3. Printing via Bluetooth

- ① Keep the printer powered on and enable Bluetooth on your computer.
- ② Open the Settings on your computer, then go to the Printer settings and add your printer.
- ③ Select the file you want to print, then choose CSTPA4300F (Bluetooth) as your printer to start printing.

