 




HEADRUSHTM MC

HR True Wireless Earbuds
8083575

EN · Product Description and Accessories



Charging case



Earmuffs x 3 pairs



USB charging cable

There are different size of earmuffs attached in the package, please select the suitable ones to wear.

■ Operational Guide

● Charge the Headphones

During using, if only red light flashes, it indicates headphones are at low battery level, please use them after fully charged.

Charging: place the headphones into the charging case

Red light lit in a breathing pattern = charging

 
Red light off = fully charged

Charging time: about 1.5 hours for a full charging

● Charge the Charging Case

If indicator light flashes slowly, its flashing times mean the times that the headphones can be charged, if the indicator light flashes rapidly, it means the charging case has a low battery capacity, please charge it in time; once the battery runs out, the headphones cannot be turned on.

Indicator light steady lit = charging Indicator light off = fully charged



Rated input: 5V \equiv 60mA(headphone) 5V \equiv 500mA(charging case)

Warning: The rechargeable batteries that provide power for this product must be disposed properly for recycling. Do not dispose of batteries in fire to prevent an explosion.

If not used for long periods of time, it is recommended to charge the product with lithium battery at least once per 3 months.

- **Power ON/OFF**

1. Power on automatically when taken out from the charging case;
2. Power off automatically while placed into the charging case.

- **Bluetooth Connection**

1. **Two Headphones Mode**

- Open the charging case to take two headphones out, press and hold the touch button of the left headphone to enter pairing state, red and blue light flashing rapidly;
- Set mobile phone to search for and connect to "EDIFIER TWS1", after pairing is successful, blue light will flash slowly.

2. **One Headphone Mode**

If use one headphone only, please take the left or right headphone out from the charging case, and refer to the procedures mentioned in "Two Headphones Mode" to pair it with mobile phone.

 
- **TWS (true wireless stereo) Pairing of the Left and Right Headphones**

The left and right headphones have finished TWS pairing before leaving the factory. If the wireless connection fails to resume, please follow the steps below to re-pair:


- With no TWS and Bluetooth connection, double press the touch buttons to enter TWS pairing state, blue lights flashing rapidly;
- After pairing is done, blue lights of two headphones will flash slowly.

■ Functional Operation Instructions

- Music playback (same operation for the left and right headphones)



 - Call (same operation for the left and right headphones)



- Clear pairing records: With no TWS and Bluetooth connection, respectively press and hold the touch button for 8 seconds.
- Disconnect from mobile phone: When the phone is connected, no music is playing and no phone conversation, press and hold the touch button for 5 seconds.

FAQs

Red light instead of blue light flashes.

- The headphones are at low battery level, please recharge the headphones.

Red light is off during charging.

- Please ensure the headphones are correctly placed into the charging case.
- When the headphones are not used for long periods of time, the battery will enter sleep state, it needs to charge about 30 minutes and then the red light will be lit.

No sound

- Check if the headphones are operating.
- Check if the headphones volume is at an appropriate level.
- Check if the headphones are correctly connected with mobile phone.
- Check if the headphones are operating within a normal working range.

The call quality of the headphones is not good.

- Check if mobile phone is in an area with strong signal.
- Please ensure the headphones are within effective distance (10m) and no obstacle between the headphones and mobile phone.

When playing music, cannot control pause/play/previous track/next track via headphones.

- Please ensure the paired device support AVRCP (Audio/Video Remote Control Profile) profile.

■ Maintenance

During using, please read the following suggestions carefully.

- Keep the product away from humid places to avoid affecting internal circuit. Do not use the product during intense exercise or with much sweat to prevent sweat from dropping into the product to make damage.
- Do not put the product in places exposed to sun or with high temperature. High temperature will shorten service life of electronic components, damage battery and deform plastic components.
- Do not put the product in cold places to avoid damaging internal circuit board.
- Do not dismantle the product. Non-professional personnel may damage the product.
- Do not drop, strongly vibrate, strike the product with hard object to avoid damaging internal circuit.
- Do not use drastic chemicals or cleaner to clean the product.
- Do not use sharp objects to scratch product surface to avoid damaging shell and affecting looking.

If the product cannot operate properly, please send it to your qualified maintenance agency.

■ FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

■ ISED Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- L'appareil ne doit pas produire de brouillage;
- L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.