


User Manual

— Product description —



YYK-635
Wireless Sports Headphones

Product Photo

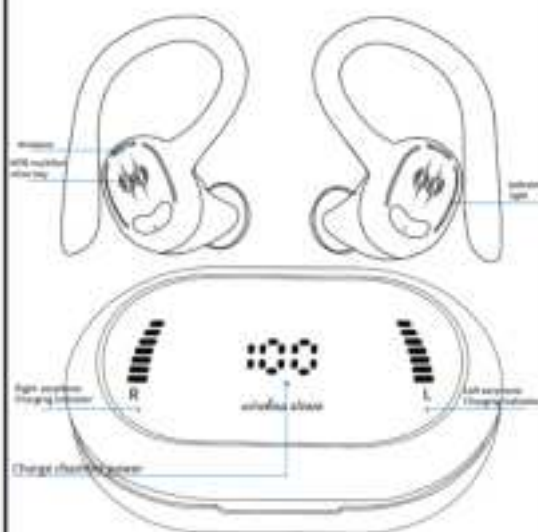

Wireless Pairing




Make sure the headset is off, press and hold the multifunction key for about 3 seconds until the blue light comes on once. Then the red and blue lights flash alternately (at this time it enters the pairing state) and waits for the connection.



Turn on the wireless function of the user's mobile phone (or other wireless device), and search or scan. At this time, the mobile phone will search all the wireless devices nearby, and click the headset name: YYK-635, and enter the password: 0000 (most mobile phones do not need a password at present). After successful pairing and connection, the headset indicator light goes off, indicating that the pairing connection is successful. At this time, you can make mobile phone calls and listen to songs.

MFB Button

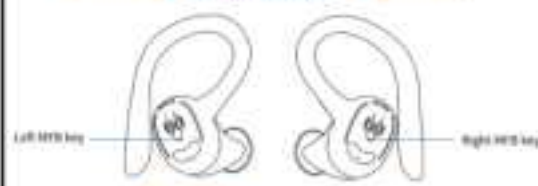

	Answer / play	Double tap the left or right MFB button
	Next song	Press and hold the left or right MFB button for 3 seconds
	Previous song	Press and hold the right or left MFB button for 3 seconds
	Volume up	In the state of playing music, triple-click the left or right MFB to add 1 grad
	Volume down	In the state of playing a song, triple-click the right or left MFB to reduce 1 grad
	Answer	Double tap the left or right MFB button
	Hang up	Double tap the left or right MFB button
	Refuse to answer	Press and hold the left or right or MFB button for 3 seconds
	Cancel call	Double tap the left or right MFB button
	Call log	Triple tap the left or right or MFB button (When not playing music)
	Close text	Double tap the left or right MFB button

ON/OFF switch

1. When the earbuds are detected in the charging bin, the earbuds will automatically power on, and all the status lights will flash red and blue 2 seconds to turn on.

2. After the earbuds are detected in the charging bin, the OFF button will turn off the earbuds.

How to pair

1. Insert the earbuds into the charging bin and press the earbuds simultaneously.
2. The red and blue lights will flash alternately to enter pairing mode.
3. Connect to the mobile phone or tablet via Bluetooth. (Note: iOS, Android, Windows, Mac OS, PS4, PS5, Xbox Series S, Xbox Series X, PlayStation 4, PlayStation 5, PC, etc.)

Pair with PC/laptop

1. Turn on the computer's Wi-Fi, Bluetooth, and ensure that the Bluetooth driver is installed and updated to the latest version.
2. Turn on the earbuds and enter pairing mode.
3. Click the computer's Bluetooth icon in the taskbar to open the Bluetooth settings window and click the earbuds to connect.

How to reset?

When the earbuds are fully charged, press the OFF button on the earbuds for 10 seconds to reset the earbuds. The earbuds will flash red and blue lights alternately for 10 seconds to enter pairing mode. The earbuds will be reset to the factory settings and the pairing process will be completed.

How to recharge the earbuds

1. Plug the cable into the charging bin and connect it to the power supply to start charging.
2. The display light will indicate the charging status: red for charging, green for full.
3. If the display light is not working, please check the connection of the cable.
4. When the earbuds are fully charged, the red light of the earbuds will turn off.

Product specification

Model	W501
Wireless support	BT 4.2/BLE 4.2/MP3/MP4
Communication range	10-15m
Frequency band	2.4GHz/11.62-11.68GHz
Bluetooth input power	10mW-100mW
Standby time	100h
Call time	8-10h
Music playing time	4-10h
Earbuds battery capacity	170mAh
Earbuds battery capacity	500mAh
Charging port and charging time	About 1.5h
Charging cable length	About 1.5m
Weight	10g

How to recharge the charging bin

1. Plug the cable into the charging bin and connect it to the power supply to start charging.
2. The display light will indicate the charging status: red for charging, green for full.
3. If the display light is not working, please check the connection of the cable.
4. When the earbuds are fully charged, the red light of the earbuds will turn off.

Mobile phone transmission range

The transmission distance of the mobile phone is shown in the following chart.



Waterproof specification

Waterproof in daily activities (including sweating, raining, face-washing and showering, except swimming in water, etc.)

* Note that the Wireless signal of mobile phones can't be transmitted in water.



Above water



In water

Attention

1. Please avoid disassemble/reassemble the product in case of failure or fire accident.
2. Please keep away from corrosive liquids to prevent the product from damage.
3. Please avoid exposure to extreme temperatures below 10°C, or above 60°C.
4. Please keep beyond the reach of kids or pets.
5. Please mind contact with sharp objects to avoid scratch.
6. Please avoid use in thundering and raining days to prevent damage or electrical shock.
7. In the case of non-use for above a month, please charge regularly for maintenance.
8. As the Wireless signal cannot transmit in water, it is not suitable for swimming or diving.

Why cannot I detect Wireless?

Why Wireless pairing failure?

1. The Wireless range is 10m; please ensure no obstacles and place the mobile phone close to the earbuds.
2. If the earbuds are connected to other mobile phone or devices, please disconnect first.
3. Please reboot the Wireless device and reset the earbuds.

Why do the earbuds produce no sound?

Or, why does the music playing stop?

1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.
2. To ensure proper connection, press the earbuds to fully connect the charging points to the charging bin.
3. The earbud charging points might be stained with dust or sweat. When place them into the charging bin for recharging, please clean with alcohol or cloth.
4. Please wipe the sweat on the earbuds before putting into the charging bin, and the indicator lights will turn on.

Why do the earbuds turn off automatically?

Please ensure sufficient battery level. In addition, the earbuds will automatically disconnect Wireless for 10mins. Place the earbuds back to the charging bin and they will restart after reconnecting.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device

must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Why cannot I recharge the charging bin?

1. No current or leakage appears when multiple units are plugged in together, and no stop occurs on.
2. No more equipment can be plugged in as the bin is full. There must be charging ports on the charging bin.
3. There is no charging port when the bin is full and the bin is not plugged in. When the bin is plugged in, the bin will charge the equipment in the bin.
4. There is no charging port when the bin is plugged in and the bin is not plugged in. When the bin is plugged in, the bin will charge the equipment in the bin.
5. There is no charging port when the bin is plugged in and the bin is not plugged in. When the bin is plugged in, the bin will charge the equipment in the bin.

• Safety Precautions •

For your safety and the safety of others, please read the following instructions:

1. Do not use the equipment if it is damaged or if it is not working properly.
2. Do not use the equipment if it is not working properly.
3. Do not use the equipment if it is not working properly.
4. Do not use the equipment if it is not working properly.
5. Do not use the equipment if it is not working properly.
6. Do not use the equipment if it is not working properly.
7. Do not use the equipment if it is not working properly.
8. Do not use the equipment if it is not working properly.
9. Do not use the equipment if it is not working properly.
10. Do not use the equipment if it is not working properly.

Passing Contents

1. Date: 1/1/20

2. Page: 1

3. Page: 1/1 (Page 1 of 1)

4. Page: 1/1 (Page 1 of 1)