

Packed Party

# PARTY CAR SPEAKER

INFLATABLE CAR POOL SPEAKER




## Quick Start Guide


PKCS120

### WHAT'S INSIDE THE BOX?

 
**A** Inflatable party car

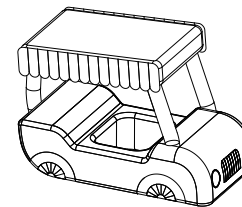


**B** Portable wireless speaker

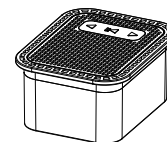 

**C** Hand pump

 


**D** USB Type-C® charging cable

 

**E** Quick start guide and Warranty card



### DEVICE OVERVIEW

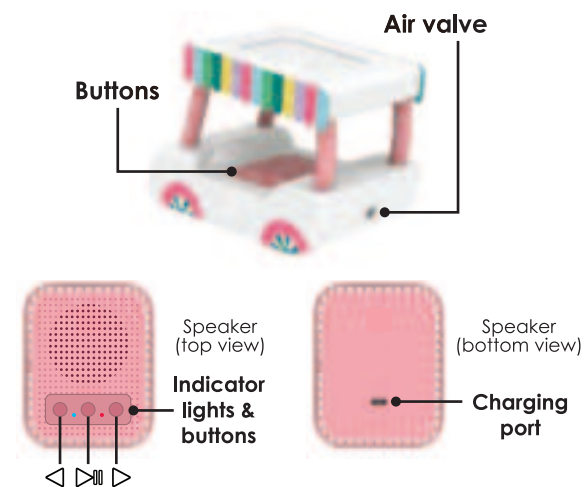 

### DEVICE OVERVIEW

**Play/Pause Button**

- Press to pause/play music
- Press twice to disconnect Bluetooth® device
- Press and hold to turn on/off

**Volume Up/Next Button**

- Press to play next song
- Press twice to pair/disconnect TWS (True Wireless Stereo) mode
- Press and hold to turn up the volume

**Volume Down/Previous Button**

 
- Press to play previous song
- Press and hold to lower the volume

### CHARGING YOUR DEVICE

Plug the included USB Type-C® cable into the speaker's charging port, and connect the other end of the cable to a power adapter (sold separately). Allow approximately 3 hours to fully charge the battery.


When the battery is low, the indicator light will blink red. Once fully charged, the red light will turn off.

Note: We recommend using a USB wall adapter with a DC5V/1A output.

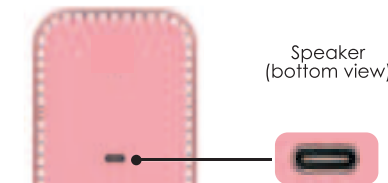

### HOW TO INSTALL

 Hook the hand pump to the car's air valve, making sure it is fully inserted. Use the hand pump to inflate the car, and then place the speaker into its dedicated slot.

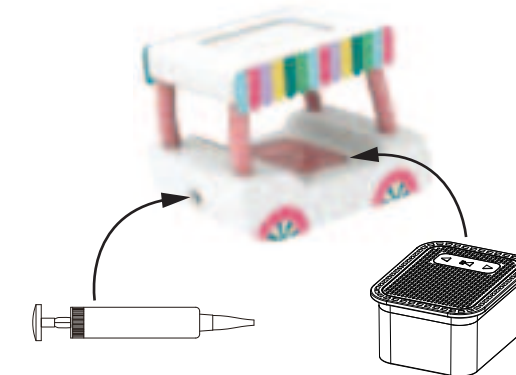

### INITIAL SETUP

1. Once your speaker is fully charged, press and hold the **Play/Pause button** until you hear a voice prompt indicating the device has entered Bluetooth® pairing mode.
2. On your smartphone or tablet, search for the Bluetooth® device named "**Turn It Up Party Car Speaker**". Tap to connect.
3. A prompt will play once pairing is successful.

Note:

- If you turn on the speaker but do not connect to a device within 10 minutes, it will power off automatically.
- If you connect to a device but do not begin playback within 20 minutes, your device will automatically power off.

FOLLOW THE PARTY  
@PACKEDPARTY

LIFE'S A PARTY  
WHEN YOU MAKE IT ONE!™  
WWW.PACKEDPARTY.COM

### TWS SYNC MODE



You can pair two of the same Packed Party Car Speakers together with TWS Sync Mode.

1. Press and hold the **Play/Pause button** on both speakers until the indicator light flashes blue.
2. Double press the **Volume Up button** on any one speaker. A voice prompt will indicate that the speakers have entered pairing mode, and the indicator light on one of the speakers will flash blue. Once the two speakers are connected, the indicator light will turn solid blue.

### TWS SYNC MODE

3. On your smartphone or tablet, search for the Bluetooth® device named "**Turn It Up Party Car Speaker**", and tap to connect. A voice prompt will play once successfully paired.

Note:

- In TWS mode, if you turn off one speaker, both of them will turn off.
- Double press the **Volume Up button** twice to disconnect from TWS mode.

### RESETTING YOUR DEVICE

If your speaker is not operating properly, you may reset it. To do so, press and hold the **Play/Pause button** for approximately 8 seconds until the speaker powers off, and then power it on again as usual.

### SPECIFICATIONS

- Input Power: 5V 1A
- Speaker Horn Output Power: 3W RMS
- Impedance: 4Ω
- Signal to Noise Ratio: ≥ 75dB
- IPX7 Waterproof – Protected from immersion in up to 3 feet of water for 30 minutes
- Built-in rechargeable battery
- Range 33ft(10m)
- Frequency Response: 150Hz-13KHz
- TWS Sync Mode (True Wireless Stereo)
- Up to 7 hours of playtime at 50% volume



MODEL: PKCS120  
FCC ID: 2AVRVPKCS120

### NEED HELP?

For customer support regarding your device, please submit a request by emailing [support@dpaudiovideo.zendesk.com](mailto:support@dpaudiovideo.zendesk.com). You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a DPAV customer service representative by calling **1-833-909-2673**. We are available Monday - Friday, 9am - 5pm PST, except major holidays. DPAV strongly urges customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Thank you for purchasing a Packed Party product.

### FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

### FCC WARNING

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.