

Remote Control Handset Function

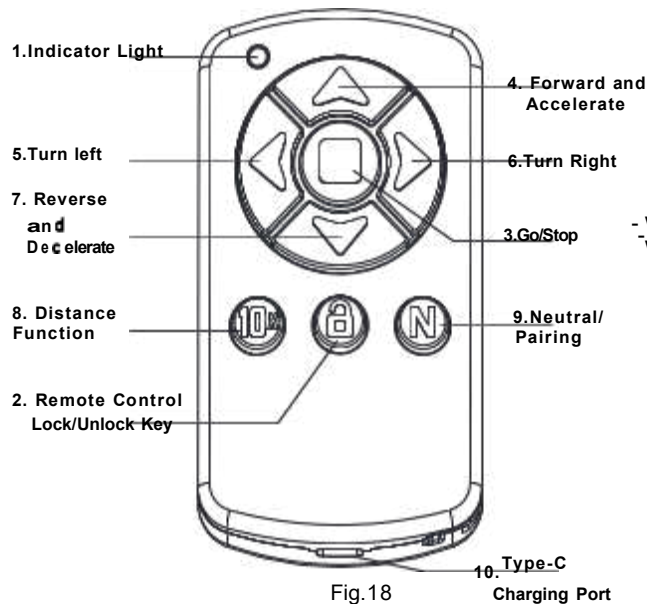


Fig.18



WARNING

When using the remote control to operate the buggy, please pay attention to the surrounding environment to avoid personal injury, damage to the buggy or surrounding objects or loss of items due to improper use!

1. Indicator Light :

- During normal use of the remote control, the indicator light is green and flashes rapidly when any button is pressed.
- When the remote control handset battery is low, the indicator light is red and flashes rapidly.
- When the remote control handset is charging, the indicator light appears red and flashes.
- When the remote control handset is fully charged, the indicator light will be solid green.

2.Remote Control Lock/Unlock Button:

To Lock the remote- Press and hold the lock button until the green indicator light appears, the remote is now locked.

To Unlock the remote: -Press and hold the lock button until the green indicator light appears.

the remote is now unlocked and ready for use.

Please Note: - If the remote control handset is not operated for more than 15 minutes, it will automatically enter the locked state. To unlock it, press and hold the lock button until the green indicator light appears. The remote is now ready for use.

3.Go/Stop:

Please Note - This Button has two functions.

- When the buggy is moving forward, press this button to **Stop the buggy and activate the electronic braking.**
- When the buggy is stationary, you can press this button to **drive the buggy forward**, but at speed 0 only.

4. Forward and Accelerate:

- When the buggy is in the stopped state, press this button to activate forward movement.
- When the buggy is moving, press and hold down this button to accelerate and increase the forward speed.

5. Turn left:

- When the buggy is stationary or in the process of moving, press this button to turn left.

6.Turn Right:

- When the buggy is stationary or in the process of moving, press this button to turn right.

7. Reverse and Decelerate:

- When the buggy is stationary, press this button to activate the reverse function, and release it to stop.

PLEASE NOTE - You must hold down the reverse button to maintain rearward movement.

- When the buggy is moving forward, this key can be also be used to decrease the speed and decelerate the buggy.

8. Distance Function Button:

- When the buggy is stationary you can use this button to activate the distance function.
- Press it once, and the buggy will automatically stop after 10 meters.
- Press it twice, and the buggy will automatically stop after 20 meters.
- Press it 3 times consecutively, and the buggy will stop automatically after 30 meters.
- Press it 4 times consecutively, and the buggy will automatically stop after 40 meters.

Please Note - The left and right turning buttons cannot be operated while in the distance control mode, but the stop key can be operated to terminate the distance function at any time.

Please Ensure - There is ample room in front of the buggy when using the distance control function to avoid damage to the buggy.

9.Neutral/Pairing:

- In the case where you would like to move the buggy manually for a very minimal distance (example to move the buggy on the Tee Box) you can press this button to disengage the electronic brake function.
- Press the stop button to re-engage the electronic brake function.
- In the case that you need to pair a new remote control handset, press this button 3 times consecutively for roughly one second each push and then the remote will pair to the buggy automatically.

10.Type-C Charging Port:

- When the remote control handset needs to be charged, it is recommended to use a "5V 2A" charger or the USB port on the handle of the buggy to charge. Do not attempt to fast charge the remote handset.

Warning: A high powered fast charger with too much power may not charge the remote or cause damage to the remote control and its battery.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.