

LINKSYS®

USER GUIDE

MAX-STREAM®


**MR6350 Dual-Band
Mesh WiFi 5 Router**

Model AC1300

Table of Contents

Product Overview	3
Help	5
Where to find more help	5
Set Up	6
What you'll need	6
Linksys Whole Home Wi-Fi System Settings	8
Log in to the Linksys app	8
Navigation Menu	9
Dashboard	10
Devices	11
To view or change device details	12
Parental Controls	13
Wi-Fi Settings	14
Advanced Wi-Fi Settings	15
Connect a Device with WPS	16
Guest Network Access	17
Device Prioritization	18
Notifications	19
Network/Router Administration	20
Advanced Settings	21
Internet Settings	21
Port Settings	22
Wi-Fi MAC Filters	23
External Storage	24
Speed Check	25
My Account	26
Feedback	27
Help	28
Connect Directly To Your Router	29
Router password	30
How to factory reset your router	31
Specifications	32
Linksys MR6350	32
Environmental	32

 
Product Overview

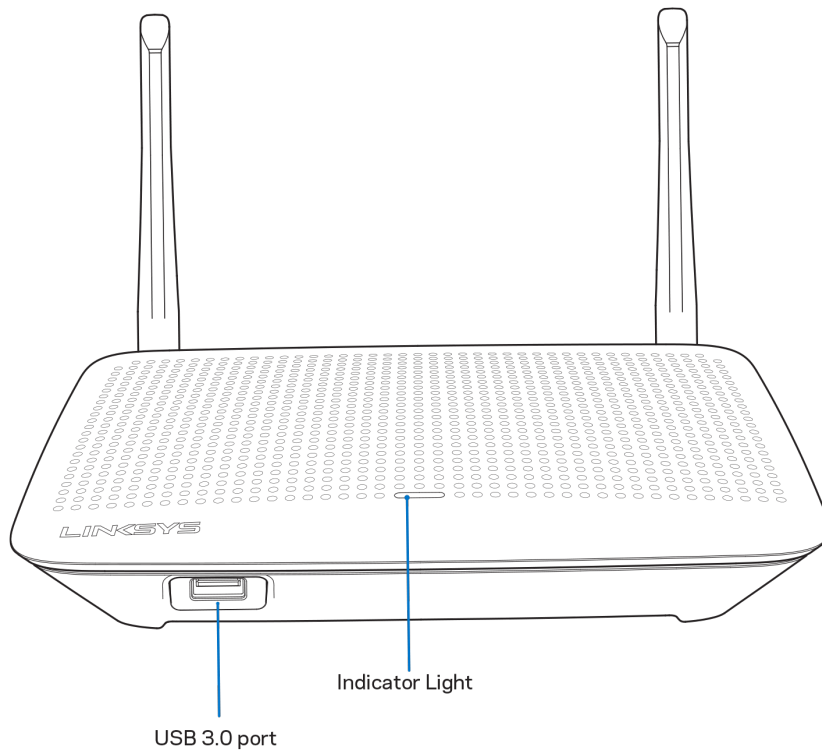

USB 3.0 port — Connect and share USB drives on your network or on the internet.

Light – The light on the top of your router gives you information about the router’s operation.

Light description	Status
Blue (blinking)	Starting up/WPS pairing started Wait for the router to finish starting up or WPS pairing to complete.
Purple	Ready for setup Open the Linksys app to complete setup.
Purple (blinking)	Setup in progress Follow instructions in the app.
Blue	Connected to internet/WPS pairing successful Router is online, everything is good.
Yellow	Weak signal (child nodes only)
Red	No internet Not online, check with your ISP for service interruptions.
Red (blinking)	Not plugged in to modem Make sure your router is firmly connected to the modem.
Yellow (blinking)	WPS pairing unsuccessful

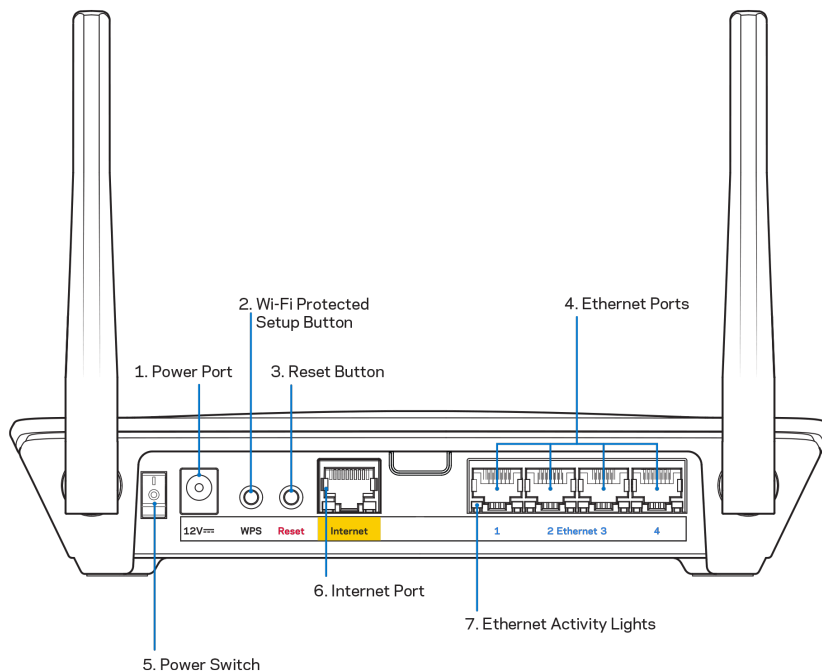 

Power port (1)—Connect the included AC power adapter.

Wi-Fi Protected Setup™ button (2)—Press to connect to WPS-enabled network devices.

Reset switch (3)—To factory reset your router, press and hold while the light on top of the router blinks red. Do not release the button until the light goes out and then turns bright red.

Ethernet ports (4)—Connect ethernet cables to these blue gigabit (10/100/1000) ports, and to wired devices on your network.

Note—For best performance, use CAT5e or higher rated cables on the Ethernet ports.

Power switch (5)—Press | (on) to turn on the router.

Internet port (6)—Connect an ethernet cable to the yellow gigabit (10/100/1000) port, and to a broadband internet cable/DSL or fiber modem. If you are using this router as a child node in a mesh Wi-Fi system, you can use this port to create a wired connection to another node.

 
Note—For best performance, use CAT5e or higher rated cable on the Internet port.

Ethernet activity lights (7)—Lights indicate data transfer over ethernet cable.

Help

Where to find more help

- Linksys.com/support/MR6350
- Linksys app help (launch the app and click Help in the main navigation menu)

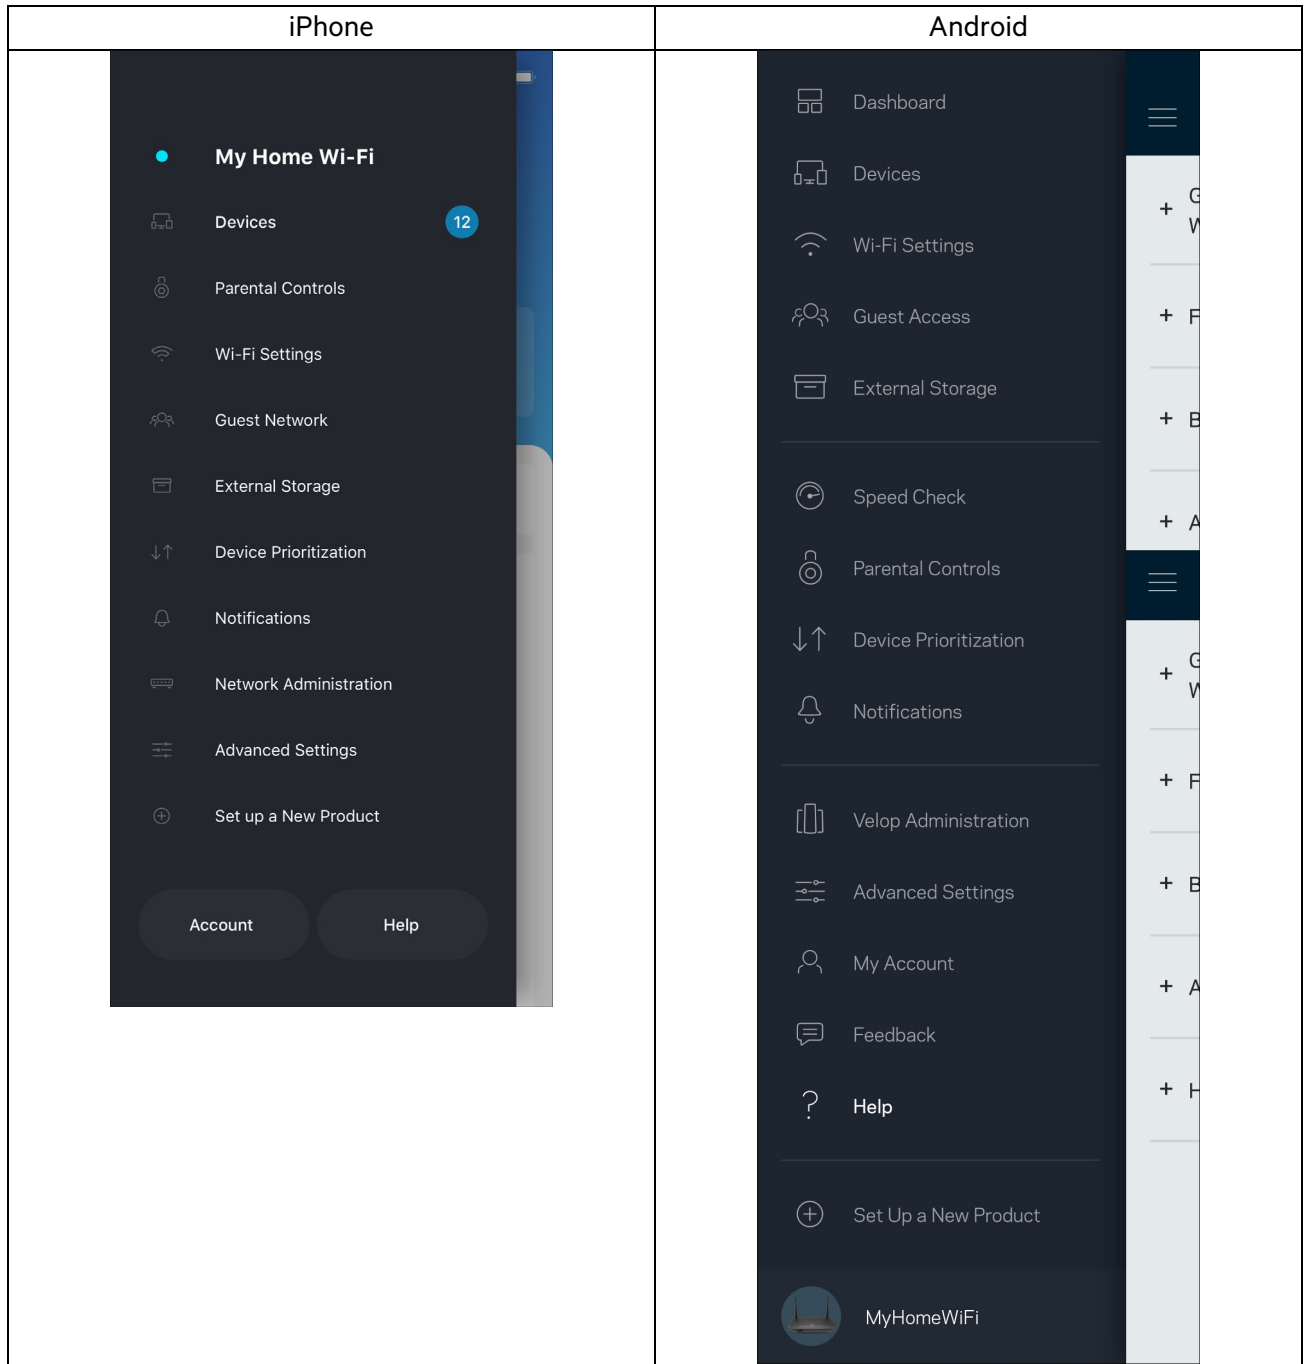

Note—Licenses and notices for third party software used in this product may be viewed on <http://support.linksys.com/en-us/license>. Please contact <http://support.linksys.com/en-us/gplcodecenter> for questions or GPL source code requests.

Set Up

IMPORTANT—Your MR6350 can be set up as a parent node or a child in a whole home mesh Wi-Fi system. A parent node must be connected with an ethernet cable to your modem or modem-router. Child nodes can be connected wirelessly or with ethernet cables.

If you are adding the router as a parent node for an existing Velop whole home mesh Wi-Fi system, factory reset all nodes and add them to the system after your MR6350 is set up and working.

Download the Linksys app. You need this app to set up your router.

Go to the app store for your device and search for Linksys.



What you'll need

Install the app, open it and follow the instructions.

Note—The app works with iOS 11.4 and later, and Android 6.0 and later.

During setup you will create a Linksys Smart Wi-Fi account so you can use the app to view or change your router system settings from anywhere you have an internet connection.

Among the many things you can do with Linksys Smart Wi-Fi and the Linksys app:

- Change your Wi-Fi name and password
- Set up guest access
- Connect devices to Wi-Fi with WPS
- Block internet with parental controls
- Test your internet connection speed

Note—We'll send you a verification email. While connected to your home network, click the link in the email to link your router with your account.

Other than plugging in the power and the ethernet cable, the app-based setup process does the work for you. Once connected, use the app to personalize your Wi-Fi by giving it a name and password. You also can give your router and any child nodes names based on where they are so you can identify them in the rare case where things need attention.

If you want to add child nodes to create a whole home mesh Wi-Fi system, set them up within range of a working node. Only the parent node has to be wired to the modem or modem-router. Don't worry, the app will help you place your nodes.

Print this page, then record your Wi-Fi and account settings in the table as a reference. Store your notes in a safe place.

Wi-Fi Name	
Wi-Fi Password	
Router Password	
Guest Network Name	
Guest Network Password	
Linksys App Login Email Address	
Linksys App Password	

Your login email address and password can also be used to log in at LinksysSmartWiFi.com on a computer. You can view or manage your Wi-Fi in an internet browser.

 
 
Linksys Whole Home Wi-Fi System Settings

Using your Linksys app, you can view or change Wi-Fi system settings including security and parental controls. You can access settings from anywhere in the world if you have an internet connection. You can also access your system directly from your home network, even if you don't have an internet connection.



Log in to the Linksys app

1. Open the Linksys app, tap **Log in**.

iPhone

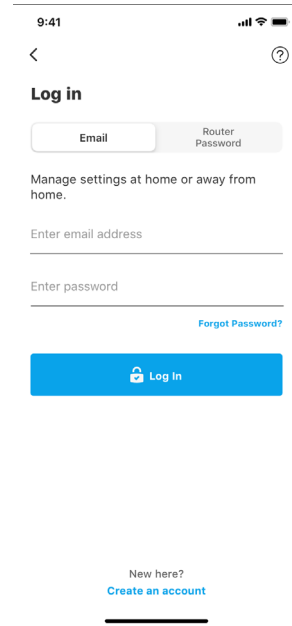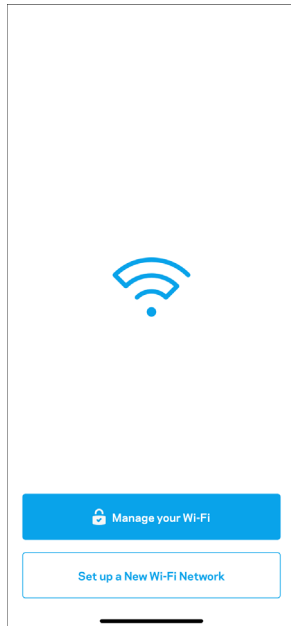



Android

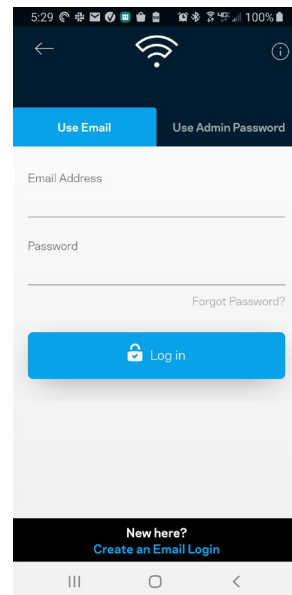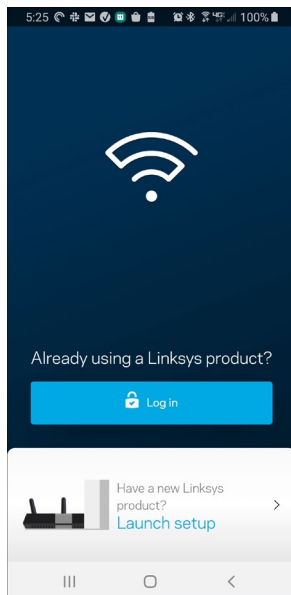  

2. Enter the email address you used when creating your account.
3. Enter your account password.
4. Tap Log in.



Navigation Menu

  Tap the menu icon  to navigate around the app.

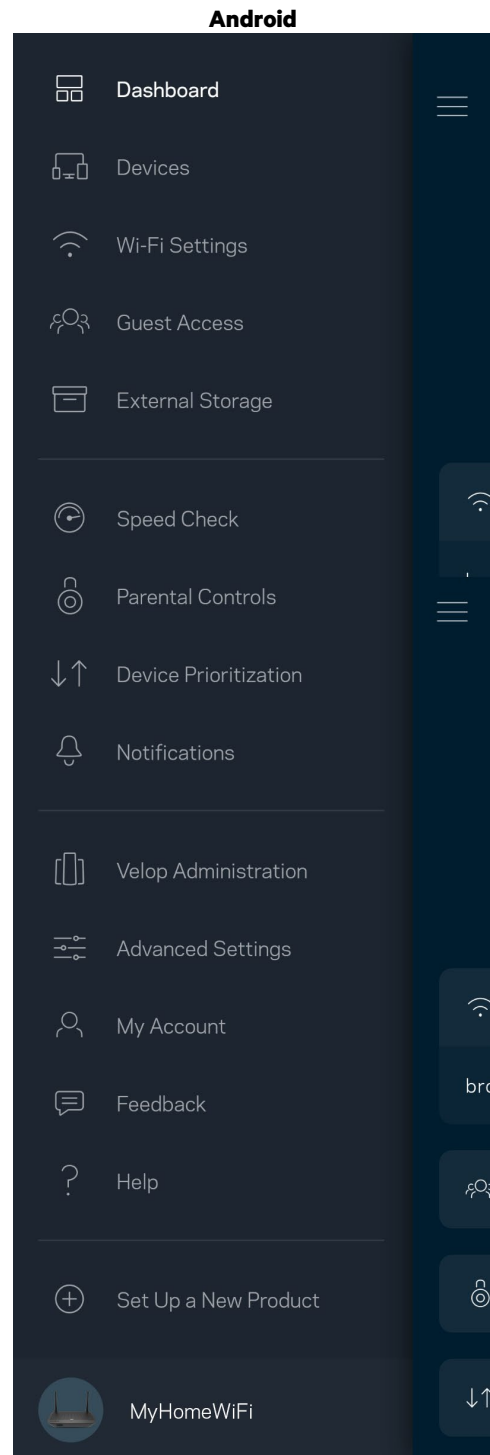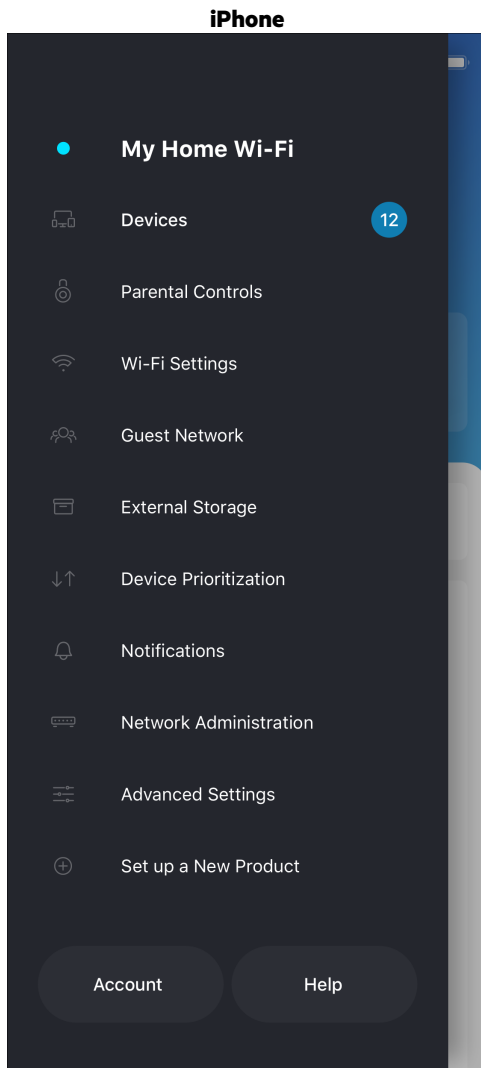


Dashboard

  Dashboard is a snapshot of your Wi-Fi. See how many devices are connected to your system. From Dashboard you can share your Wi-Fi password and turn on guest access. Dashboard also shows you if any devices have parental controls on them or have been prioritized for Wi-Fi access.

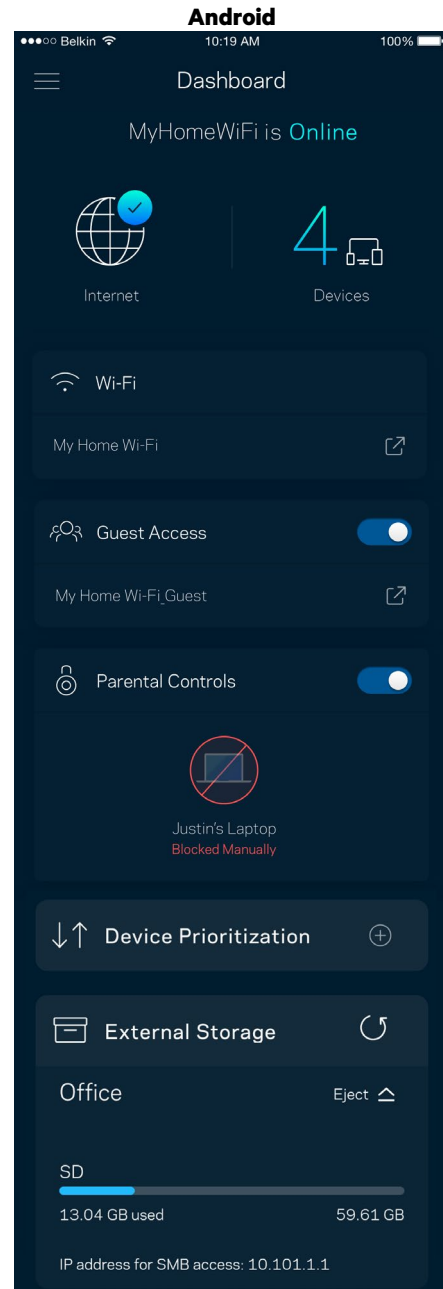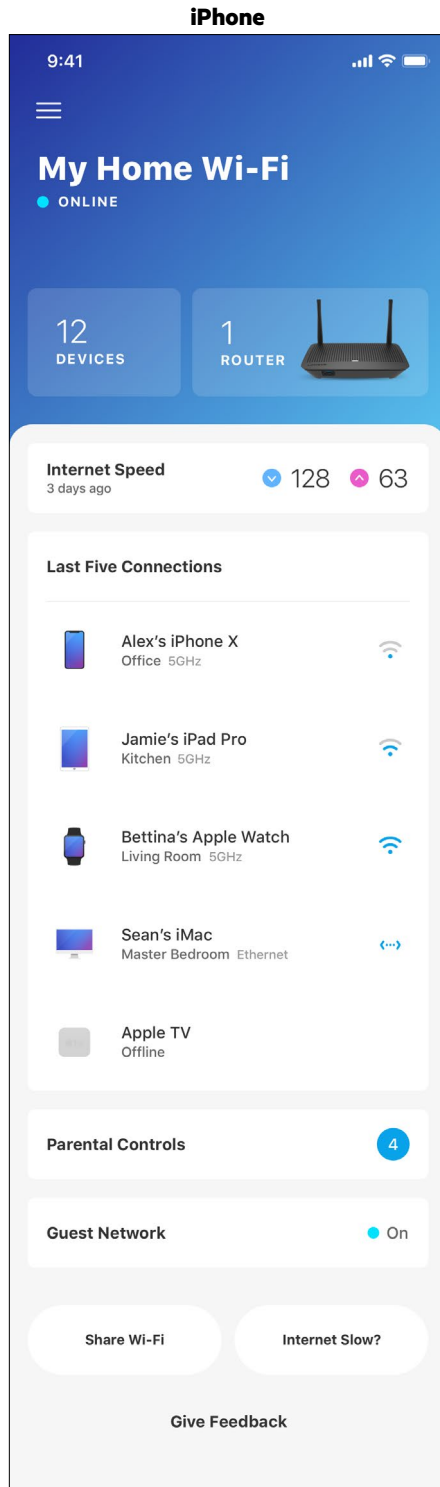


Devices

 View and change details for all devices connected to your Wi-Fi. You can view devices on your main network and your guest network, or display information about each device.

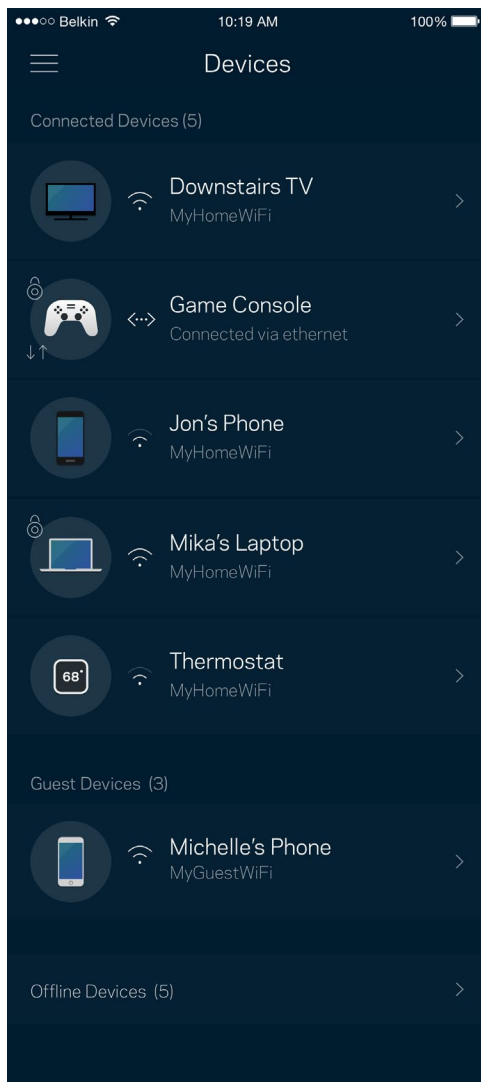



To view or change device details

 From the Devices screen you can edit device names and change the device icons. You also can prioritize devices, set parental controls, and see Wi-Fi details. Tap on any device to see details.

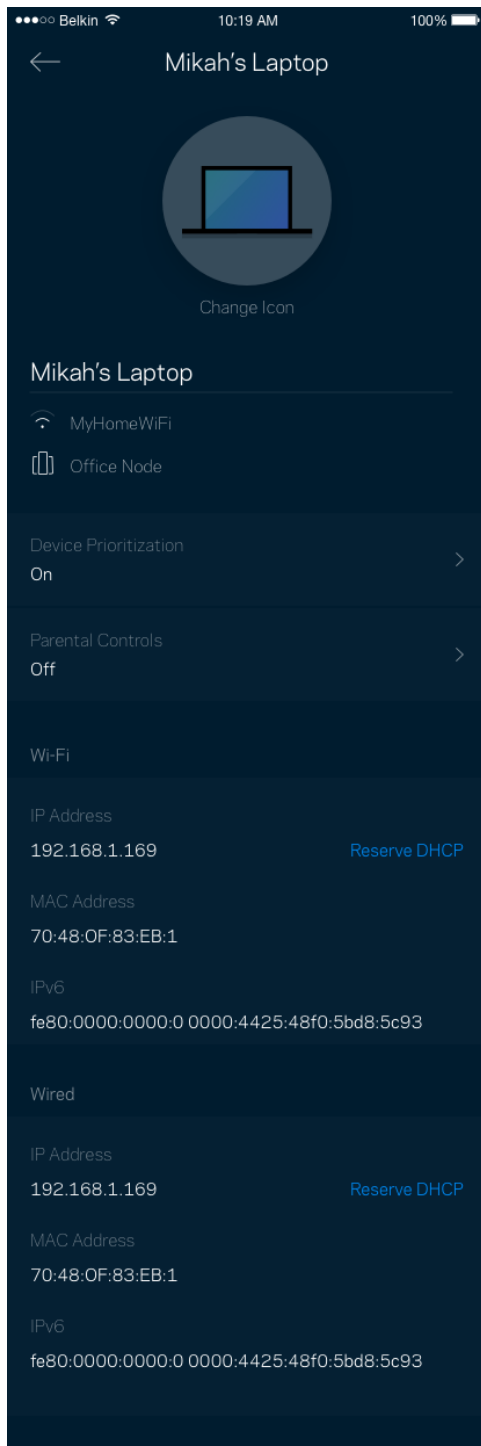


Parental Controls

  Parental controls allow you to control when your kids are online and what they're doing there. Pause internet to specific devices, or block specific websites.

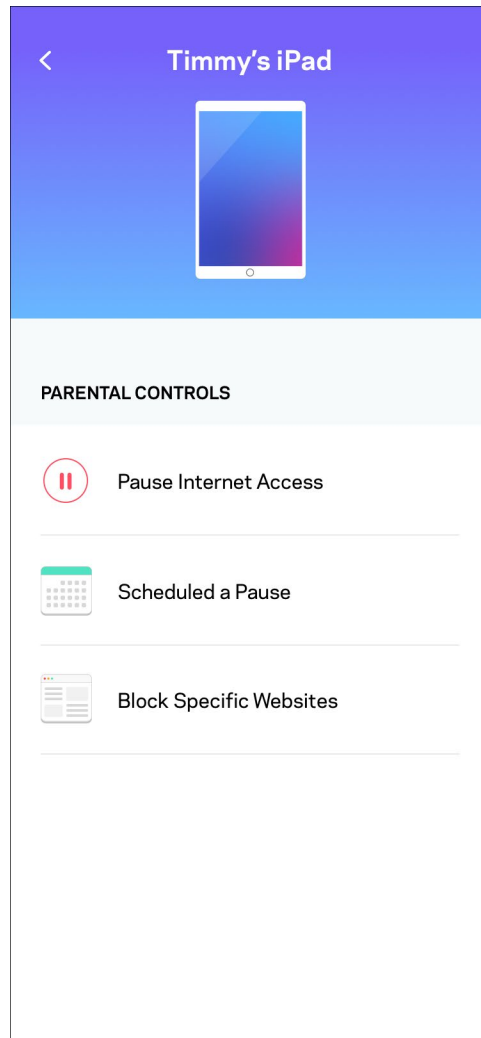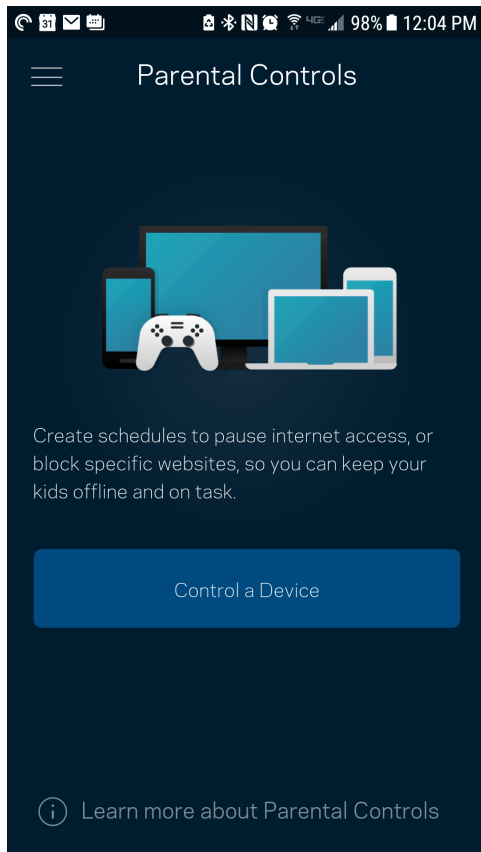



Wi-Fi Settings

 View or change your Wi-Fi name and password and connect devices using Wi-Fi Protected Setup™.

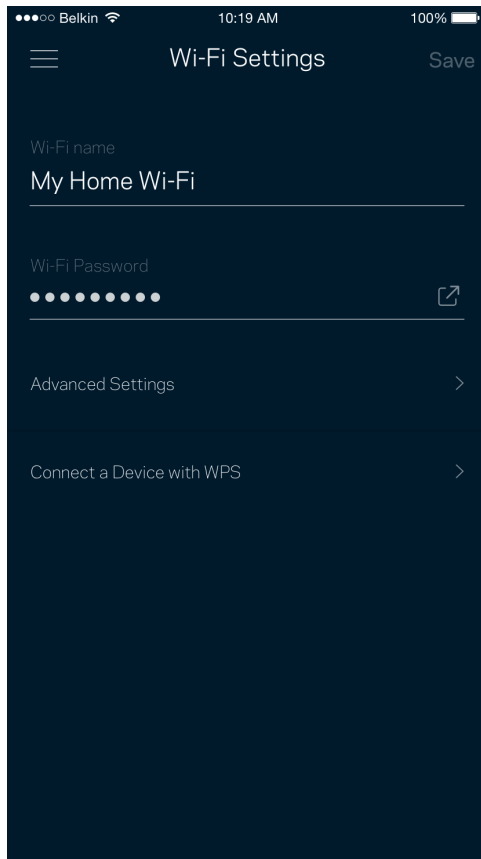

Advanced Wi-Fi Settings

  Advanced users can change the default security type and Wi-Fi mode. Do not change these unless you have a lot of experience with Wi-Fi networks. Channel Finder will search for the least populated Wi-Fi channels in your area to ensure you get the best performance from your system. If you have more than one node in your system, Channel Finder will find the best channel for each node.

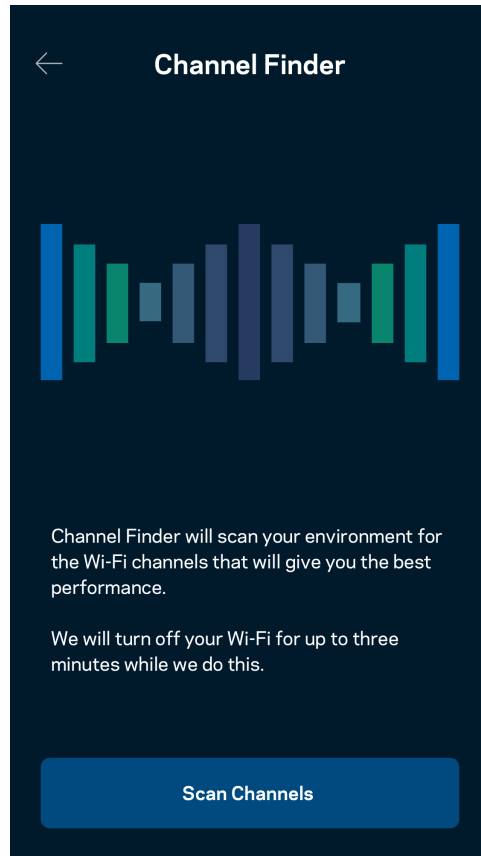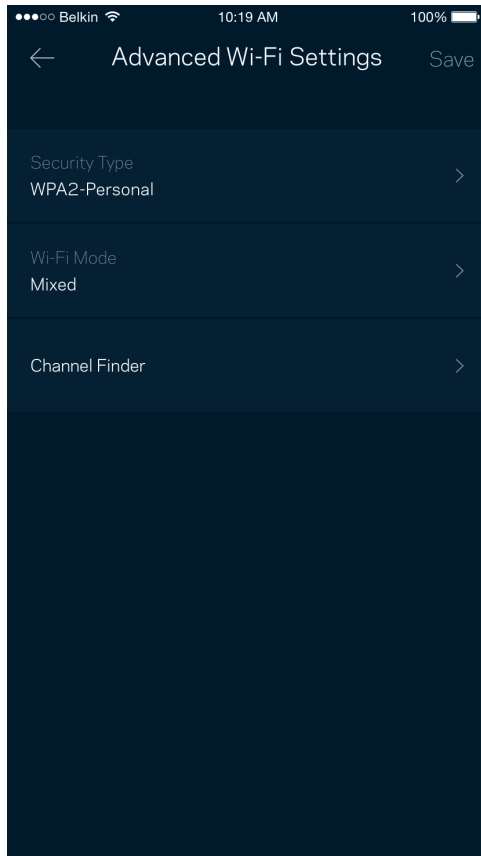


Connect a Device with WPS

Wi-Fi Protected Setup allows you to easily connect wireless devices to your Wi-Fi without manually entering security settings.



Guest Network Access

 
Use your Guest Access screen to allow guests to get online while restricting their access to other resources connected to your Wi-Fi. Send the password by text message or email.

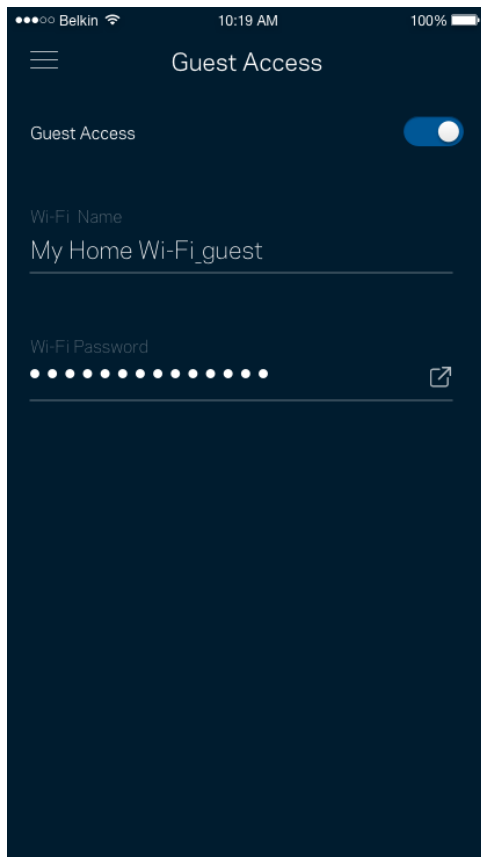

The screenshot shows a mobile application interface for "Guest Access". At the top, the status bar displays "Belkin", signal strength, time "10:19 AM", and battery "100%". Below the status bar is a header with a hamburger menu icon and the title "Guest Access". The main content area includes a toggle switch for "Guest Access" which is currently turned on. Below this is a text input field for "Wi-Fi Name" containing the text "My Home Wi-Fi_guest". At the bottom is a text input field for "Wi-Fi Password" represented by a series of dots, with a share icon to its right.


Device Prioritization

 Choose up to three devices for priority usage of your internet connection. Those devices – wired and/or wireless – always will have the best access when connected. Your router runs a speed check to determine how to best distribute Wi-Fi to prioritized devices. Other devices will share the leftover capacity.

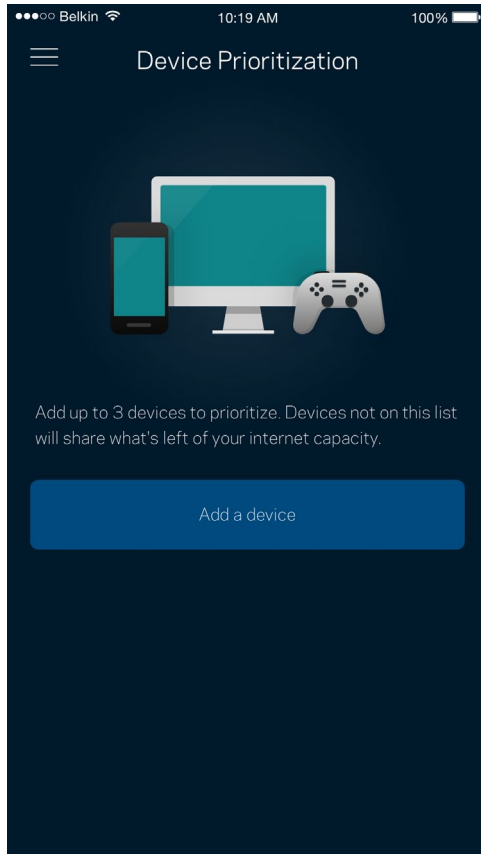


Notifications

 If you have more than one node, the app can notify you when child nodes in your system go offline. Child nodes are any that are not wired to your modem. You have to turn on notifications in your mobile device settings to allow the app to notify you.

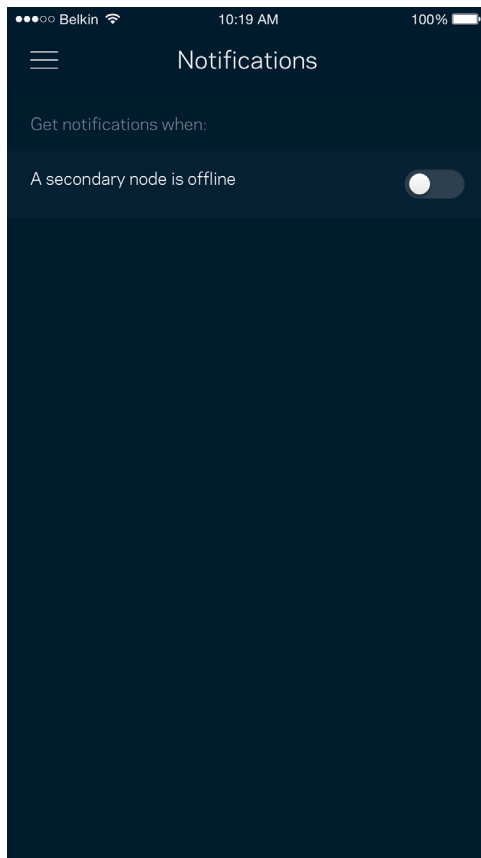

Network/Router Administration

 Use the Network Administration screen to change the router password and hint, and check various identifiers (model number, serial number, and IP details) for your router.

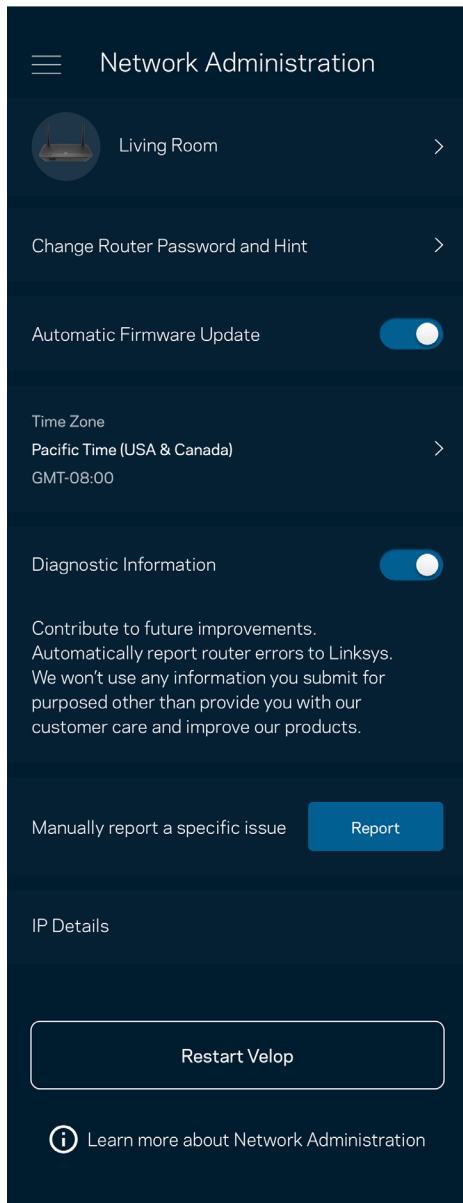

Opt in to automatically report crashes to Linksys and contribute to improving the Wi-Fi experience. You also can manually report specific issues to Linksys.


The following information will be sent with your description of the issue:

<ul style="list-style-type: none">• App version	<ul style="list-style-type: none">• Login Type (<i>cloud: show email address associated, local: display "Router admin"</i>)
<ul style="list-style-type: none">• Device model	<ul style="list-style-type: none">• WAN Connection type (<i>display Wi-Fi or ethernet</i>)
<ul style="list-style-type: none">• Device OS version	<ul style="list-style-type: none">• Time: date (<i>mo/day/year, time, time zone</i>)

Advanced Settings


Internet Settings

 You can choose how your router connects to the internet. The default is Automatic Configuration – DHCP. Other connection types depend on your internet service provider or how you plan to use your router. Advanced users can use Additional Settings to clone MAC addresses and set MTU (maximum transmission unit).

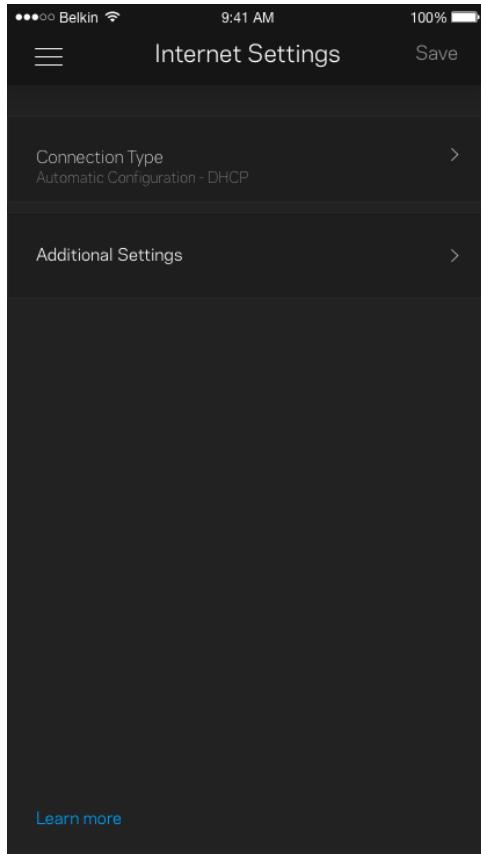


Port Settings

 Port forwarding—for a single port, multiple ports or a range of ports—sends traffic inbound on a specific port or ports to a specific device or port on your Wi-Fi. In port range triggering, your router watches outgoing data for specific port numbers. Your router remembers the IP address of the device that requests the data so that when the requested data returns, it is routed back to the proper device.

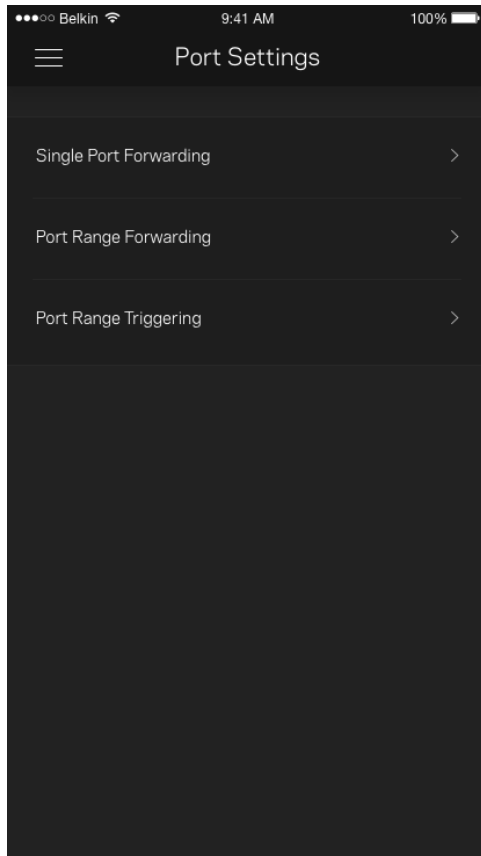



Wi-Fi MAC Filters

 Every network device has a unique 12-digit MAC (media access control) address. You can create a list of MAC addresses, and then allow or deny those devices on your Wi-Fi.

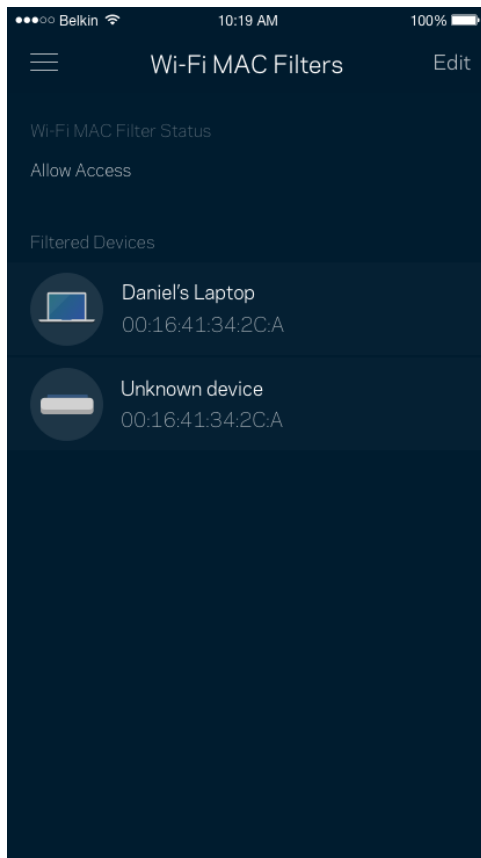


External Storage

  See which node an external drive is connected to, check the amount of free space left, and enable authentication by setting a username and password. (Only when a drive is plugged in to your router's USB port.) Be sure to tap Eject  before removing a drive to avoid losing data.

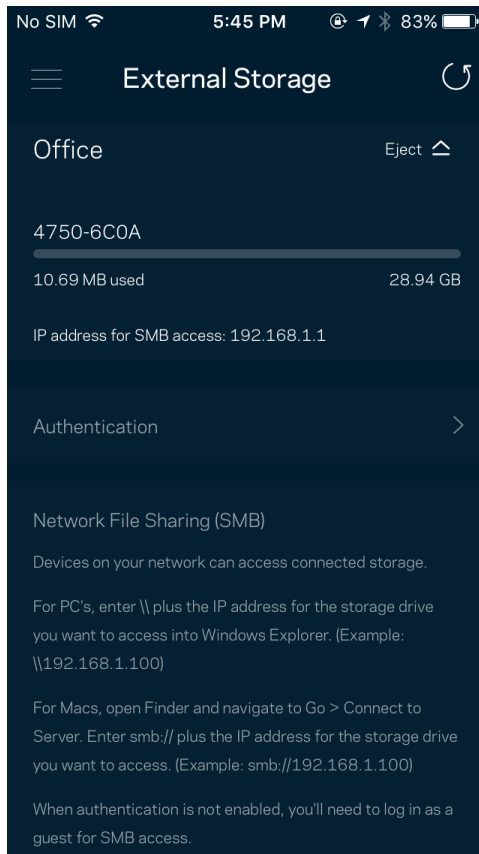

Speed Check

 Run a speed check to make sure you are getting the speeds you pay for. Speed check also helps in Device Prioritization because results determine how Wi-Fi is distributed to the prioritized devices.

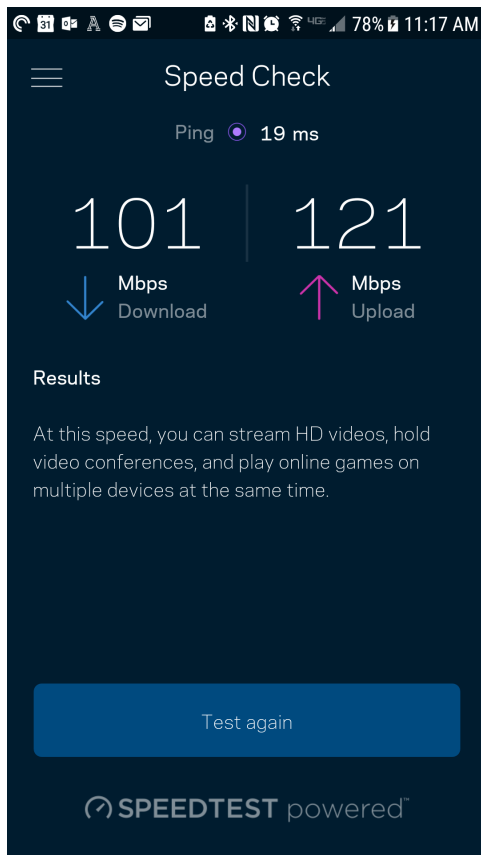

- Download speed is the rate at which internet content is transferred to your router.
- Upload speed is the rate at which you can upload content to the internet.

Note—Internet connection speeds are determined by a variety of factors, including ISP account type, local and worldwide internet traffic, and number of devices in your home that are sharing the internet connection.

My Account

Change your Linksys app password and opt in to receive the latest news and deals from Linksys. Only available when logged into the app with your email address.

Belkin 10:19 AM 100%

My Account Save

Email
Jakefarm@email.com

Password
●●●●●●●●

First Name
Jake

Last Name
Farm

 
Newsletter ☒
Be the first to know about exclusive deals
& news.

Log Out

Close Account


Feedback

Here's your chance to tell us what you think. Rate the app at your app store, send us a suggestion, or report an issue that's keeping you from a great experience.

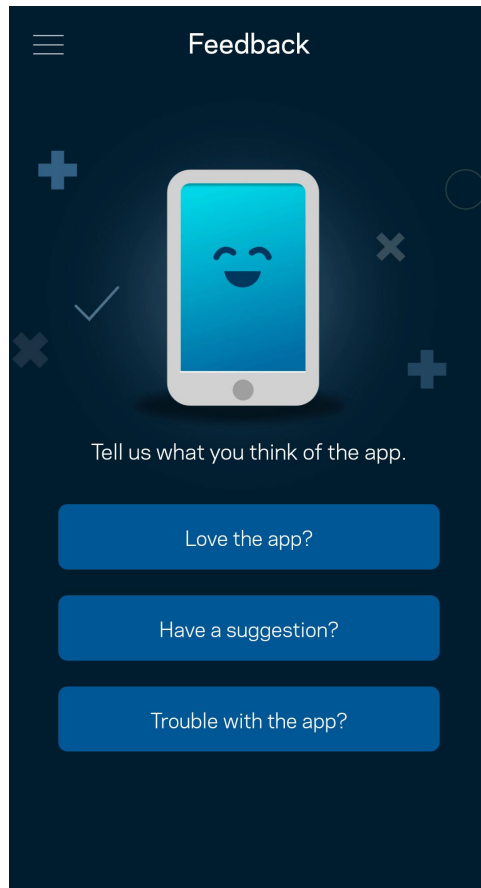



Help

 Having trouble with the app? Just need a little more information about a feature? Tap Help for an explanation.

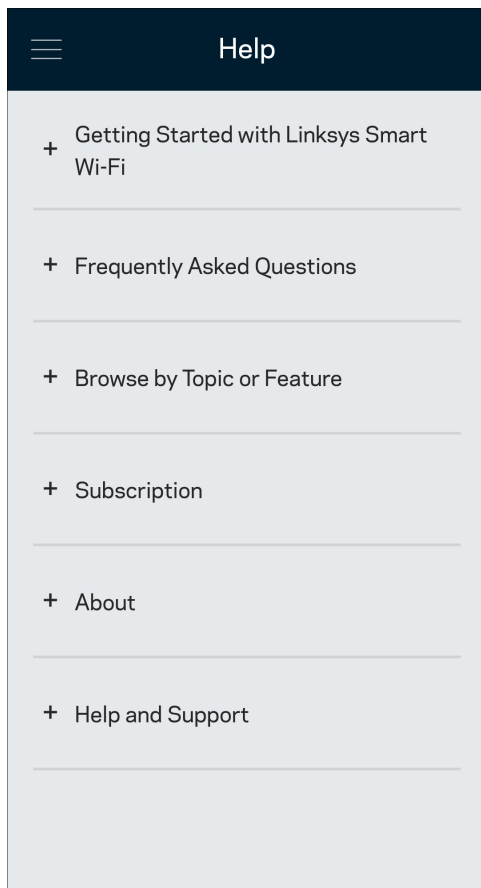


Connect Directly To Your Router

  If you are not connected to the internet you still can access your router settings. Connect to your Wi-Fi name, launch the Linksys app and tap Log in with Router Password toward the bottom of the screen. You will not be able to access your Linksys Wi-Fi account when not online.

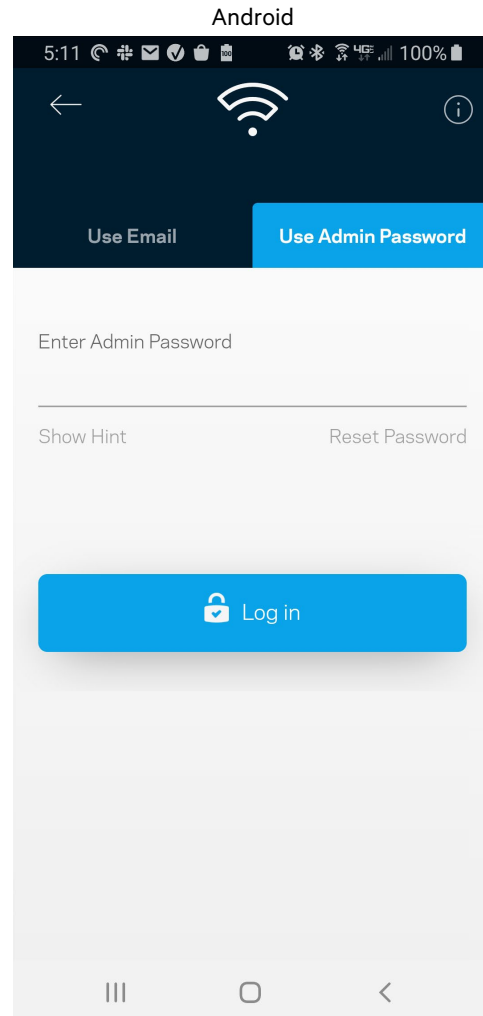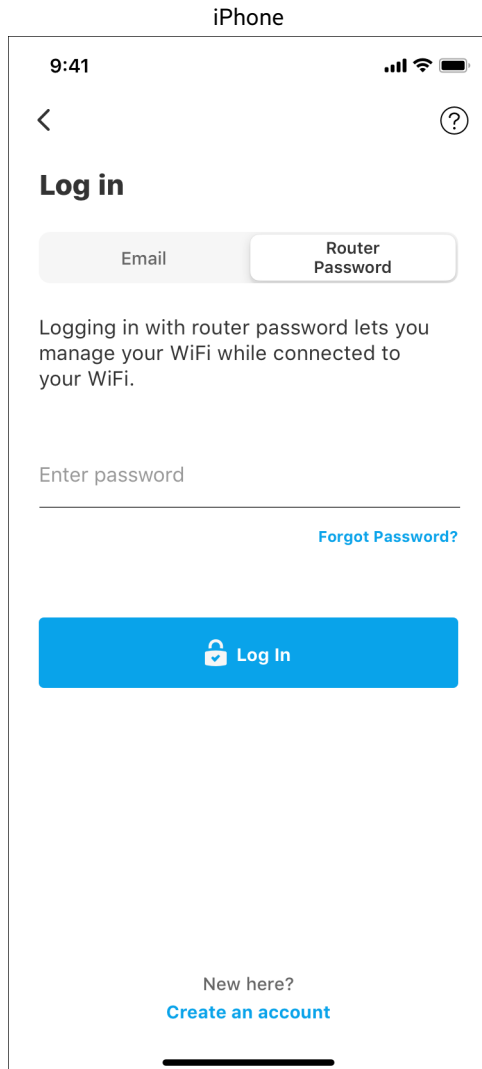

Router password

 We created a secure admin password during setup. To change it, tap Network/Router Administration and Change Router Password and Hint.

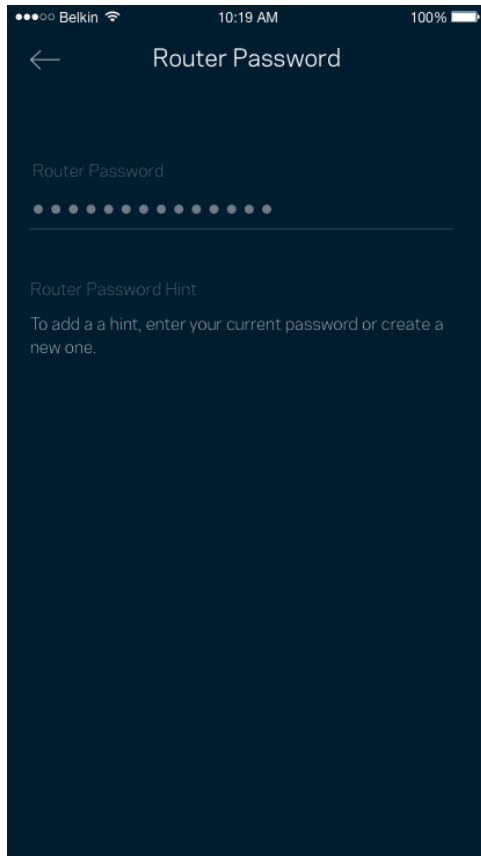A screenshot of a mobile application interface for setting a router password. The screen has a dark blue background. At the top, there is a status bar with 'Belkin' and a Wi-Fi icon on the left, '10:19 AM' in the center, and '100%' battery on the right. Below the status bar is a header with a back arrow on the left and 'Router Password' in the center. The main content area contains two sections: 'Router Password' with a row of 12 dots for password input, and 'Router Password Hint' with a text input field. Below the hint input field, there is a line of text: 'To add a hint, enter your current password or create a new one.'

 
To keep your router secure, we'll send you an email if someone changes the router password.

How to factory reset your router

You should never need to factory reset your MR6350 router—a very disruptive process. A factory reset restores your router to the state it was when you took it out of its box, requiring you to go through the setup process again. All settings you have customized in setup and since – things such as Wi-Fi name, passwords, security type – will be erased. All wireless devices will disconnect from your Wi-Fi.

To factory reset :

- With your router connected to power and turned on, press and hold the Reset button on the back panel. The light on top of the router will blink red. Do not release the button until the light goes out and then turns bright red.

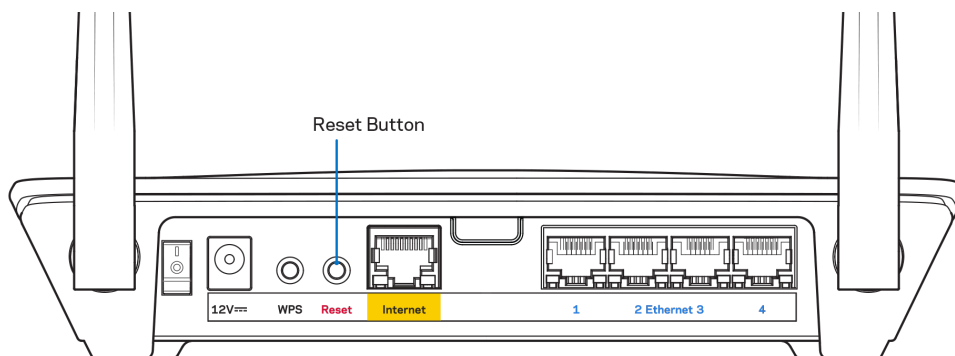

Specifications

Linksys MR6350

Model Name	Dual-Band Mesh Wi-Fi 5 Router, AC1300
Model Number	MR6350
Switch Port Speed	Gigabit
Radio Frequency	2.4 GHz and 5 GHz
# of Antennas	2 external adjustable antennas
Ports	USB 3.0, Ethernet (1-4), Internet, Power
Buttons	Power, Reset, WPS
Lights	Top panel: One, multicolor light for power and status Back panel: Ethernet (1-4), Internet
Security Features	WPA2-Personal
Security Key Bits	Up to 128-bit encryption

Environmental

Dimensions	204.7mm x 151.8mm x 41.2mm (antennas down) 204.7mm x 151.8mm x 140.8mm (antennas up)
Unit Weight	360 g
Power	12V/1.5A
Certifications	FCC, IC, CE, Wi-Fi (IEEE 802.11a/b/g/n/ac)
Operating Temp.	32° to 104° F (0 to 40° C)
Storage Temp.	-4° to 140° F (-20 to 60° C)
Operating Humidity	10% to 80% relative humidity, non-condensing
Storage Humidity	5% to 90% non-condensing

Notes:

For regulatory, warranty, and safety information, go to [Linksys.com/support/MR6350](https://linksys.com/support/MR6350).

Specifications are subject to change without notice.

Maximum performance derived from IEEE Standard 802.11 specifications. Actual performance can vary, including lower wireless network capacity, data throughput rate, range and coverage. Performance depends on many factors, conditions and variables, including distance from the access point, volume of network traffic, building materials and construction, operating system used, mix of wireless products used, interference and other adverse conditions.

Visit linksys.com/support/MR6350 for award-winning technical support.

BELKIN, LINKSYS and many product names and logos are trademarks of the Belkin group of companies. Third-party trademarks mentioned are the property of their respective owners.

© 2020 Belkin International, Inc. and/or its affiliates. All rights reserved.

LNKPG-00656 Rev A00