


User Manual

Plus CA-RFLCD2 Remote Control Transmitters

The LCD screen on the 2-way remote control displays graphic icons. It provides visual information on any trigger of the sensors and around the clock surveillance of your vehicle, as well as displaying the present status of the system.



2-Way LCU Remote

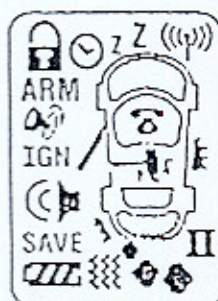

LCD Display Icons

LCD Remote Icons

	Door Lock Vehicles Doors are Locked		Warn Array Shock Sensor Triggered (Zone 1)
	Door Unlock Vehicles Doors are Unlocked		Shock Sensor Shock Sensor Triggered (Zone 4)
	Armed Mode Security System Is Armed		Power Save Mode Saves The Battery Power when Transmitter is not In Use
	Valet Mode Security System is in Valet Mode		Vibrate Mode Vibrates when Security System is Triggered
	Remote Transmission Transmitting a Signal		Low Battery Replace the Transmitter Battery
	In-Range Indicator You are within Remote Control Range		Ignition Trigger On Ignition Switch (Zone 5)
	Door Triggered Doors are Opened (Zone 3)		Driver Paging / Lost and Found Someone is Paging you from the Vehicle
	Trunk/Hood Triggered Trunk/Hood are Open (Zone 2)		System Trigger/Panic Alerts that the System has been Triggered
	Second Vehicle Communicate with a Second Vehicle's Security System		

User Manual

Plus CA-RFLCD2 Remote Control Transmitters

Transmitter Button	System Function	Remark
	Lock Doors & Arms System	
-	Arm and Delete the 2-Stage Shock Sensor	Press Twice within 3 Seconds
-	Arm System and Hidden Alarm Function	Press within 3 Seconds. For 1-Way Transmitter Press -
+	Silent Arming/Disarming	Ignition In "OFF" Position
+	Active Anti-Car Jacking Mode	Ignition In "ON" Position. Press and Hold for 2 Seconds
	Unlock Doors & Disarm System	
-	Two Step Door Unlock and Disarm System	Press Twice within 3 Seconds
	Trunk Release - Channel 2	Press and Hold for 2 Seconds. For 1-Way Transmitter Press
-	Passive Arming Bypass	While the System is "Disarmed". For 1-Way Transmitter Press -
+	Channel 3 Timer Control Output	For 1-Way Transmitter Press +
	Car Locator	For 1-Way Transmitter Press
	Panic Function	Press and Hold for 3 Seconds. For 1-Way Transmitter Press for 3 Seconds

FCC Caution : To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.