 


# TRANSFORMERS



## TF-T07耳挂式蓝牙耳机 使用说明书

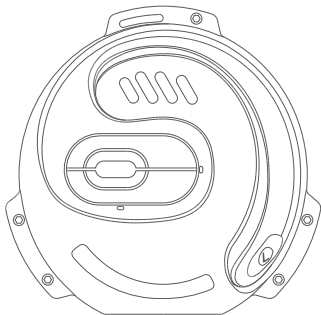





# CATALOGUE

 
## 目录

01 中文	4
02 English	11
03 اللغة العربية	19
04 Deutsch	27
05 Français	35
06 Português	43
07 Español	51

## 包装清单

	耳机 *2		Type-C充电线 *1
	充电仓 *1		说明书与保修卡 *1

## 产品示意图

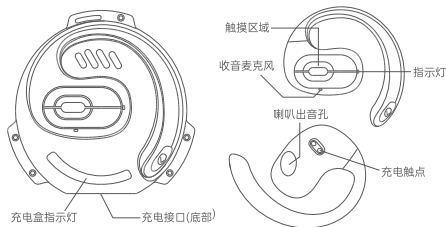

## 温馨提示

- 1.除说明书有特殊标示的操作方式以外,请勿尝试拆卸或更换产品内的任何零件。
- 2.请勿将产品放入水或其他任何液体中,此产品非防水设计。
- 3.如果有任何液体不小心进入产品内时,请立即断开连接并移开此产品。
- 4.为避免触电,请在安装或卸载产品时,确保手上没有沾水。
- 5.请勿将此产品放置于热源附近或直接暴露在火源附近。
- 6.请勿将本产品放置在有强大电磁力的环境中,否则会导致产品故障。

## 产品规格

蓝牙版本: V5.4  
传输距离: 10m  
扬声器单元:  $\Phi 14.2\text{mm} 16\Omega$   
灵敏度:  $118+3\text{dB} @ 1\text{kHz}$   
频响范围: 20-20kHz  
额定功率: 10mW  
音乐播放时间:  $\approx 4.5$  小时  
充电时间(耳机): 1.5 小时  
充电时间(充电盒): 1.5 小时  
电池容量(充电盒): 300mAh  
电池容量(耳机): 40mAh  
可供耳机充电次数:  $\approx 3$ 次

## 产品操作说明

### ①开机:

方法1. 从充电仓取出耳机, 耳机自动开机。方法2. 长按左/右多功能按键3秒, 蓝灯亮1秒耳机开机。(语音提示音: "power on")

### ②关机:

方法1. 放回充电盒, 耳机自动关机。方法2. 耳机在3分钟内没有连接设备自动关机。(语音提示音: "power off")

### ③蓝牙配对:

1. 从充电仓取出耳机, 左右耳机自动进入蓝牙配对模式, 等待连接。

(语音提示音: "pairing")

2. 打开手机上的蓝牙, 搜索设备名"TF-T07", 点击进入连接。

(语音提示音: "connected")



进入设备配对状态:  
左耳主机蓝白交替, 副耳熄灭



## 佩戴方法

- 1.用一只手按住耳朵，把耳机挂在耳朵上。
- 2.旋转调整耳机喇叭位置，上下移动直到耳机完全贴合耳朵的轮廓。
- 3.注意区分L/R的佩戴位置，如果拿反则佩戴不上去。



## LED指示灯状态

开机	冰蓝灯长亮1秒，开机后进入冰蓝灯交替闪烁
关机	白灯闪三下关机
TWS配对状态	冰蓝灯白灯交替闪烁
进入设备配对状态	左耳主机冰蓝灯白灯交替闪烁，副耳熄灭
耳机低电量提示	白灯慢闪（隔5秒闪一下）
耳机充电	白灯常亮
耳机充满电	白灯熄灭
恢复出厂设置	白灯快闪3次

## 触摸操作

### ■ 常规模式



语音助手: 长按左功能键2秒启动/关闭

音量加: 单击右功能键

音量减: 单击左功能键

### ■ 音乐播放模式



播放/暂停: 双击任意耳机触摸键

上一曲: 三击左耳功能键

下一曲: 三击右耳功能键

### ■ 通话模式



接听/挂断来电: 双击任意耳机触摸键

拒接来电: 长按任意耳机触摸键2秒

### ■ 游戏/音乐模式切换




音乐模式: 长按右耳触摸键2秒  
(语音提示音"music mode")

游戏模式: 长按右耳触摸键2秒  
(语音提示音"game mode")

## 恢复出厂设置

- 1.耳机开机后未与设备连接状态下，连续单击任意耳机功能键5次后恢复出厂设置关机。
- 2.耳机与设备连接状态下，连续单击任意耳机功能键5次，3秒内长按任意耳机功能键10秒，恢复出厂设置后关机。

## 产品中有害物质名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○
<p>本表格依据SJ/T11364的规定编制</p> <p>O:表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定限量要求以下。</p> <p>X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB26572规定的限量要求。</p> <p>表单标记“X”的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。</p>						
<p>本表格依据SJ/T11364的规定编制</p> <p>印刷电路板组件*:包括印刷电路板及其零部件,电子元器件等,根据产品型号不同,您所购买的产品可能不会含有以上所有部件</p>						
	<p>在中华人民共和国境内销售的电子电气产品必须标识此标志,标志内的数字代表在正常的使用状态下的产品的环保使用期限。</p>					

## 保修声明

### 免责声明

本使用手册没有任何形式的担保、立场表达或其他暗示,本使用手册所提到的产品、规格及信息仅供参考,内容亦会随时更新于网页,恕不另行通知。

### 保修声明:

就本文件附随的产品做出如下保证:如产品在您购买日起十二(12)个月(“保修期”)内,在正常使用情况下因质量瑕疵发生损坏,能修理的,免费修理;经厂家确认无法修理的,免费更换;修理或更换后的产品,在剩余保修期(最短不少于30天)内继续享有保修。购买日以销售发票日期为准;如无法确定购买日,则保修期自产品生产日期起按十三(13)个月计算。

如申请保修,请先致电产品服务热线,并按我们指示的方式执行。申请保修时,您需要提供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况:

- 1.超过三包有效期的;
- 2.涂改保修卡、产品编码与产品本体不符;
- 3.因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;
- 4.因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;
- 5.拉链、塔扣因受力过大而损坏;
- 6.因承载过重造成的脱线或撕裂;
- 7.任何因尖锐物体造成的损坏;
- 8.有烧损或水浸迹象的产品;
- 9.因擅自拆改导致的损坏;
- 10.产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗。
- 11.如产品原有标识标签被更改或损毁,本保证将失效。

产品及随附物料的齐备和外观完好不属于保证范围,您应在接收产品时当场检验并对任何不符提出异议。

以上保证是我们就产品做出的全部保证,且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权利。

服务监督热线:400-885-8808

## 保修卡

尊敬的用户，本保修卡是您将来申请保修的凭证，请您配合销售商填写并妥善保管备用！

### 用户信息

用户姓名		电子邮件	
联系电话		邮政编码	
通讯地址			

### 产品信息

产品名称		产品型号	
产品条码/编号/批号			

### 销售商信息

 
名 称			
地 址			
联系电话		邮政编码	
销售日期		发票号码	
备 注			

## 合格证

产品编号: \_\_\_\_\_  
生产日期: \_\_\_\_\_  
检验员: \_\_\_\_\_



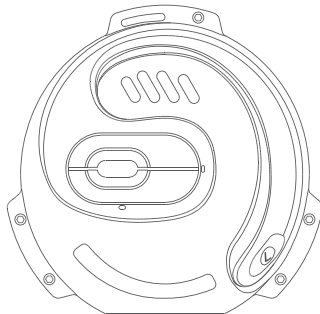


# TRANSFORMERS

 


## TF-T07 Headphones with hanging ears Instruction manual

## Packing list

	Headphones *2		Type-C Charging cable *1
	Charging case *1		Instructions and Warranty card *1

## Product diagram

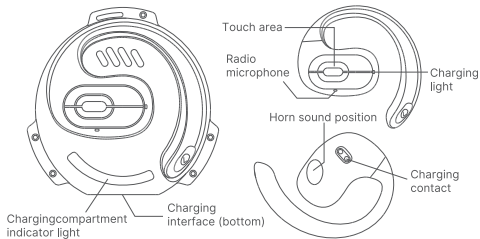

## Tips

- 1.Except for the operation methods specifically marked in the manual,please do not try to disassemble or replace any parts in the earbuds.
- 2.Don't put the earbuds in the water or any others liquid.The earbuds are not waterproof.
- 3.If any liquid enters the product by accidentally,please disconnect and remove the connection immediately.
- 4·Please make sure that there is no water on your hands when Installing

or uninstalling the product to avoid electricshock.  
5.Do not put the product near by the heat source or expose it to the fire source directly.  
6、 Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

## Product specification

BT version: V5.4  
Transmission distance: 10m  
Speaker unit:  $\Phi 14.2\text{mm}$  16 $\Omega$   
sensitivity: 118+3dB @1kHz  
Frequency response range: 20-20kHz  
rated power: 10mW  
Music playing time:  $\approx 4.5$  hours  
Charging time (headphones): 1.5 hours  
Charging time (charging case): 1.5 hours  
Battery capacity (charging case): 300mAh  
Battery capacity (headset):40mAh  
Number of charges available for headphones:  $\approx 3$  times

## Product operation instructions

- ① Power on:  
Method 1. Remove the headphones from the charging compartment and the headphones will automatically turn on. Method 2. Press and hold the left/right multifunction button for 3 seconds, The blue light is on for 1 second, and the headphones are turned on. (Voice prompt tone: "power on")
- ② Shutdown:  
Method 1: Replace the charging box, and the headphones will automatically turn off. Method 2. The headphones are not connected within 3 minutes The device automatically shuts down. (Voice prompt tone: "power off")
- ③ Bluetooth pairing:  
1. Remove the headphones from the charging compartment, and the left and right headphones will automatically enter Bluetooth pairing mode, waiting for connection. (Voice prompt tone: "pairing")  
2. Open Bluetooth on your phone, search for the device name "TF-T07", and click to enter the connection.(Voice prompt tone: "connected")



Enter device pairing status:  
The left ear host alternates  
between blue and white, and  
the auxiliary ear goes out



## Wearing method

1. Hold the ear with one hand and hang the earphones over your ears.
2. Rotate and adjust the horn position of the earphone, moving it up and down until the earphone completely fits the outline of the ear.
3. Pay attention to distinguish the wearing position of L/R, if it is reversed, it cannot be worn up.



## LED indicator status

Power on	The ice blue light will be on for 1 second, and the ice blue light will alternately flash after turning on
Power Off	White light flashes three times to shut down
TWS pairing status	The ice blue light alternates with the white light
The device pairing status is displayed	The ice blue and white lights of the left ear main engine flash alternately, and the right earphone is off
Earphone low battery warning	White light flashing slowly (flashing every 5 seconds)
Earphone charging	White light always on
Headphones fully charged	White light goes out
Restore factory settings	White light flashes 3 times quickly

## Touch operation

### General mode



Voice Assistant: Press and hold the left function key for 2 seconds to start/stop

Volume Increase: Click the right function key

Volume Down: Click the left function button

### Music playback mode



Play/Pause: Double click any headset touch button

Previous: Three hits left ear function key

Next: Three clicks right ear function key

### Call mode



Answer/hang up a call: Double click any headset touch button

Reject incoming calls: Hold down any earphone touch button for 2 seconds

### Game/Music mode switch



Music mode: Press and hold the touch button on your right ear for 2 seconds. (Prompt tone:"music mode")


Game mode: Long press the right ear touch button for 2 seconds. (Prompt tone:"game mode")

## Restore factory settings

1. If the headset is not connected to the device after being powered on, click any headset function key five times to restore the factory Settings and shut down the headset.
2. When the headset is connected to the device, click any headset function key five times, and hold down any headset function key for 10 seconds within 3 seconds. After restoring factory Settings, power off the device.



## The name and content of harmful substances in the earbuds

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○
<p>This form is compiled in accordance with SJ/T 11364.</p> <p>O:Indicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit required by GB/T 26572.</p> <p>X:Indicates that the hazardous substance at least in a certain homogeneous material of the part exceeds The limit requirements specified in GB/T 26572.</p> <p>The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.</p>						
<p>Printed circuit board components:</p> <p>Including printed circuit boards and their parts,electronic components, etc.and depending on the product model,the earbuds you purchased may not contain all the above components.</p>						
<div>  <p>Electronic and electrical products sold in the People' s Republic of China must mark this LOGO,the number in the logo represents the product under normal use Environmental protection use period.</p> </div>						

## Warranty statement

### Disclaimer

This user manual does not have any form of guarantee,position expression or other implication.The mentioned products,specifications and information are for reference only,and the content will also be updated on the web at any time without additional separate notice

### Warranty statement:

The product attached to this document is guaranteed as follows:If the product is twelve (12) months from the date of purchase("Warranty Period"),under normal conditions of use due to quality defects damaged,can be repaired.Free repair;free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product.Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days).Purchased by sale the ticket date shall prevail;if the purchase date cannot be determined,the warranty period shall be 13 (13) months

If you apply for a warranty,please call the product service hotline first and execute it in the manner instructed by us.When applying for warranty,you need to provide an accurate,complete and clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:

- 1.Exceeding the validity period of the three packs;
- 2.Alterng the warranty card and product code does not match the product body;
- 3.Causes caused by misuse,abuse or improper transportation,use,maintenance or storage obstacles or damage;
- 4.Failure or damage caused by force majeure (such as earthquake,war,disaster,etc.) or accident bad;
- 5.The zipper and tower buckle are damaged due to excessive force;
- 6.Disconnection or tearing caused by excessive load;
- 7.Any damage caused by sharp objects;
- 8.Products with signs of burning of flooding;
- 9.Damage caused by unauthorized disassembly;
- 10.Aging,discoloration,abrasion,rupture and other losses that occur during the normal use of the product.
- 11.If the original identification label of the product is changed or damaged,this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee.You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products,and are only applicable in mainland China.Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

Service supervision hotline: 400-885-8808

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.