



THE FITNESS HEADPHONES



QUICK START GUIDE

GUIDE DE DÉMARRAGE RAPIDE

GUÍA DE INICIO RÁPIDO

CONNECT
RELIER
CONECTAR



FUNCTIONS LES FONCTIONS FUNCIONES

1.



3.



TAP
TAPOTER
TOCAR

HOLD
TENIR
MANTENER

2.



SOUND PROFILE & ACTIVE NOISE CANCELLATION

PROFIL SONORE ET SUPPRESSION ACTIVE DU BRUIT

PERFIL DE SONIDO Y ANULACION ACTIVA DEL RUIDO

 **TAP**
TAPOTER
TOCAR

 **HOLD**
TENIR
MANTENER

4.  [1.5s] 



BALANCED SOUND
SON ÉQUILIBRÉ
SONIDO BALANCEADO



ANC ON
ANC ACTIVÉ
ANC ENCENDIDO



BASS SOUND
SON DE BASSE
SONIDO BAJO



ANC OFF
ANC DÉSACTIVÉ
ANC DESACTIVADO



PURE SOUND
SON PUR
SONIDO PURO



AWARENESS MODE
MODE DE SENSIBILISATION
MODO DE CONCIENCIA



MULTIPOINT CONNECTION
CONNEXION MULTIPOINT
CONEXIÓN MULTIPUNTO



INTERCHANGEABLE CUSHIONS
COUSSINS INTERCHANGEABLES
COJINES INTERCAMBIABLES

FULL USER MANUAL
MANUEL UTILISATEUR COMPLET
MANUEL UTILIZADOR COMPLETO



<https://rayconglobal.com/pages/fitness-headphones-user-manual>