

# Noise Airwave Max 4 User Manual

## Specifications

1. Working voltage: DC 3.7V
2. Charging power: DC 5V/500mA
3. Speaker Frequency: 20Hz-20kHz
4. Charging time: About 2hrs
5. Playtime: 30hrs
6. BT version: 5.4
7. Support format: AAC/SBC
8. Mic Sensitivity: -42dB
9. Working range: within 15M

## Operations:

Fully charges the headphone battery for the first time using. To charge, insert the Type-C Cable into the charging port and connect to a power source. When it is charging, the indicator will turn on. After it had finished charging, the charging indicator will turn off. It takes 2 hours to charge. When the headphone is running out of battery, an alarm sound will be heard. Please charge the battery immediately.

## Power ON/OFF

1. Power on : Flip the power button to the “on” position, then the indicator will flash red and white. It is ready for wireless connection.
2. Power off: Flip the power button to the “off” position, then the indicator will turn off.

## Bluetooth guidance

Wireless mode offer the features of a hands free call function and wireless music player. Turn on the headphone, the indicator glow blue and white, turn on the wireless function on your phone, search the device “Noise Airwave Max 4” then select it to connect. After successful connection, you can play music and answer/make the phone call freely.

## Wireless Mode:

1. Answer/end a call

While the headphone connected to your cell phone , a call comes in, Quick press the Multi-function button once to answer, press again to end the call.

2. Reject the call

Hold the Multi-function button for 2 seconds and then release to reject an incoming call.

3. Control music

Short press the (+)or(-) button to obtain the volume you want to be.

Long press the (+)or(-) button to go the track you want to play with

Short press the Multi-function button, play and pause the music.

4. Voice Assistant: Double click the Multi-function button to wake up the voice assistant

5. Music mode/Game mode: Long press the multi-function button 2S to switch between music mode/game mode

### **Wired headphone function:**

To work as a wired headphone, plug the 3.5mm cable to 'line in' port and plug the other side to the computer or other music device. While in this function, Bluetooth function could not work. The volume cannot be adjusted through headphones.

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- 

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications

to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **RF Exposure Information**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.