

USER INSTRUCTION

OPERATION MANUAL

FEATURE

1. The Speaker uses an all-inclusive performance audio receiver. This receiver features multiple media capabilities to play all of your music all designed and has speaker proprietary built-in amplifier, for our woofers & horns for a complete all-around crisp sound and deep bass kick.

2. Your speaker pair features a heavy duty rechargeable battery that can play at maximum volume for up to 5-7 hours! At normal listening volume, your speaker will play up to 12 hours between charges. NO DDD batteries to buy!

3. Music Media Choices:

- Pairing enabled, connects any Pairing enabled electronic device

- Auxiliary Port, connects to any device with a 3.5mm auxiliary cable (Not Supplied)


- MemCd ports for any pre-recorded music you may already have. Think demo tapes, mixes, etc...

- Microphone Inputs. Comes with wireless microphone and TRS input jack for your wired microphone

CAUTION

1. Speaker uses a 4 OHM - 10" woofer that emits a large magnetic field to ensure no damage to your computer or television devices please keep the at least 24" away from said devices while in-play & powered on.
2. The speaker comes with a 12V/12A rechargeable battery, if being stored please recharge every 3 months to ensure no damage to the battery.
3. If battery is damaged in any way please replace with same specifications for more information please goto our website for more instructions
4. Please avoid storage in high temperatures or areas of high humidity.
5. Do not overheat or expose the to devices that are over heated
6. Place your speaker when being stored in a highly ventilated area.
7. Please use caution when unplugging & plugging in your speaker device
8. Please refrain from use of speaker while at low battery or while charging your


PANEL

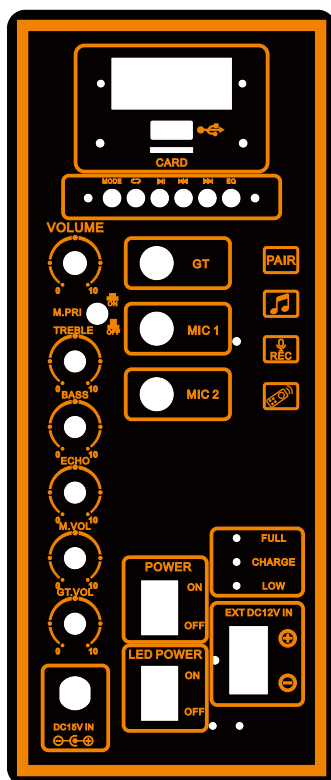

FEATURE

REMOTE CONTROL FUNCTIONS:

1. POWER BUTTON
2. PLAY/PAUSE BUTTON: Press the arrow keys to enter the desired track then press the play button, If you input the desired track and you are out of range it will continuously play the current track.
3. EQ BUTTON: The sound equalizer change mode.
MODES: Natural, Rock, Pop, Classic, Soul, Jazz, DBB, & DRS WOW.
*This only works for music played in MemCd Mode.
4. STOP BUTTON: Will stop the current track playing
5. MUTE BUTTON: Mute the current sound with this button.
6. PREVIOUS BUTTON: will play the previous track in the play list.
7. NEXT BUTTON: will skip to the next track in the play list.
8. VOLUME DECREASE BUTTON: decrease current volume.
9. VOLUME INCREASE BUTTON: increase current volume.
10. REPEAT BUTTON:
 1. Press Once for one-time repeat all
 2. Press Twice for random play
 3. Press Three Times, for repeat all
 4. Press Four Times, for repeat all
11. MemCd FUNCTION
12. ARROW BUTTONS: Left & Right to switch between or go backwards between specific tracks.

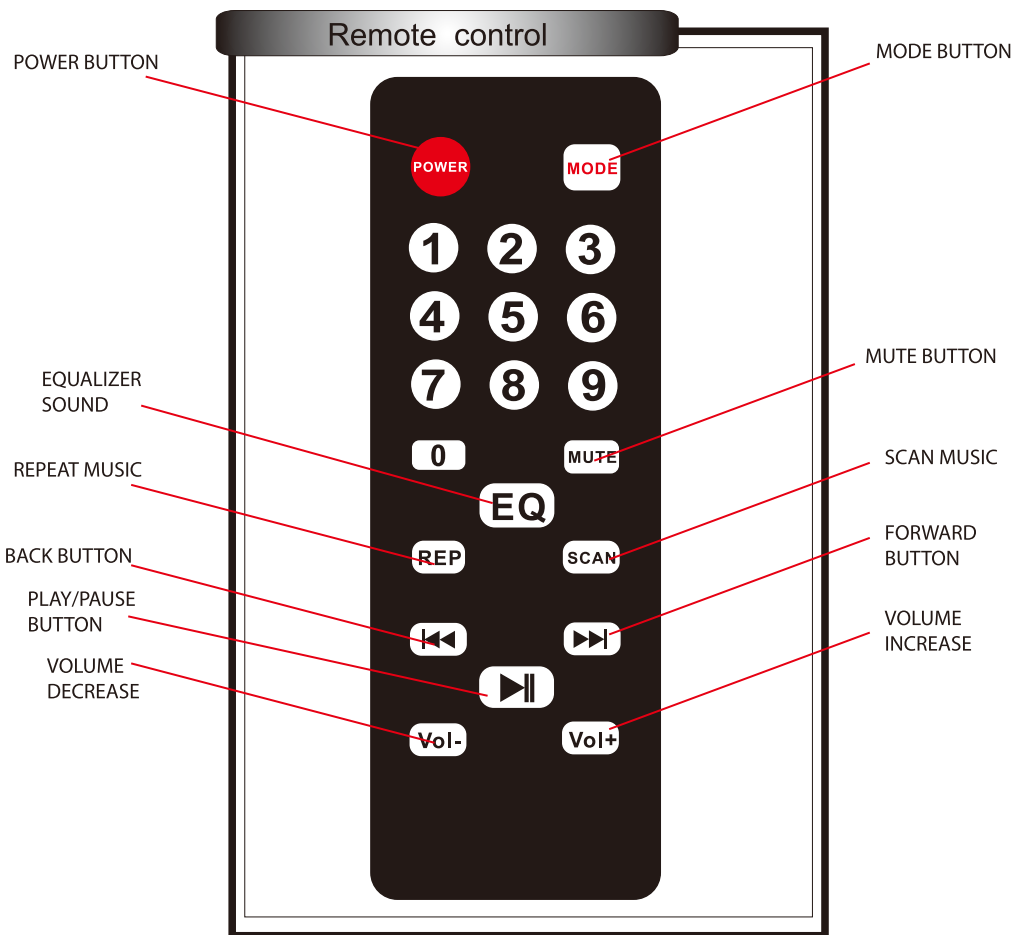

OPERATION INSTRUCTIONS

1. POWER BUTTON
2. PLAY/PAUSE BUTTON: Press the arrow keys to enter the desired track then press the play button. If you input the desired track and are out of range it will continuously play the current track.
3. EQ BUTTON: The sound equalizer change mode. MODES: Natural, Rock, Pop, Classic, Soul, Jazz, DBB, & DRS WOW.
4. STOP BUTTON: Will stop the current track playing
5. MUTE BUTTON: Mute the current sound with this button
6. PREVIOUS BUTTON: will play the previous track in the playlist
7. NEXT BUTTON: will skip to the next track in the playlist
8. VOLUME DECREASE BUTTON: decrease current volume
9. VOLUME INCREASE BUTTON: increase current volume
10. REPEAT BUTTON:
 1. Press Once for one-time repeat all
 2. Press Twice for random play
 3. Press Three Times, for repeat all
 4. Press Four Times, for repeat all
11. MemCd FUNCTION:
12. ARROW BUTTONS: Left & Right to switch between or go backwards to specific tracks.

CAUTION

TROUBLE SHOOTING:

NO SOUND OR SOUND KEEPS CUTTING IN AND OUT?

- Please Make sure your speaker is fully charged.
- Another reason for sound cutting out is you are out of range.

I CANNOT PAIR MY PAIR TO MY SPEAKER

- Please try turning the Pairing off & then on in your phone settings. Then press the Menu Button on the speaker until the pairing is set, you will hear a chime and then another when you pair to your Device.

MY LED SOUND MOTION DISPLAY ISN'T WORKING

- Please move your speaker device out of direct sunlight. The LED display is as visible wiht UV rays from the sunlight.

MY REOMOTE CONTROL IS NOT WORKING

- Please make sure you have fresh batteries installed, or make sure you are aiming directly at the side panel. We use an IR remote so you will need to point at the side panel.

THE BLUE LIGHT WILL BLINK WHILE CHARGING. When your speaker is fully charged it will be a solid blue .

MY VOLUME IS VERY LOW EVEN THOUGH VOLUME IS TURNED TO MAX:

- Try pressing and holding the >>button until it reads 30 in the red display box. This is the volume override.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.