

Flasher

Your RadioShack Flasher is built to handle the road, whether the road is the hallway in your house or sidewalk outside. Use the Flasher's transmitter to make it travel in any direction you choose. Built to 1/18 scale, it can reach speeds up to 450 feet per minute. The Flasher comes in two frequencies (27 MHz & 49 MHz) so you can race with your friend, provided you and your friend use different frequency. Check your Flasher's box to see which frequency of the truck you use.

Note:

You need six AA batteries (not supplied) to power the Flasher and one 9V battery (not supplied) to power its transmitter.

INSTALLING BATTERIES

WARNING : Dispose of old batteries promptly and properly; do not bury or burn them.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the Flasher the transmitter.
- If you will not be using the Flasher for several days, remove the batteries. Batteries can leak chemicals that can damage your truck's electronic parts.

In the Transmitter

The transmitter requires one 9V battery (not supplied) for power. For the best performance and longest playing life, we recommend RadioShack alkaline battery.

Follow these steps to install the transmitter's battery.

1. Slide ON/OFF on the transmitter to OFF
2. Slide the battery compartment cover in the direction of the arrow to remove it.
2. Put the battery in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover. Be sure it snaps in.

When the transmitter's range decreases, replace its battery.

In the Flasher

Your Flasher requires six AA alkaline batteries (not supplied) for power. For the best performance and longest playing life, we recommend RadioShack alkaline batteries.

Follow these steps to install the Flasher's batteries

1. Set ON/OFF switch on the bottom of the truck to OFF.
2. Slide OPEN/LOCK to OPEN.
3. Grasp the ribs on the battery compartment cover, then pull back & lift the cover to open it.
4. Put the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
5. Replace the battery compartment cover, then slide OPEN/LOCK to LOCK.

If your Flasher moves slowly or does not move at all, replace its batteries.

Caution:

If you will not be using the Flasher for several days, remove the batteries. Batteries can leak chemicals that can damage your truck's electronic parts.

DRIVING THE FLASHER

Warnings:

Never play with the Flasher in the street.

1. Set ON/OFF on the bottom of the Flasher to ON.
2. Set ON/OFF on the transmitter to ON.
3. Use the transmitter's control levers to control the movement and direction of the Flasher.

Left Control Lever

- Push forward to move forward
- Pull back to move backward
- Release to stop

Right Control Lever

- Push left to turn left
- Push right to turn right
- Release to go straight

Note:

The roll bar will light on when the truck goes forward, backward, turn left & right.

4. When you finish driving the Flasher, slide ON/OFF on both the truck and the transmitter to OFF.

WHEEL ALIGNMENT

If the Flasher does not drive in a straight line when you release the right control lever, adjust the

pulling to the right, or to the right if the truck is pulling to the left.

CARE

The following suggestion will help you to take care of the Flasher so you can enjoy it for years.

Do not drive the truck through puddles or mud, on a wet floor, or in sand, rain or snow. These may damage it.

Do not expose the truck or transmitter to temperature extremes, and do not store them in direct sunlight or near a heat source.

Do not leave the truck or transmitter outside overnight. Night dampness can damage their electronic circuits.

To protect the truck's mechanisms from lint and hair, do not drive the truck on carpet.

Wipe the car and transmitter's internal components can cause a malfunction and might invalidate the truck's warranty and void your FCC authorization to operate it. If your truck is not performing as it should, take it and the transmitter to your local RadioShack store for assistance.

HELPFUL HINTS

Follow these hints to get the most enjoyment from the Flasher.

Running your truck continuously for long periods cause wear and tear on the motor. To keep heat levels down, when your truck's batteries run down, let the truck cool at least 10 minutes before installing new batteries.

If the Flasher slowly and you have installed fresh batteries, check the wheel mechanism and remove any lint, thread, hair, or dust you see.

If someone uses a CB nearby, it might interfere with control of the Flasher. If this happens, move the truck and its transmitter away from the CB.

You cannot operate your Flasher near devices with transmitters that use the same frequency (27 or 49 MHz). Check the Flasher's box to see which frequency of truck you use.

THE FCC WANTS YOU TO KNOW

The Flasher or its transmitter might cause TV or radio interference even when they are operating properly. To determine whether your Flasher or its transmitter is causing the interference, release the transmitter's control levers and turn off your Flasher. If the interference goes away, your Flasher or its transmitter is causing it. Try to eliminate the interference by:

Moving your Flasher and its transmitter away from the TV or radio

Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Flasher and its transmitter.

USER-REPLACEABLE PARTS

You can order replacement parts for your car at your local RadioShack store.

THINGS YOU SHOULD KNOW

- RADIO INTERFERENCE CAN CAUSE YOUR TRUCK TO REACT STRANGELY.
- ANOTHER VEHICLE OPERATING ON THE SAME FREQUENCY CAN DISRUPT YOUR CONTROLLING THE VEHICLE.
- CB'S CELLULAR TELEPHONES, TWO WAY RADIOS, AND OTHER TRANSMITTING DEVICES, AND HIGH TENSION WIRES MAY CAUSE INTERFERENCE WITH OPERATION.
- YOUR VEHICLE CAN SOMETIMES CAUSE INTERFERENCE WITH TELEVISION OR EVEN RADIO RECEPTION. MOVE TO ANOTHER AREA IF YOU NOTICE THIS OCCURRENCE.

WARRANTY

ARTIN WARRENTS THIS PRODUCT AGAINST MANUFACTURER'S DEFECTS FOR A PERIOD OF 90DAYS FROM THE DATE OF PURCHASE. PLEASE KEEP YOUR SALES RECEIPT WITH THE PACKAGING FOR THE PERIOD AS PROOF OF PURCHASE. PLEASE CALL OUR "HOTLINE" 1-800-97-ARTIN(27846). WITHIN THIS PERIOD OF TIME (90DAYS) WE WILL REPAIR OR REPLACE WITHOUT CHARGE FOR ANY MANUFACTURING DEFECTS ONLY. THIS WARRANTY DOES NOT COVER POSTAGE AND TRANSPORTATION COSTS. ACCIDENTAL DAMAGE, MISUSE, ABUSIVE USE, CRASHING, CORROSION FROM DAMPNESS, OR ANY OTHER DAMAGE RELATED TO MISUSE ARE NOT COVERED BY THIS WARRANTY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY, FROM STATE TO STATE.

NOTE: THE MANUFACTURER SI NOT RESPONSIBLE FOR ANY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY.