

Smart Watch

User Manual

Please refer to this manual before using the product

V1.0

Contents

3 Chapter 1 Cautions

3 Chapter 2 Get Started

- 3 Charging the watch
- 3 Power On/Off
- 4 Set up and pair with phone

6Chapter 3 Main Functions

- 6 Phone
- 6 Health
- 8 Remote
- 8 Tool
- 8 Notifier
- 9 Bluetooth
- 9 App
- 9 Settings

10 Chapter 4 Common Troubleshooting

1. Cautions

 
- 1.1. The information in this document is subject to change without notice, every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendation in this document do not constitute a warranty of any kind, express or implied. It is normal that some functions may vary in certain version of software.
- 1.2. Please charge the watch for no less than 2 hours before using it.
- 1.3. When under water, please do not press the power button, and the capacitance value of the touch screen will change, so it is normal that the touch screen does not respond to your touch-based gesture.
- 1.4. With IP68 water & dust protection, your watch may be used for shallow-water activities like swimming in a pool. However, it should not be used for diving, water skiing or other activities involving high-velocity water or hot bath, submersion in tea or any other corrosive liquid. Diving under more than 3 meters water or pressing the button when under water may cause water coming into your watch, these are destructive use and you will not be able to enjoy the warranty and free maintenance.

2. Get Started

Supported smartphone Operating System: Android OS 4.4.4 or later, IOS 7.0 or later (requires iPhone 5 or later).

2.1. Charging the watch

- 2.1.1. Connect the USB port on a 5V 1A power adapter, then plug it into a power outlet.
- 2.1.2. Connect the 4-pin magnetic connector to the back of your watch, ensuring that the contacts on your watch and connector are aligned, you'll hear a chime (unless the watch is muted) and see a charging icon on the watch face.

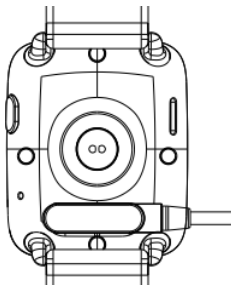


- 2.1.3. When your watch is fully charged, a fully charged battery icon will display on the watch screen. At this time, your watch will automatically detect the charging status and stop charging. Please remove the charger once the watch is fully charged.

Note: Fully charging your GV68 smart watch may take about 2 hours.

2.2. Power On/Off

 2.2.1. Power On: Press and hold the power button until the screen displays SMART WATCH

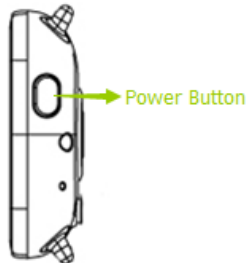

2.2.2. Power Off: Press and hold the power button until the screen displays “Power off?”, then select Yes to power off your watch.

2.3. Set up and pair with phone

Before using your watch, please download and install the Fundo Wear App to your smartphone.

 
 
 
 
For an easy and safe installation, please scan the built-in QR code in the watch with your smartphone, or open the Google Play™ or Apple App Store and search for FUNDO WEAR.



AllowFundoWear to accesscontacts, calllogs,messages,notifications and location in your smartphone.Register/Login with your mailbox (or log in with a third-party App) and keep the App running in the background.

2.3.1. Pairing with Android smartphone

a. Enable Bluetooth on your smartphone and watch, launch the Fundo Wear App, and pair your phone with your watch according to the onscreen instructions.

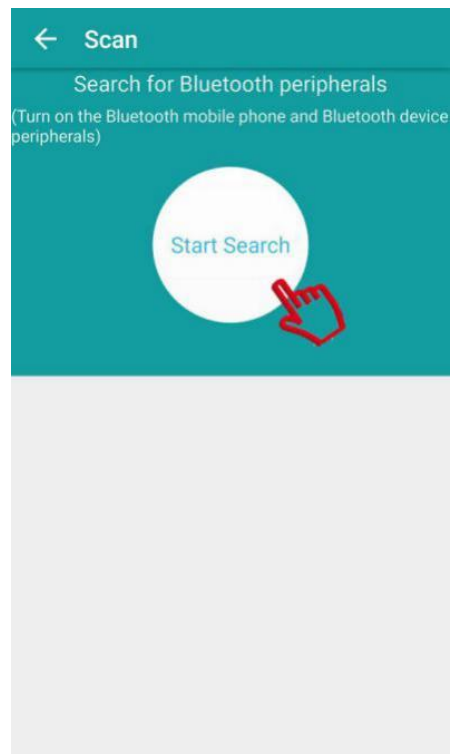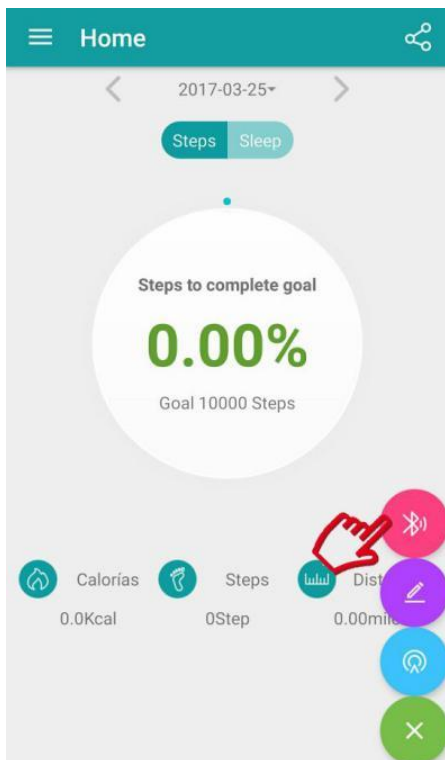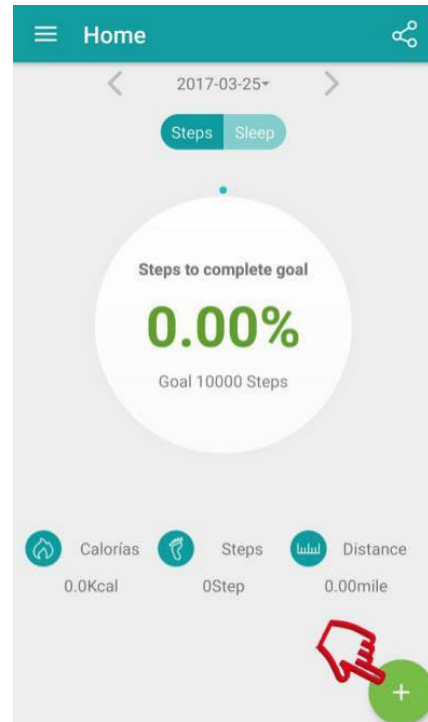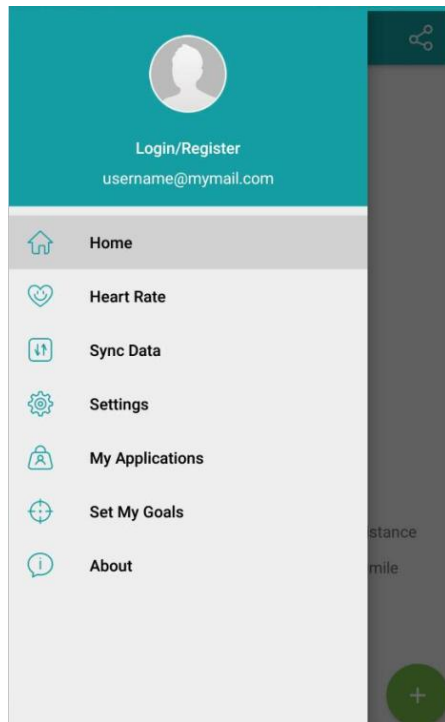


Touch  > Touch  > Start Search

The phone automatically lists the devices found, find and touch your watch name. The Bluetooth pairing request dialog box appears, touch **Pair** to start the pairing. The Bluetooth icon in your watch displays as green when paired successfully.

- b. Go to Settings > Bluetooth on your phone, there is a connected device on **PAIRED DEVICES**. Find your watch name on

 AVAILABLE DEVICES and touch to pair. When bi-directional pairing is completed, two connected devices will display on **PAIRED DEVICES** and the Bluetooth icon in your watch will display as half green and half blue.

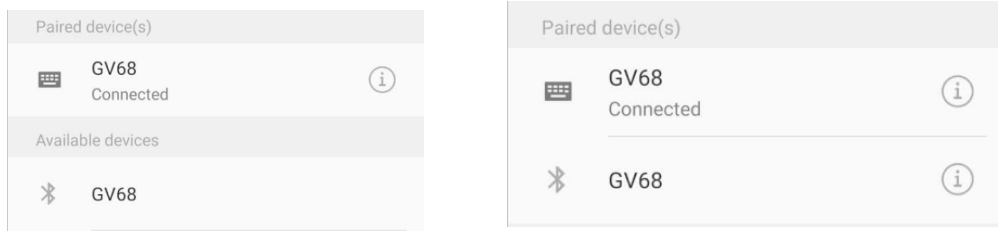


Note: On the Android Fundo Wear app, touch  icon to rename the Bluetooth name of your watch. Touch  icon, your watch will get an anti-lost alert.

2.3.2. Pairing with iPhone

- a. Enable Bluetooth on your iPhone and watch, launch the Fundo Wear App, and pair your iPhone with the watch according to the onscreen instructions.

Touch  > Touch  > Start Search

 The phone automatically lists the devices found, find and touch your watchname, the Bluetooth pairing request dialog box appears, touch Pair to start the pairing. The Bluetooth icon in your watch displays as green when paired successfully.

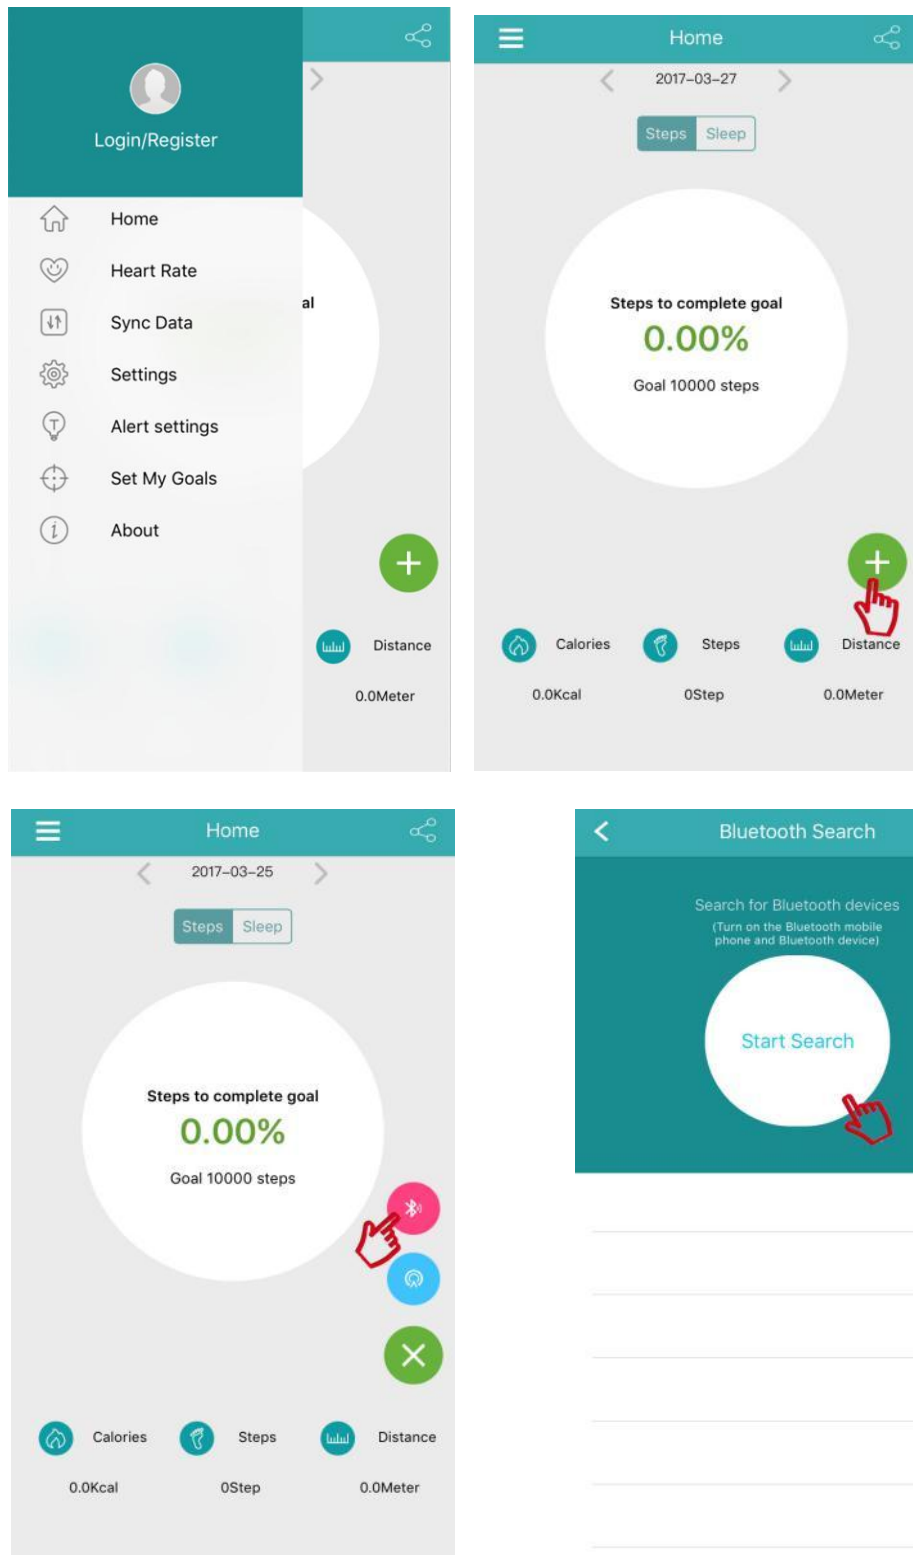

- b. Go to Settings > Bluetooth on your iPhone, there is a connected device on **MY DEVICES**. Find your watch name on **OTHER DEVICES** and touch to pair. When bi-directional pairing is completed, two connected devices will display on **MY DEVICES** and the Bluetooth icon in your watch will display as half green and half blue.

MY DEVICES	
GV68	Connected 
OTHER DEVICES 	
GV68	Connected 



3. Main Functions

- | | |
|---|---|
|  Dialer |  Drink |
|  Phonebook |  Remote Camera |
|  Call history |  BT music |
|  messaging |  anti-lost |
|  Heartrate |  Alarm |
|  Pedometer |  Calculator |
|  Sleep Monitor |  Calendar |
|  Sedentary |  Stopwatch |



3.1. Phone

- 3.1.1. Dialer: When your watch is paired with your phone, make Bluetooth calls from your watch.
- 3.1.2. Phonebook: When your watch is paired with your phone, contacts on your phone will be automatically synced to your watch.
- 3.1.3. Call history: When your watch is paired with your phone, call history on your phone will be automatically synced to your watch.
- 3.1.4. Messaging: When your watch is paired with your Android phone, messages on your phone will be automatically synced to your watch(Only for Android OS smartphone).
- 3.1.5. Answering/Rejecting calls: Swipe vertically to adjust the call volume.



3.2. Health

The goal of the **Health** feature is to sit less, move more and get a healthy life style.

3.2.1. Heart rate

On the **Health** menu, select **Heart rate**. Touch the heart icon to start measuring your heart rate.

On the heart rate measuring screen, swipe down from the top to open **Options**. You can set **Mode**, view **History** and **Help** here.

While measuring your heart rate, ensure that the watch is level and

that the heart rate sensor is in contact with your wrist. You might need to press down on the watch slightly to ensure a good contact. To achieve a reliable reading, make sure that you keep your wrist level.



Note: Heart rate reading should not be used for medical purposes.

3.2.2. Pedometer

Power on and wear your watch, it will automatically record your steps and calculate distance and calories burned. Your intraday fitness data will be cleared at 00:00.

On the fitness data display screen, swipe up from the bottom to open **Options**, you can set the **Status**, **Goal**, **Gender**, **Height**, **Weight** and view **History** here.

When your watch is paired with your phone, your fitness data will real-time sync to the Fundo Wear app in your phone, or click **Sync Data** on Fundo Wear app to sync fitness data from your watch to your phone.

❖ Reset your watch: Settings > Reset

3.2.3. Sleep Monitor

From 22:00PM to 08:00AM, sleep monitor will automatically run and monitor your sleep quality and hours.

On the sleep data display screen, swipe up from the bottom to open **Options**. You can set **Status**, view **History** and **Help** here.

When your watch is paired with your phone, click **Sync Data** on Fundo Wear app to sync sleep data from your watch to your phone.

3.2.4. Sedentary

Set a sedentary duration (at intervals of 30 minutes, 0min--300mins for options), your watch will vibrate and ring to remind you when you have been seated for a sedentary duration.

3.2.5. Drink

Turn on the drink feature, everyday from 09:00AM to 21:00PM, your watch will remind you to drink water every 1 hour until you drink a total of 2.5L water.



3.3. Remote

3.3.1. Remote Camera

When your watch is paired with your phone, open the camera of your phone, tap **Capture** on your watch to remote control taking photo.

Photo saved in your phone.

To function as a camera remote, your watch needs to be within normal Bluetooth range of your phone (about 33 feet or 10 meters).

3.3.2. BT Music

You can use your watch to control music playback if it is connected to your phone. This includes changing songs and adjusting playback volume. Music only plays on your phone.

3.3.3. Anti-lost

When your watch is paired with your phone, touch **anti-lost** on your watch, your phone will get an alert.



3.4. Tool

3.4.1. Alarm

Turn on the alarm feature, set alarm time, repeat time, alarm tone and alert type. On the last alarm display screen, swipe up from the bottom, tap **+** to add new alarm. In an alarm that you have set, firmly press to delete it.

- 3.4.2. Calculator
Enter data on the keypad to calculate.
- 3.4.3. Calendar
View the date, week, month and year.
- 3.4.4. Stopwatch
Time events with accuracy and ease.



3.5. Notifier

Pair your watch with you phone and get notifications from the apps of your phone. Notifications are displayed on your watch as soon as they arrive, you will not miss what you matter.

Note: On your phone, go to settings > Notifications to specify which apps and events generate notifications.

3.6. Bluetooth

Search and pair your watch with other mobile devices.

3.7. App

Scan the QR code to install Fundo Wear App.

3.8. Settings

3.8.1. Bluetooth Settings

On unpaired status, tap **BT settings** to turn on/off Bluetooth and set visibility. On paired status, release the connection first to turn off Bluetooth.

3.8.2. Clock

Set the clock type, the clock type that you have selected will be displayed as your watch face.

Turn on the **Time sync**, when your watch is paired with your phone, time and date will be real-time synced from your phone to your watch. Turn off the **Time sync**, you can manually set the time and timeformat.

3.8.3. Sound

Set alert type: Ring, Vibrate, Ring and Vibrate, Ring then Vibrate and Mute. Select ringtone and select notification tone here.

3.8.4. Volume

Set the volume of Multimedia, Ring, Notification tone.

- 3.8.5. Display
Set the Mainmenu style, Brightness and Screen time out.
- 3.8.6. International
Turn off **Auto Sync**, you can select a language which different from your paired phone. Turn on **Auto Sync**, the language of your watch will sync with your phone (the premise is that your watch has the language of your phone).
- 3.8.7. Motion
Turn on/off flip to mute incoming call.
Turn on/off flip to mute alarm.
Turn on/off wake-up gesture.
Turn on/off shake to answer the call.
- 3.8.8. Apps
When your watch is paired with an **Android** smartphone, tap My Applications in Fundo Wear App, you can install the Apps to your watch (only for Android operating system).
Go to Settings > Apps in your watch, tap **Uninstall all** to uninstall all applications.
- 3.8.9. Reset
Go to settings > Reset in your watch, your watch will erase all data and restart.
- 3.8.10. About
View the Device address, LE address, Connected service, LE connected status, Version and Release time here.

Notes:

Solutions of the problem that the data of pedometer/sleeping/heart rate cannot be synced to Fundo Wear:

1. Your phone can only install one Fundo Wear App.
2. Register and log in your Fundo Wear first before using it.
3. Ensure that your watch and your phone have been bi-directional paired successfully.
4. Sleep monitor and Pedometer cannot be working at the same time.
5. If the data still cannot be synced to the Fundo Wear, please restart your watch and your phone, and try the steps above again.

4. Common troubleshooting

In case there is a problem during the using of your watch, please solve it accordingly by the following ways. If the problem persists, please contact the local dealer or the designated service representative.

4.1. Cannot power the watch on

- a. Please firmly press the power button for at least 3 seconds.

b. The battery power may be too low to power on, please recharge your watch and start again.

4.2. Auto power off

The battery power is too low, please recharge your watch.

4.3. Short battery life

The battery is not full charged, please ensure an enough time to charge your battery up (No less than 2 hours).

4.4. Cannot be charged normally

a. Check whether the battery still can be used. The performance of battery will degenerate after several years use.

b. Check whether the charger is workable, you can replace a new charger and try again.

c. Check whether the watch charge interfaces and charge cable are normally connected.

4.5. Do not display caller's name

When your watch is paired with your phone, please check whether the contacts on your phone are synced to your watch, if not, release the connection. please allow the contacts synchronization while you are pairing your watch and phone again.

4.6. Bad call quality

a. our watch may not in the normal Bluetooth range of your phone(about 33 feet or 10 meters), please keep a stable Bluetooth connection to ensure a good call quality.

b. Your phone is in a weak signal, please make calls in areas with good signal.

c. The microphone of your watch may be covered by your wrist, please adjust your wrist posture when making phone call.

4.7. Cannot sync the data to Fundo Wear

a. Check if you have log in your Fundo Wear, if do not, please log in first before use.

b. Check If your watch and phone are bi-directional paired successfully, if so, the Bluetooth icon on your watch will display as half green and half blue.

Warranty card			
Client information			
Model no.		Seller	(signature)
Client name		Contact number	
Sales Tel.		Purchase Date	
Product IMEI code			
Client add.			
Sales add.			
Description			
Date	Problems	Repair	Remarks

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.