

Size: 66x45mm, 材质: 128g铜板纸, 双面印刷.
蓝色线为刀模线, 不需要印刷

QUICK START GUIDE

DYNAMIC WIRELESS HEADPHONES

CHARGING THE HEADPHONE

Charge the headphone before using it for the first time.

Plug in the cable to the micro USB port and charge for at least 2 hours.

Connect the charging cable to charging port.



QUICK START GUIDE

DYNAMIC WIRELESS HEADPHONES

PAIRING YOUR HEADPHONE

Your headphone will work best if it is within 33 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process.

Make sure the headphone is turned off before attempting to pair it with a smart phone or tablet.

QUICK START GUIDE

DYNAMIC WIRELESS HEADPHONES



Press and hold the button on the earcup to turn on the headphone and you see the light flash red and blue. This indicates that your headphone is ready to pair.



From your smart phone or tablet, find a list of nearby devices & choose "V10-998". Enter "0000" if asked. The headphone will flash a blue light when pairing is completed.

QUICK START GUIDE

DYNAMIC WIRELESS HEADPHONES

CONNECTION LOST?

- If pairing the headphone does not work, turn off the headphone and repeat the steps again in "Pairing your Headphones".

- Make sure your headphone is within range of your smart device.

- If you hear a long beep, you need to recharge your headphone. Connection may be lost due to low battery.

- When charging your headphone, only use the enclosed USB cable.

WARNING

Keep away from water and moisture. Keep away from heat sources. Do not disassemble.

FCC ID: 2ABANZVTYF98
ETI ID: 0044460



QUICK START GUIDE

DYNAMIC WIRELESS HEADPHONES

MEDIA KEY FUNCTIONS



- Press Once - Play/Pause Music
- Press Twice - Media Last Number
- Press & Hold - Answer/End Incoming Phone Call
- Press & Hold - Increase Volume
- Press & Hold - Decrease Volume
- Press Once - Previous Track
- Press Once - Next Track

QUICK START GUIDE

DYNAMIC WIRELESS HEADPHONES



- Press & Hold - Turn Device On/Off

FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

QUICK START GUIDE

DYNAMIC WIRELESS HEADPHONES

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

QUICK START GUIDE

DYNAMIC WIRELESS HEADPHONES

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.