

User Manual

Read me first

- ◆ Please read this manual before operating your mobile phone, and keep it for future reference.
- ◆ The descriptions in this manual are based on the default settings.
- ◆ Images and screenshots used in this manual may differ from the actual product.
- ◆ Available features and additional services may vary by device, software or service provider.
- ◆ Our company is not liable for performance issues caused by third-party applications.

Contents

Assembling.....	- 1 -
Unpack.....	- 1 -
Charge the battery	- 1 -
Install the SIM card.....	- 1 -
Install the memory card	- 1 -
Getting started.....	- 2 -
Turn your device on ,reboot and off	- 2 -
Switch to flight mode	- 2 -
Home screen	- 2 -
Task bar	- 2 -
Notification panel.....	- 3 -
Auto rotation.....	- 3 -
Lock & unlock the screen	- 3 -
Customize your device	- 4 -
Manage applications	- 4 -
Security	- 4 -
Set up the fingerprint.....	- 4 -
Display size	错误!未定义书签。
Data saver.....	- 5 -
Quick Switch.....	- 5 -
Reset mobile phone	- 5 -
Communication	- 5 -
Phone	- 5 -
Contacts	- 7 -
Messaging	- 8 -
Gmail	错误!未定义书签。
Play Store	- 9 -
Camera	- 10 -
Calendar	- 10 -
Alarm.....	- 11 -
Files	- 11 -
Sound Recorder.....	- 11 -
Calculator	- 11 -
Connectivity.....	- 12 -
USB Connection.....	- 12 -
Wi-Fi.....	- 12 -
Bluetooth	- 12 -
Safety Precautions.....	- 13 -
Care & Maintenance.....	- 14 -
warnings	错误!未定义书签。

Assembling

Unpack

Check your product box for the following items.

- Mobile phone
- User manual
- Adapter

You can purchase additional accessories from your local retailer.

Charge the battery

Before using the device for the first time, you must charge the battery.

- 1 . You can charge the device with a travel adapter or by connecting the device to a PC with a USB cable.
- 2 . Battery full icon is shown when finished if your device is off.

Warning : Use only original batteries and chargers. Unapproved chargers or cables can cause batteries to explode or damage your device.

Install the SIM card

You need to insert a SIM card to use the Phone function. To install the SIM card, follow the instructions below.

1. Make sure that the card's gold contacts face into the device.
2. Push the SIM card into the slot.

Install the memory card

To store additional multimedia files, you need insert a memory card.

1. Insert a memory card with the gold contacts facing downwards.
2. Push the memory card into the slot.

Notice: Our company uses approved industry standards for memory cards, but some brands may not be fully compatible with your device.

Getting started

Turn your device on ,reboot and off

To turn on your device, press and hold the power key.

To reboot your device, press and hold the power key, select “Restart” .

To turn off your device, press and hold the power key, select “**power off**”.

Switch to flight mode

To use only your device’s non-network services, switch to flight mode. Please follow the instructions below to turn on flight mode:

Tap **Settings** ➤ **Network & Internet** ➤ **Airplane mode** from application list to turn on flight mode.



















Home screen

The home screen has multiple panels. Scroll left or right to the panels on the home screen, you can view indicator icons, widgets, shortcuts to applications, and other items.

Task bar

The task bar is shown at the top of the screen. It displays commonly used option buttons,

Indicator icons

Icon	Definition	Icon	Definition
	Open WiFi available		Flight mode activated
	WiFi connected		New email
	Signal strength		New text or multimedia message
	BT connected		Call in progress
	Uploading data		Missed call
	Downloading data		Call on hold
	Connected to PC		Call diverting activated
	Alarm activated		Battery power level
	Music being played		Do't disturb

	Auto-rotate		Location
	Flashlight		

Notification panel

Pull down to open the top of the notification bar to show the 6 users commonly used shortcut switch, support click on the switch, and long press to enter the corresponding settings. If you continue to pull down the notification bar to display all the quick switch, fast switch in the lower right corner of page will display a "Edit" button, click to add / delete custom shortcut switch, or drag the sort.

Tap icon to activate or deactivate wireless connection features and other settings.

Wi-Fi : Activate or deactivate the Wi-Fi connection.

Bluetooth : Activate or deactivate the Bluetooth connection.

Do not disturb : Activate or deactivate the notification feature.

Flashlight : Activate or deactivate the Flashlight.

Auto-rotate screen : Activate or deactivate the auto rotation feature.

Battery Saver : Activate or deactivate the Battery Saver.

Mobile data : Open or close the Mobile data.

Airplane mode : Activate or deactivate the Airplane mode.

Cast : Activate or deactivate the Cast.

Auto rotation

If you rotate the device while using some features, the interface will automatically rotate as well.

To prevent the interface from rotating, open the notifications panel and select **Auto-rotate screen**, then tap it to **Off**.

Lock & unlock the screen

Slide to unlock the screen.

To lock the screen manually, press **Power** key.

Customize your device

To customize your device according to your preferences, tap **Settings** from application list or notification panel.

Manage applications

To manage the applications installed on your device, tap **Settings** ➤ **Apps & notifications**.

1. To uninstall an application, select an item and tap **UNINSTALL**, tap **OK** to confirm.
2. To stop or change the settings of an application, select an item and tap the option you need.

Security

You can protect your device and data by setting screen lock or encrypting your mobile phone.

◆ Set a screen lock

To set a screen lock, tap **Settings** ➤ **Security** ➤ **Screen lock** from application list.

- **None** : Deactivate the screen lock.
- **Swipe** : Slide to unlock the screen.
- **Pattern** : Draw a pattern to unlock. Follow the instructions to draw your lock pattern. When prompted, draw the pattern to unlock the screen.
- **PIN** : Enter a numeric PIN to unlock. When prompted, enter the PIN to unlock the screen.
- **Password** : Enter a passcode to unlock. When prompted, enter the passcode to unlock the screen.

◆ Screen time-out

Select **Settings** ➤ **Display** ➤ **Screen timeout** ➤ from application list, you can set the time before the screen times out and goes into lock mode. (you have not entered any characters or made other selections).

Set up the fingerprint

- **Fingerprint**: Want to use your fingerprint to unlock the screen or confirmation of purchase, you need to:
 - 1, set the standby screen lock mode;

2, and add your fingerprint;

Attention: In addition to using fingerprint unlock their devices, you can also set the equipment before startup requires the user to unlock pattern, to further protect the equipment

Display siz

1. You can set it **Settings** ➔ **Display** ➔ **Display size**

Data saver

1. You can set it **Settings** ➔ **Network & Internet** ➔ **Data usage** ➔ **Data saver**

Quick Switch

1. You can switch applications by simply clicking the "**Recents**" button

Reset mobile phone

You can reset system and desktop settings to their original values by the following steps:

1. Select **Settings** ➔ **System** ➔ **Advanced** ➔ **Reset options** from application list.
2. Tap **Erase all data** (factory reset).
3. Tap **Delete all data**.
4. Tap **ERASE EVERYTHING**.

The device resets to the factory default settings automatically.

Warning: Factory data reset will erase all data from your device, including your Google account, system and application data and settings, and downloaded applications.

Communication

Phone

To use calling functions, tap **Phone** from application list.

◆ Make calls

To make calls, you can use any of the three ways:

- Enter numbers by using the virtual numeric keypad on the screen
- Make a call from call log.

- Make a call from contacts.

◆ Answer a call

To answer a call, Swipe up the screen.

◆ Decline or end a call

To decline a call, Swipe down the screen.

To end a call in progress, tap the red button.

◆ Call settings

To change call settings, tap the option button at the lower Right below the dial-up interface.

1. Ringtone & Vibrate

- You can set different ringtones for incoming calls. **Settings** ➤ **Sound** ➤ Select **phone ringtone** to open a list of ringtones, select the desired ringtone, and then select **OK** to confirm.
- **Settings** ➤ **Sound** ➤ Select **Also vibrate for calls** to open the vibration function and the phone vibrates to notify you when call is coming.

2. Dial pad touch tones

Settings ➤ **sound** ➤ **Advanced** ➤ **Dial pad tones** You can open or close the Dial pad tones.

3. Voice mail

With the call divert network service, you can direct incoming calls to your voice mailbox.

- Tap **Service** to set your voice mail service provider.
- Tap **Setup** to set your voice mail number.
- Tap **Sound** to set the desired ringtone for your voice mail.
- Tick the box next to **Vibrate** and the mobile phone vibrates to notify you of a voice mail.

4. Fixed Dialling Numbers

If FDN mode is activated, your device will restrict outgoing calls, except for the numbers stored in the FDN list.

5. Quick responses

Quick response is a feature to reject the call with the predefined messages.

Tap one of the pre-written messages to be displayed when you want the call to be rejected, then tap **OK**.

6. Call forwarding

Call diverting is a network feature to send incoming calls to another number that you specify.

7. Call waiting


If **call waiting** is activated, the network notifies you of a new incoming call while you have a call in progress or you can make a new call during a call.

Contacts

Tap **Contacts** from application list to access contacts.

- **All** : List all your contacts saved in the device memory and SIM cards.
- **Favorites** : List the contacts that you have set as favorites or the contacts that you have sent message to or dialed.

◆ Add new contact

1. Access Contact number.
2. Click 
3. Enter necessary Contact name.
4. Click ✓.

◆ Edit a contact

1. To edit a contact, select and click the contact you want to change.
2. Click the edit icon at the bottom right.
3. Change necessary fields.
4. Click save.

◆ Import/Export contacts

1. Import from the SIM card

To copy the contacts from the SIM card, click the option button at the upper left and then select **Settings** ➔ **Import** ➔ **COPY CONTACTS FROM SIM card** or phone

2. Import from MEMORY card

To import contact files (in vcf format) from a memory card to your device, tap the option button at the upper left and then select **Import** ➔ **COPY CONTACTS FROM MEMORY card or Phone contact**

3. Export to MEMORY card

To export contacts from your device to a memory card, tap the option button at the upper left and then select **Export** ➔ **Export contacts** select **Export to .vcf file** ➔ select **MEMORY card** ➔ and then click **SAVE Export to MEMORY card** .

◆ Search for contacts

1. Click from contact list screen, enter the desired information, then your device shows the result.

Messaging

Learn to create and send a text or multimedia message, and view or manage messages that you have sent or received.

◆ View messages

1. Click **Messaging** from application list.
2. Click the message to view the detailed information.

◆ Create and send SMS

1. Click start chat enter **NEW MESSAGE**.
2. In **Type name or number** field, enter the recipient's mobile phone numbers manually. If you enter more than one number, separate the numbers with a comma.
3. In Text message field, enter the text of the message.
4. Click **Send icon** to send the message.

◆ Create and send MMS

Multimedia message can include pictures, sound and text.

1. Click start chat enter **NEW MESSAGE**.
2. In **Type name or number** field, enter the recipient's mobile phone numbers manually. If you enter more than one number, separate the numbers with a comma.
3. Click add icon to Select one of the items below.
 - Pictures: Insert image.
 - Capture picture: Capture new picture and insert the picture.
 - Videos: Insert video clip.
 - Capture video: Capture new video clip and insert the video clip.
 - Audio: Insert sound clip.
 - Record audio: Record sound clip and insert the sound clip.
 - Contact: Insert contacts
4. In Text message field, enter the text of the message.
5. Click **Send icon** to send the Multimedia message.

Gmail

You can retrieve new email messages from the Google Mail webmail service to your inbox. Before

you can send or receive mail on your device, you need to set up a Gmail account.

◆ **Create a Gmail account**

If you don't have a Google Account, tap **New**, then follow the on-screen instructions to create a new one.


◆ **Set up a Gmail account**

If you want to add an existing account, tap **Existing**, enter your email address and password, and then select **Next**, when you are finished setting up the email account, the email messages are downloaded to your device.

◆ **View email messages**

1. When you open the email account, the amount of unread email messages is displayed at the title bar and the unread email messages are displayed in bold.
2. To view an email message, tap it.
3. To mark an important email message, tap the star icon below the date. To cancel the mark, tap the star icon again.

◆ **Create and send an email**

1. Click .
2. In **To** field, enter the recipient's email addresses manually and separate them with a comma. Add more recipients by tapping **Cc/Bcc**.
3. To insert attachments, tap the option button at the upper right and select **Attach file**.
4. Enter the subject and the text.
5. Click **SEND** to send the email.

Play Store

Play Store allows you to easily download an abundance of applications directly to your device.

Before using the Play Store, you must have a Google Account.

1. From the application list, tap **Play Store**.
2. Sign in to your Google Account.
3. Search for and download applications as desired.
4. Follow the on-screen instructions.

Note

- All applications offered by Play Store are developed by third party. To get the

information about the developers, you can read the descriptions of each application.

- Our company is not liable for performance issues caused by third-party applications.





Camera


With the camera function, you can capture photos and take videos.

◆ Capture a photo



1. Open the application list and select **Camera**.
2. Before taking a picture, you need to know some settings.

Place two fingers on the screen and spread them apart or move fingers closer together to zoom in or zoom out.

Icon	Definition
	Settings
	Change to video mode.
	take photos
	Tap to switch between the front and rear camera lenses

3. Aim the lens at the subject and tap  to take a photo. The photo is saved automatically to the folder DCIM.
4. Select the image viewer icon at the bottom left to view the pictures.

◆ Record a video

1. Open the application list and select **Camera**. Tap  to change to video mode.
2. Tap  to start recording. The length of the video recording is restricted by the available space on your storage.
3. Tap stop icon to stop recording. The video is saved automatically to the folder DCIM.
4. After recording videos, select the image viewer icon at the bottom left to view the recorded videos.

Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.



To access the calendar, tap **Calendar** from application list.

1. To create an event, tap the option button at the low right and then select **New event**.

- Fill in the fields, and set category, date, time & an alarm.
 - After you finish, select save.
2. You can view calendar in different views, Day, Week, Month and All.
 3. To delete an entry, tap the event to open it ➔ tap the option button at the upper right and then select **Delete** ➔ select Delete.

Alarm

From application list, tap **Clock**, and then select .

1. Tap  to add alarm.
 - Tap the numeric pad to set alarm time, Tap the time to change alarm time.
2. Set repeat cycle, alarm ringtone, Vibrate ,and edit Label message, tap **OK** after finished.
3. Tap **"DISMISS"** to shut down the alarm, and tap **"SNOOZE"**, then the alarm will stop ringing for a few minutes.
4. Tap the Arrow of one alarm and click  to Delete this alarm.

Files




Many features of the device, such as images, videos, documents, received attachments and downloaded files or applications, use memory to store data. With **Files**, you can store and browse files and folders in your device, or edit, move, copy files; you can send files to compatible devices as well.

Note:

1. Some files formats are not supported depending on the software of the device.
2. Some files may not play properly depending on how they are encoded.

Sound Recorder

With Recorder, you can record a voice memo. From application list, tap **Sound Recorder**.

1. To record a voice memo, tap .
2. To stop the recording, tap .
3. To listen to a voice recording that you just recorded, tap .

Calculator

With this feature, you can use the device as a calculator. The calculator provides the basic arithmetic functions. Tap the virtual numeric and calculation keys to perform a calculation.

Connectivity

USB Connection

You can connect your device to a PC and use it as a removable disk, which allows you access the file directory.

1. If you want to transfer files from or to device, insert a memory card into the device.
2. With a USB cable, connect your device to a PC.
3. Open the notification panel, Use USB to select **Transfer files**.
4. Open the folder to view files.
5. Copy files from the PC to the device memory or memory card.

Wi-Fi

With Wi-Fi, you can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

◆ Activate the Wi-Fi feature

1. From application list, tap **Settings** ➔ **Network & Internet**, turn on the **Wi-Fi** feature.

◆ Find and connect to Wi-Fi

1. Once the Wi-Fi feature is activated, the device automatically search for available Wi-Fi connection.
2. Select a network.
3. Enter a password for the network (if necessary).
4. Select **Connect**.

Bluetooth

With bluetooth, you can share music, pictures, video, contacts with another phone. You can use bluetooth headset phone or listening to music.

◆ Activate the bluetooth feature

1. From application list, tap **Settings** ➔ **Connected devices** ➔ **Pair new device**.

◆ Scan and connect to other Bluetooth devices

1. The device automatically search for other Bluetooth devices.
2. Select a device and pair.

Safety Precautions

Read these simple guidelines before using your device. Not following them may be dangerous or illegal.

◆ Aircraft

Switch off in aircraft and follow any restrictions. Wireless devices can cause interference in aircraft.

◆ Vehicles

Never use your device while driving. Place it in a safe place.

Position your device within easy reach. Be able to access your device without removing your eyes from the road.

◆ Electronic devices

In some circumstances your device may cause interference with other devices.

◆ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

◆ Pacemakers and other medical devices

Pacemaker manufacturers recommend that a minimum separation of 8 inches be maintained between a wireless device and a pacemaker to avoid potential interference with the pacemaker.

Operation of any radio transmitting equipment, including wireless phones may interference with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions.

Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so.

◆ Operating environment

When connecting to other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

Do not place your device in the air bag deployment area.

Use the device only in its normal operating positions as explained in the product documentation.

Always switch off your device when its use is prohibited or when it may cause interference and danger.

◆ Areas with posted regulations

Switch off your device when any regulations posted in these areas instruct you to do so.

Care & Maintenance

- ◆ Use only manufacturer-approved accessories. Use general accessories may shorten the life of your device or cause device to malfunction.
- ◆ Keep your device dry. Humidity and all types of liquids may damage device parts or electronic circuits.
- ◆ Do not use or store the device in dusty, dirty areas.
- ◆ Do not store the device in hot or cold areas.
- ◆ Do not store your device near magnetic fields.
- ◆ Do not store your device with such metal objects as coins, keys and necklace.
- ◆ Do not drop your device or cause impacts to your device.

Normal Position & Warnings:

- ◆ Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.
- ◆ NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.
- ◆ - Reorient or relocate the receiving antenna.
- ◆ - Increase the separation between the equipment and receiver.
- ◆ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ◆ -Consult the dealer or an experienced radio/TV technician for help
- ◆ Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.
- ◆ Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- ◆ Ad Hoc function is supported but not able to operate on non-US frequencies.

Google, Android, Google Play and other marks are trademarks of Google LLC.

FCC CAUTIONS

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Absorption Rate (SAR) information:

This mobile phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.