SAFETY AND CARE INSTRUCTIONS

This product contains a non-replaceable rechargeable lithium-ion battery. When discarding, follow your local/state guidelines.

- Do not use abrasive cleaning solvents to clean the unit
- Disconnect the USB cable once the product is fully charged

Do not expose to heat sources or leave in a location that is likely
to get excessively hot

- Do not let the product get wet
- Do not disassemble
- Performance can be affected by the environment or when the product becomes discharged
- Interruption can be caused by obstacles between the product and the Bluetooth device, by Wi-Fi or other high frequency signals, or if the product is brought out of range of the Bluetooth device
- Charge fully before storing for a long period. Note: Lithium-ion batteries will self-discharge over time

To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long a lithium-ion battery will no longer have the ability to be recharged.

FCC STATEMENT

Any changes or modifications not expressly approved by the party responsible for compliance could void this user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures: - Reorient or relocate the receiving antenna

Increase the separation between the equipment and receiver

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

Consult the dealer or an experienced radio/TV technician for help

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

ONE YEAR LIMITED WARRANTY

Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property. For instructions about how to obtain warranty service for your product, please contact Customer Service: customerservice@xtremecables.com



Made in China for Jem Accessories. Edison, N.J. 08817 FCC ID: 2AHAS-XBE90138

FC 🗘



INTRODUCTION

Thank you for purchasing the TWS Mini Buds. These True Wireless Stereo (TWS) Bluetooth earbuds offer high-quality sound and feature an LED display for battery status. Please read this manual carefully to understand how to use and maintain your earbuds effectively.

PRODUCT DESCRIPTION


Don't let the size fool you - these TWS Mini Buds may be small, but they can play your music loud! The built-in touch controls, allow you to effortlessly manage your music and even activate your voice assistant with a few simple taps. The compact charging case is equally impressive, boasting a pocket or purse-friendly size that makes it the perfect travel companion. Toss them in your bag and enjoy uninterrupted listening wherever you go.

 
WHAT'S INSIDE


Bluetooth® Earbuds Charging Case Micro USB Charging Cable User Manual


SPECIFICATIONS • Supports: HSP, HFP, A2DP, AVECP • Wireless Distance: 33 feet • Playtime: 2 - 3 hours (at 70% volume) • Standby Time: 7-10 hours • Battery Capacity: Earbuds: 30mAh each Charging Case: 200mAh • Charging Connector: Micro USB • Charging Time: Earbuds: 1.5 hours Case: 2 hours

Charging Voltage: 5V both Sensitivity: 1061dBm

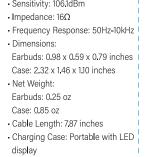



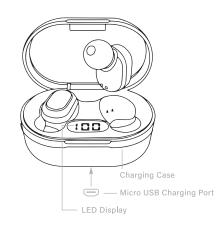

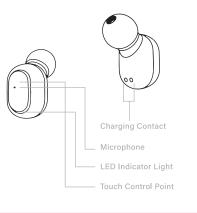

NOTE: Before first use, charge the earbuds in the case for at least 1 hour

Charging Case

Connect the included charging cable to the case and plug it into an appropriate power source. The LED display right digit will blink, indicating charging status.

Charging Earbuds

Place the earbuds in the charging case. The LED lights will show red, indicating charging status.

Power ON/OFF your Earbuds

To power on, remove the earbuds from the charging case. They will automatically turn on and pair with each other or hold either/both touch control point button for 3 seconds from power off state.

To power off, place the earbuds back in the charging case or hold either/both touch control point button for 5 seconds. NOTE: When manually powering off, both earbuds will power off. To turn on, each earbud's respective button should be held for 3 seconds individually.

Bluetooth Pairing

Ensure the earbuds are powered on

- The LEDs will flash blue to indicate it is in pairing mode
- Open the Bluetooth settings on your device and search for new devices.

Select "Xtreme XBE9-0138" from the list of available devices.Once paired, a confirmation tone will sound.

TOUCH CONTROLS

Play/Pause: Tap either earbud once.

Next Track: Hold the right earbud for 2 seconds.

Previous Track: Hold the left earbud for 2 seconds.

Volume Down: Double tap the right earbud.

Volume Up: Double tap the left earbud.

Answer/End Call: Tap either earbud once.

Reject Call: Long-press both earbuds for 2 seconds.

Redial (Callback): Triple-tap left earbud.

Activate Voice Assistant: Triple-tap right earbud.

Low Battery indicator

When the earbuds have low battery, play a low battery warning sound.

TROUBLESHOOTING

If you are unable to connect your earbuds to your Bluetooth device, please try the following steps:

- 1. Ensure your earbuds are turned on and fully charged
- 2. Make sure your Bluetooth setting is on
- 3. Please charge the earbuds and Bluetooth device
- 4. Restart your Bluetooth device

Tips

- Performance can be affected by the environment or when the headphones become discharged.
- Interruption can be caused by obstacles between the earphones and the Bluetooth device, by wi-fi or other high frequency signals, or if the earphones are brought out of range of the Bluetooth device (approx. 33 ft).
- To maintain healthy battery performance, charge the charging case (and earphones) periodically, if not in use.