


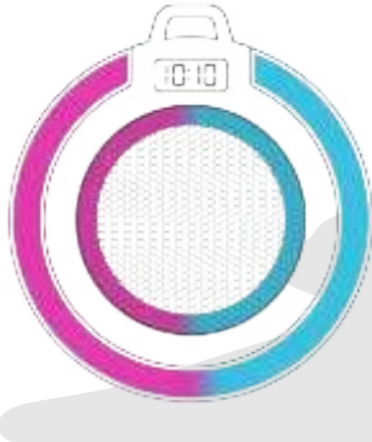





|   |  |   |  |
|---|--|---|--|
| <div><div>Speaker manual</div><div></div><div>EN</div></div> | <div><div>Kindly Reminder:</div><div><div>•Before use, please make sure that the plug cover is tightly covered to prevent falling into the water and damaging the loudspeaker.</div><div>•Put the product out of reach of children.</div><div>•Please use a soft cloth to dean the product instead of chemicals with strong irritation. Be sure to disconnect the power supply before cleaning.</div><div>•Do not puncture or disassemble the outer surface of the product in any way.</div><div>•Do not insert any metal objects into the equipment to prevent electric shock to the equipment.</div></div><div><div>Operation of Key Functions</div><div><div>•: On/off key</div><div>1. Hold down the power button for 3 seconds to turn on and off the speaker.</div><div><div>•: Next key</div><div>1. Long press to play the next song.</div><div>2. Short press to turn up the volume.</div><div><div>•: Previous key</div><div>1. Long press to play the previous song.</div><div>2. Short press to turn down the volume.</div></div></div></div></div></div> | <div><div>•: Play/pause button</div><div>1. Press to play or pause music, and press to answer or end the call.</div><div>2. Long press and hold to reject the call.</div><div>3.Press and hold for 8 seconds to clear pairing.</div><div>4.If you have two speakers, two speakers without any Bluetooth connection, you can connect the two speakers to each other, please long press the play/pause key for 3s to pair the connection between the two speakers.</div><div><div>•: Display Screen</div><div>1. Display clock</div><div>2. Press the plus and minus keys simultaneously for 3 seconds. The clock display will switch to the battery power display. After 3 seconds, it will automatically switch to the clock interface.</div><div>3. When charging when the speaker is turned off, the display lights up and displays the current battery level. The battery level is divided into four levels: 25% 50% 75% 100%.</div><div><div>•: Light Button</div><div>1. Short press the LED lamp in turn in multiple modes.</div></div><div><div>Wireless pairing</div><div>Charge the speaker for 2 hours before initial use.</div><div>1. In Bluetooth mode, hold down the power button for 3 seconds to enter pairing mode, if the has not been connected for about 5 minutes, blue will automatically close.</div><div>2. Activate wireless capabilities on media player devices and search for "M22"</div></div></div></div> | <div><div>to pair from the list.</div><div>3.If pairing fails, refer to the user manual of the media player device for wireless settings. Remove all redundant unused models from the pairing device list and start again from step 1.</div><div><div>Charging equipment</div><div>Wireless speakers are powered by built-in rechargeable lithium batteries.</div><div>1.Open the DC 5V charging port cover.</div><div>2.Connect the charging cable from the USB socket on M22 to the standard USB charging port, such as computer or USB charger.</div></div><div><div>Activation &amp; Warranty</div><div>Permanent replacement of damaged, defective, upgraded or missing items (no need to return the original).Please activate via email below within 15 days.</div><div>"amazon.seller9966@gmail.com "</div></div></div> |
|---|--|---|--|

|  |
|--|
| <div><div>FCC Statement</div><div>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:<br/>—Reorient or relocate the receiving antenna.<br/>—Increase the separation between the equipment and receiver.<br/>—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.<br/>—Consult the dealer or an experienced radio/TV technician for help.</div><div>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</div><div>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</div><div>The device has evaluated to meet general RF exposure requirement. The device can be used be in portable exposure without restriction.</div></div> |
|--|