

 
canjice

Wireless Speaker


S1 INSTRUCTION

Start

Basic operation

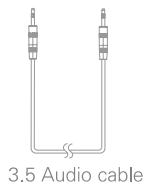


 3.5 Audio cable



USB cable

 Product overview

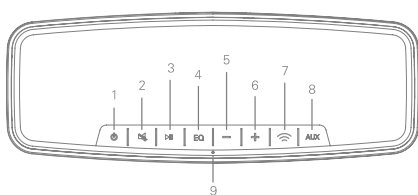

- | | | | | |
|---------------|------------|--------------|-------|------------|
| 1.Power | 2.Mute | 3.Pause/Play | 4.EQ | 5.Volume - |
| 6.Volume + | 7.Wireless | 8.AUX | 9.Mic | Track back |
| Track forward | | | | |

Basic instructions

Volume adjust

Press the or to turn volume up or down.
Once volume reach the maximum, power LED flashes three times per press.

LED indicator and voice prompts

Instruction	LED indicator	Voice prompts
Power on	Power LED stays for 3 seconds	/
Power off	Power LED stays for 3 seconds	/
Pairing	Wireless LED flashes twice per second	Pairing
Charging	Power LED stay on, Power LED turn off once fully charged	/
Stand by	Wireless LED flashes once every 5 seconds	/
Connection Successful	Wireless LED flashes once every 5 seconds	Connection successful

Power on/Power off

Power on

Press for 3 seconds to turn on the speaker.
The power LED stays on 3 seconds then turn off.

 
Power off

Press for 3 seconds to turn off the speaker.
The power LED flashes three times then turn off.

Pairing

Pairing one phone


1. Turn on speaker, press and hold the for about 3 seconds, the Wireless LED flashes twice per second.
2. Activate Bluetooth on your phone and set it to search for new devices.
3. Select 'S1'. When the pairing is successful, the Wireless LED flash Wireless LED flashes once every 5 seconds.

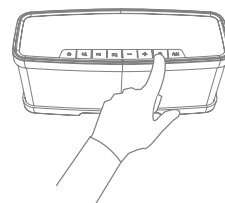

Press and hold the Wireless button for 3 seconds.

Pairing another phone

 Multipoint technology enables you to pair two phones and take a call from either. To pair second phone, follow the steps for "Pair One Phone". After pairing successfully, restart the Speaker, the Speaker connect to second phone automatically, then press and hold for about 2 seconds to enable multipoint function, the Speaker connect to first phone automatically, now the Speaker connect to the two phones.



Call

Operating instructions

Answer a call
Press the once.

Reject a call
Press and hold the for about 2 seconds.

End a call
Press and hold the for 2 seconds.

Redial the last call
Double-press the in standby mode. The mobile phone will redial the last call number.

Mute
Press the once.

Music

(Need media player support)

Music play / pause
Press to play / pause music.

Trackback / Trackforward
Press the for 2 seconds to skip track back.
Press the for 2 seconds to skip track forward.

Switch Music and Call
When a call rings during a music playing, the music automatically pauses to allow you to answer or ignore the call. Once the call is ignored or ends, the music is resumed.

Mute
Press the once to mute on/off.


EQ Switch
Press the to switch to the inside mode or outside mode.

AUX In
Use the 3.5mm audio cable connect the speaker and the equipment, press the , AUX LED stays on.

Charging

It takes about 8 hours to fully charge the speaker. The Power LED stays on while charging and turn off once fully charged.

 Note: The lifetime of the battery will be significantly reduced if the speaker is left uncharged for a long period. It's recommend that recharge your speaker at least once a month.

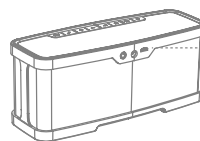

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

In order to comply with RF exposure requirements, a minimum distance of 5mm must be maintained between the antenna and all persons