

USER MANUAL

Built-in Wireless Headphones for Your Music and Calls



Precautions

- DO NOT Expose Product Liquids or Moisture
- DO NOT Attempt to Tamper with Product By Dropping, Disassembling, Opening or Scratching, etc
- DO NOT Store the Product Near Acidic or Alkaline Material
- Take Out the Headphones Before Washing
- Keep the Product Away From Fire

Features


- Could activate SIRI on iOS device for commands
- Built-in Microphone for Hands Free Talking
- Headphones are Removable for Headwear Washing
- Product is Rechargeable Through Universal Micro-USB Cable


Specifications

- Frequency: 2.402 GHz-2.480 GHz
- Transmission Range: 20M / 66Ft
- Speaker Unit: 24Ω/30mm
- Battery: 3.7V 100mAh Rechargeable Li-polymer Battery
- Standby Time: Over 260 Hours
- Play Time: 6 Hours
- Charge Time: DC 5V Approx 120 Minutes
- With Over-Current, Overcharge & Overheat Circuit Protection Design on PCB

Instructions




Pairing to Your Device

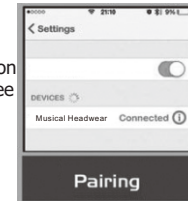To pair to your phone or device for the first time hold down the play button  located on the control panel for 4 seconds until you see a red and blue flashing light. Open your settings on your phone or device. You will see the name "Musical Headwear" in the list, select it and your device will be connected.



If a password is requested please use the default: 0000
Next time you switch on your product, it will be connected automatically.

Taking Calls

To take an incoming call press the Play/Pause  button. If you are listening to music it will automatically stop. To end a call press the Play/Pause  button. Double click the Play/Pause  button will re-dial the last number.

Playing Music

Select your music as normal from your phone or device. Use the buttons on your control panel to Play-Pause & Skip tracks.

Power On

Simply hold down the Play/Pause button  for 4 seconds to turn on.

Power Off

 
Simply hold down the Play/Pause button  for 4 seconds to turn off.

-Wireless Headphone will shut down if connection failed in 3 minutes.

-Double click button "+" to activate SIRI on ISO device


Charging Instructions

- Fully charge battery before first use.
- Use the supplied USB cable, simply plug into the charging port of the headwear.
- Now plug the other end of the USB cable into your PC or laptop.
- During charging, the LED Status Light will turn to be red on the control panel.
- When charging is completed, the red light will change to blue.
- It will take about two hours to get the battery full charged.



USB Charging Port

Buttons Interface

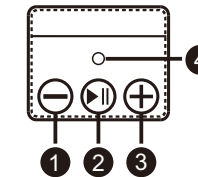

- 1 Volume Down (long press) / Previous Song (short press)
- 2 Play/Pause/Answer/Hang Off/Redial Power On/Power Off (long press)
Play/Pause (short press)
Answer/Hang Off (short press)
Redial (double click)
- 3 Volume Up (long press) / Next Song (short press)
- 4 LED Status Light

-Long press Play/Pause button for 2 seconds to reject a incoming call.

Warnings

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.