

REMOTE CONTROL PROGRAMMING INSTRUCTIONS

GD-R19

INSTRUCTIONS TO PROGRAM A REMOTE:

The item that you purchased is advertised for GREEN LEARN BUTTON openers only.

1. Press and release the GREEN learn button on the back of the motor unit. The light will illuminate for 30 seconds. This indicates the unit is in programming mode.
2. Within 15 seconds press the button you wish to program on the remote control. (Multi button remotes can control multiple door openers.)
3. You will hear an audible click and/or the light on the motor unit will turn off indicating the remote successful programming.
4. ***Repeat steps 1-3 for any additional remotes you wish to program. Wait 60 seconds before programming another remote control.
5. Step away from all moving parts and doors and test the function.

WARNING

In order to prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- Keep remote controls out of the reach of children.
- Only use the remote control when the gate/garage door can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- Keep the gate/garage door in sight until it is completely closed. Do not allow anyone to cross paths with the gate/garage door while moving or operating the remote control.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.