



Waterproof Wireless Speaker

Model:IC-BTS11

User Manual

Description

Built-in with an ultra-high battery capacity, this iClever IC-BTS11 Bluetooth Speaker is capable of delivering a long-lasting entertainment experience for music playback and phone conversion with impeccable sound quality. Owing to dual mode connection(Wireless Bluetooth and Aux-in connection), the premium Bluetooth speaker is amazingly fashionable to play anywhere conveniently.

Specifications

Speaker	2 x 5W
Working mode	Bluetooth / Aux-in mode
Bluetooth version	V4.0
Transmission distance	10m
Charging interface	Micro USB, 5V/1A input
Charging time	3 hours
Working time	8 hours
Dimension	100 x 100 x 42 mm
Weight	0.324 kg

Packing List

- 1x IC-BTS11 Bluetooth Speaker
- 1x User Manual
- 1 x Warranty Card

Usage Guide

Recharging

When the battery is in low capacity, there will be a voice beep. Please charge the Bluetooth speaker in time.

Connect this Bluetooth speaker to the USB port of your computer via provided USB charging cable for recharging, or recharge it by DC 5V/1A power adapter.

- Recharging: red indicator lights on
- Fully charged: red indicator lights off

Power on/off

- Slide the Power button to ON state to power it on, LED indicator lights on and voice beeps.
- Slide the Power button to OFF state to turn it off and voice beeps.

Note:

- In order to save power, the device will auto power off if no devices are connected within 5 minutes.
- In order to save power, the device will auto power off if no operation within 10 minutes.

Connect and Pair

Step 1: Slide the Power button to ON state to power on the speaker, blue indicator quickly flashes to automatically enter pairing process with voice prompt.

Step 2: Activate your Bluetooth device and search for other Bluetooth devices.

Step 3: Select "IC-BTS11" from the list of Bluetooth devices shown for connection(if needed, input password 0000).

Note:

- After successful pairing, the speaker will make a prompt sound and blue LED indicator light will be constantly on.
- It will automatically connect with the mobile phone or other devices that already paired last time when you turn it on.
- The Bluetooth speaker will automatically power off if no devices being connected within 5 minutes.

Function	Operation
Music play/pause	Short press ► button
Volume decrease/increase	Long press ◀◀ / ▶▶ button to decrease / increase volume
Previous/next track	Short press ◀◀/▶▶ button to the previous / next song(invalid in Aux-in mode)
Answer/hang up a call	Short press ► button once
Mute/Cancel mute	Double short press ► button
Reject a call	Long press ► button

Note:

If there is a new coming call when you're on a conversation, you can do the following steps to control.

- Short press MFB button to hold the current conversation and answer the new phone call. Short press MFB button again to get back to the previous conversation.
- Press and hold MFB button for 3s to reject the new phone call.

Indicator Instruction

LED Indicator	Status
Blue indicator flashes	Bluetooth Pairing mode
Blue indicator remains steadily on	Already paired with device
Green indicator lights on	Under Aux-in mode
Low battery tips	Low battery power
Red indicator lights on	Charging
Red indicator lights off	Completely charged

Aux-in Mode

This Wireless Speaker support automatic switch between Bluetooth mode and Aux-in mode, that's to say, it can auto enter Aux-in mode if the 3.5mm Audio Cable is inserted.

Note: Plug out the audio cable to save energy if you won't use Aux-in working mode.

FAQs and Solutions

1. What should be done if the Bluetooth speaker cannot be turned on?

Make sure the Bluetooth speaker has enough battery capacity.

2. What should be done if the Bluetooth speaker cannot pair with Bluetooth device?

- Make sure it is in pairing mode.
- The Bluetooth device may be out of range, move it closer and try again.

3. What should be done if there is no audio out from the speaker?

- Make sure it is not muted or very low.
- Make sure the Bluetooth device is playing audio files and make the volume much higher.
- Your Bluetooth device may be out of range, move it closer and try again.

4. What should be done if there is poor sound quality?

- The Bluetooth device may be out of range, move it closer and try again.
- Keep your Bluetooth device and this speaker away from any device that generates electromagnetic interference, such as another Bluetooth device, cordless phone, microwave oven or wireless router.
- Make sure the music file is in good quality.

5. What should be done if there is no audio from AUX source?

- Make sure the audio cable is correctly inserted.
- Make sure the connected device is on and playing.
- Increase the volume on the Bluetooth device and speaker.

Warranty

This iClever IC-BTS 11 Wireless Speaker has a full 12-month warranty against manufacturing defects starting from the purchase date.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.