 


Quick Start Guide

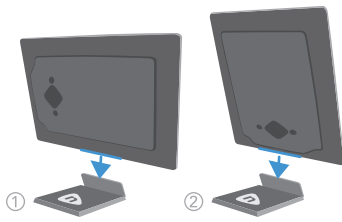

 
1. Assemble frame & stand

- ▶ Slide stand into ① stand slot (Horizontal) OR ② stand slot (Vertical).
- ▶ **IMPORTANT:** Place the frame next to a computer for the set up process.



2. Plug in power adaptor to frame and power source

- ▶ Press the power button on the back of the frame to turn on.

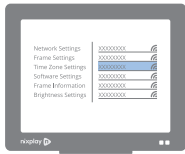

3. Connect to WiFi network

- ▶ Select the WiFi network you wish to connect to and press OK by using the remote or the 4-way key on the back of the frame. If required, please enter the WiFi password and select **CONNECT**.
- ▶ **Note:** An automatic update may take place. Please wait a few minutes and do not switch off your frame during this process.



 
4. Pair to Cloud Account

- ▶ On your frame: A 16 digit serial number will be displayed. You will need this to create a Cloud Account and pair your frame on www.nixplay.com.
- ▶ On your computer: Please go to www.nixplay.com and click the **ACTIVATE FRAME** button to create your Cloud Account.
- ▶ **IMPORTANT:** Please ensure that you're using the latest browser version.


For warranty information, please visit our website: www.nixplay.com
If you need help, please contact our support team at: <http://support.nixplay.com>



Get to know your frame

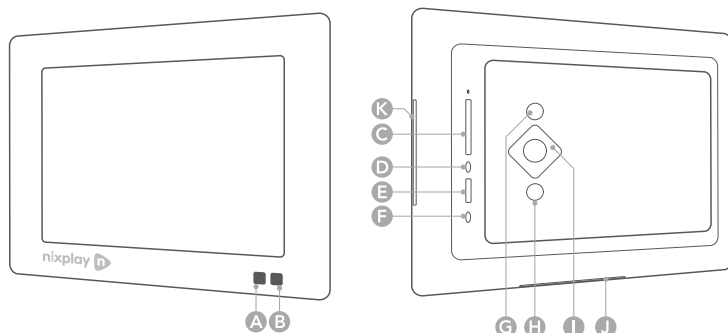

Remote

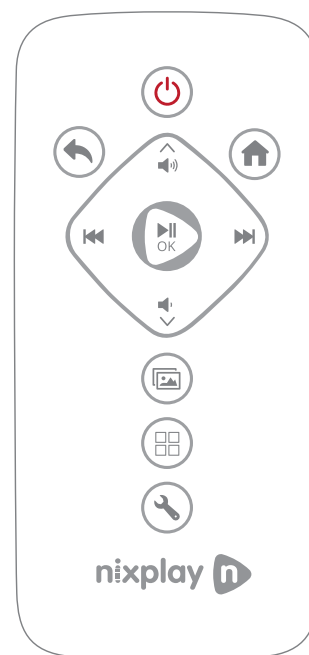 

Basic actions & procedures



Press & Hold for approximately 3 secs
to power on the frame

Function

- | | |
|---|---|
| <p>A Motion Sensor
Senses movement and turns the Cloud Frame ON and OFF</p> <p>B IR Sensor for Remote
Receives signals from the remote</p> <p>C SD/SDHC Card Slot
Insert your memory card and view your photos and videos</p> <p>D Headphone/Speaker Port
Connect your headphones or speakers</p> <p>E USB Port
Connect your USB flash drive and view your photos and videos</p> | <p>F Power Adapter DC-in (5V) -
Plug-in power cable for power</p> <p>G ON/OFF Button
Press and hold to power on the Cloud Frame</p> <p>H Menu Button
This will take you to the main menu</p> <p>I 4-way Menu Control & PLAY Button
Helps you navigate and select</p> <p>J Stand Slot (Horizontal)
For landscape display</p> <p>K Stand Slot (Vertical)
For portrait display</p> |
|---|---|

- | | |
|---|---|
| <p></p> <p></p> <p></p> <p></p> <p></p> <p></p> <p></p> <p></p> <p></p> <p></p> | <p>Turns the Cloud Frame on and off</p> <p>Goes directly to the main menu</p> <p>Go back one step from where you are in the menu</p> <p>Navigate through menus and content</p> <p>Adjust the volume when watching a video</p> <p>Control photo or video playback on the Cloud Frame</p> <p>Confirm changes in the Cloud Frame menu</p> <p>Starts the playlist (whenever you are in the Cloud Frame's settings or menu)</p> <p>Configure the function of this button on nixplay.com</p> <p>Change the Settings of the Cloud Frame</p> |
|---|---|



A Friendly FCC Compliance Notification.

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 this device may not cause harmful interference, and
- 2 this device must accept any interference received, including interference that may cause undesired operation.Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

USB port only supports USB stick or mouse. It cannot be used for charging or other purposes.

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna(s) or transmitter.

End-users and installers must be provided with antenna(s) installation instructions and transmitter operating conditions for satisfying RF exposure compliance.



A Friendly IC Compliance Notification.

Warning:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1 this device may not cause interference, and
- 2 this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1 l'appareil ne doit pas produire de brouillage, et
- 2 l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en \ compromettre le fonctionnement.

This Class **B** digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.